

LIELONGREN

Dual Alarm Digital Clock

Model: LLR010B

KEY FEATURES

1. 7-inch Large Display with Full Range Brightness Dimmer
2. Dual Smart Alarm with Adjustable Alarm Duration & Snooze Duration
3. Dual Alarm Mode with Loud Buzzer and Bed Shaker
4. Dual USB Charger with Standard DC 5V/1A Output
5. Powered by USB Adapter with Battery Backup
6. Keeping Accurate Time with Under 30 Seconds per Month of Time Error.

DEFAULT SETTINGS

Time Format: 24 hour

Time: 12:00

Date: 2018/1/1

Alarm Duration: 10 mins (Adjustable)

Snooze Duration: 9 mins (Adjustable)

Alarm Mode: Buzzer

Alarm Volume: Medium (MED)

INSTALLATION




1. Plug the AC/DC adaptor to an AC household outlet, and plug the DC jack to the back of the unit. Then your clock is ready to work for you.
2. Insert 2xAA batteries (not included) into the battery compartment to provide backup power to the clock in the event of a temporary power interruption.

WARM TIPS

1. Long press “▲” + “Alarm2” button for 3 seconds to enter Alarm-Test-Mode, then you can set the switcher on the right to select your favorite buzzer volume and vibrating amplitude.
2. In setting mode, if no operation within 10 seconds, the clock will automatically

save the current settings and return to time mode.

3. If AC power is interrupted, press **SNOOZE** button, the time will display for 5 seconds for emergency situations.

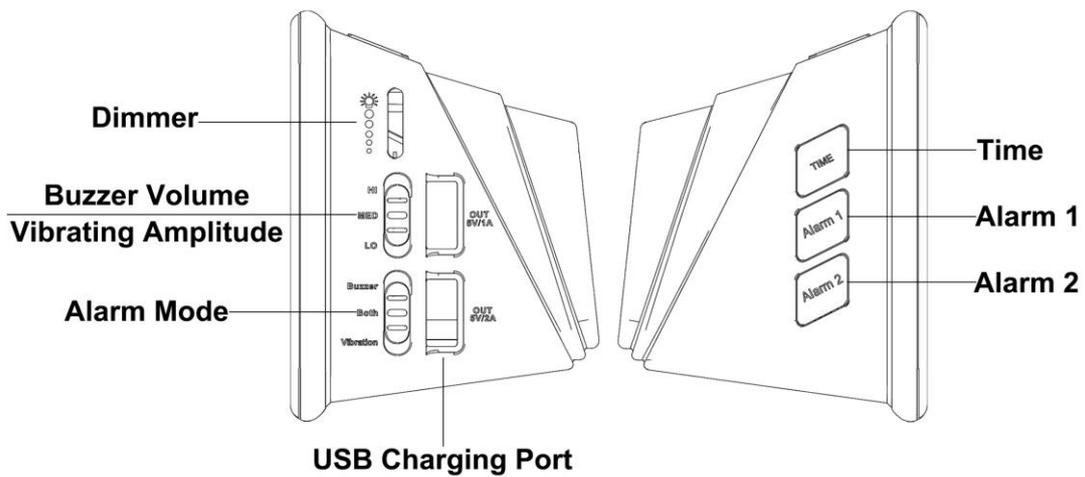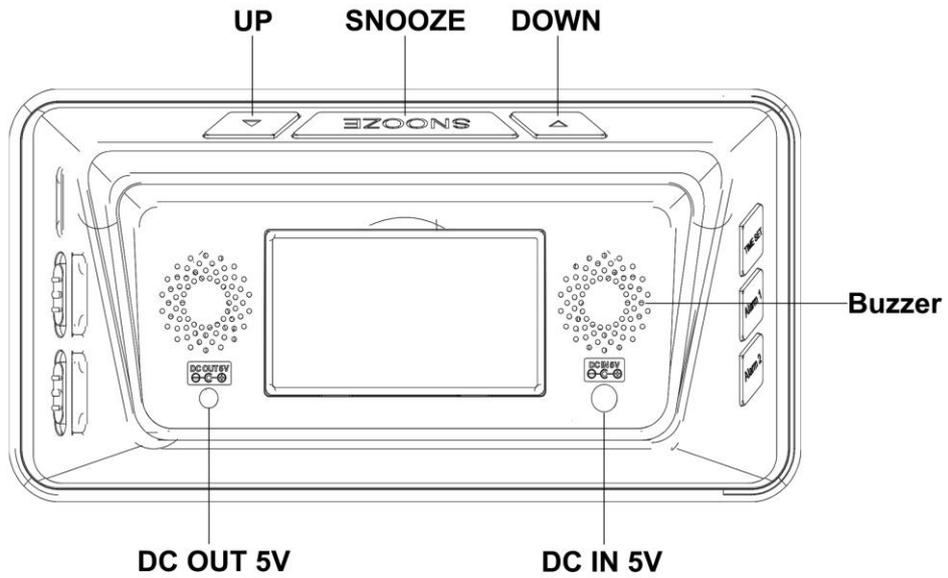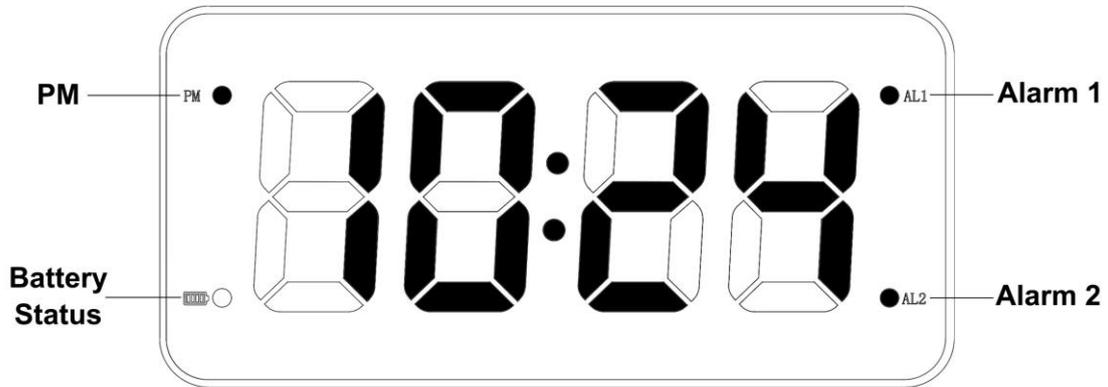

SETTING TIME

1. In time mode, press and hold the **TIME** button to enter time setting mode, the **hour** digits flash. Press ▲ or ▼ to set the current hour (hold to advance rapidly).
2. Press **TIME** button again, the **minute** digits flash. Press ▲ or ▼ to set minute (hold to advance rapidly).
3. Press **TIME** button again, the **12/24Hr** digits flash. Press ▲ or ▼ to set 12/24Hr time format.
4. Press **TIME** button again, the **year** digits flash. Press ▲ or ▼ to set year (hold to advance rapidly).
5. Press **TIME** button again, the **month** digits flash. Press ▲ or ▼ to set month (hold to advance rapidly).
6. Press **TIME** button again, the **day** digits flash. Press ▲ or ▼ to set day (hold to advance rapidly).
7. Press **TIME** button again, exit time setting mode.

SWITCHING ALARM ON/OFF

In time mode, press **Alarm-1 (Alarm-2)** button to switch on or off the alarm, the **AL1 (AL2)** indicator will be on or off correspondingly.

SETTING ALARMS

1. In time mode, press and hold **Alarm-1 (Alarm-2)** button to enter alarm setting mode, the hour digits flash. Press ▲ or ▼ to set the current hour (hold to advance rapidly).
2. Press **Alarm-1 (Alarm-2)** button again, the minute digits flash. Press ▲ or ▼ to set the current minute (hold to advance rapidly).
3. Press **Alarm-1 (Alarm-2)** button again, the alarm day digits flash. Press ▲ or ▼ to set the current alarm day (hold to advance rapidly).
 - 1-1: Single day only
 - 1-5: Workdays only
 - 6-7: Weekend only
 - 1-7: Every day
4. Press **Alarm-1 (Alarm-2)** button again, the alarm duration digits flash. Press ▲ or ▼ to set the current alarm duration (hold to advance rapidly).

✕Alarm Duration: Default 10 minutes (1-30 minutes adjustable)

5. Press **Alarm-1 (Alarm-2)** button again, exit alarm setting mode.

SETTING SNOOZE DURATION

1. In time mode, press and hold **SNOOZE** button to enter snooze duration setting mode and the digits flash. Press ▲ or ▼ to set the current duration (hold to advance rapidly).

✕Snooze duration: Default 9 minutes (1-60 minutes adjustable)

2. Press **SNOOZE** button again, exit snooze duration setting mode.

STOPPING ALARM WHEN IT GOES OFF

When Alarm 1 (Alarm 2) is sounding, the related **AL1 (AL2)** indicator flash. Press any buttons (except **SNOOZE** button) to stop and reset the alarm to go off the next day.

ACTIVATING SNOOZE MODE WHEN ALARM GOES OFF

When Alarm 1 (Alarm 2) is sounding, press **SNOOZE** button, the alarm will suspend and go off again after the set snooze duration.

SETTING ALARM MODE

Buzzer: Wake by Buzzer

Vibration: Wake by Vibrator

Both: Wake by Buzzer and Vibrator

SETTING BRIGHTNESS

Adjust to your favorite brightness level by turning the knob at the right side.

KEY SPECIFICATION

Adapter Input: AC 100-240v, 50/60Hz

Adapter Output: DC 5V/2A

USB 1&2 Output: DC 5V/1A (Total DC 5V/2A)

Power Cord Length: 5ft

Vibrator Cord Length: 6ft

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which may be caused by electro- static discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock will be reset to default settings and you need to set it again.

CARE OF YOUR PRODUCT

1. Place your clock on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your units on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzene, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

PACKAGE LIST

- 1 x Alarm Clock
- 1 x Bed Shaker
- 1 x Power Adapter
- 1 x Power Cord
- 1 x User Manual
- 1 x Warranty Card

WARRANTY

100% Satisfaction Guarantee. 30 days Return & Refund policy WITHOUT hassle. Get full refund quickly or free replacement if you aren't completely satisfied. Free lifetime technical support and 6 months manufacturer's warranty.

LIELONGREN Customer Service Team

Email: cst4lielongren@sina.com