


amazonbasics

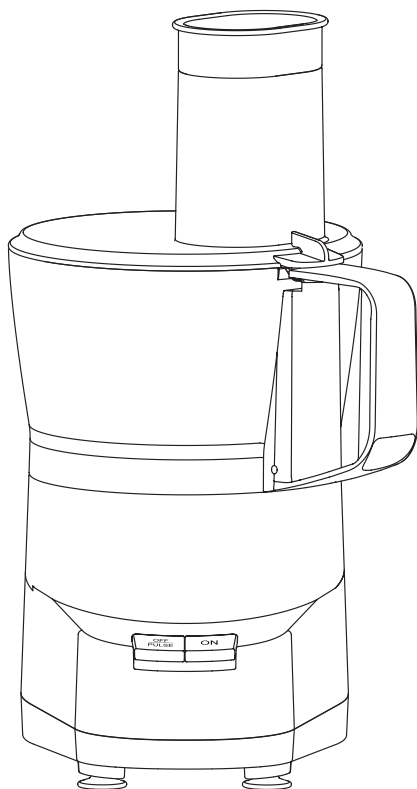

4-Cup Food Processor

Procesador de Alimentos, 4 Tazas

Robot Culinaire de 4 Tasses

B07V7Q255G, B07V7NM3K2, B07V4FDBT3

English	3
Español	14
Français	25



IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

CAUTION

Risk of electric shock! Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.


CAUTION

Risk of injury! Never insert any body parts (e.g. fingers) or kitchen utensils into the feeding chute. Always use the pusher.

- Read and save all instructions.
- To protect against risk of electrical shock do not put in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surface, including the stove.



- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
- Blades are sharp. Handle carefully. Store out of reach of children.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- Be certain cover is securely locked in place before operating appliance.
- Never feed food by hand. Always use food pusher.
- Do not attempt to defeat the cover interlock mechanism.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- This appliance should not be used by children.
- Do not use your food processor if any part is broken.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Never use appliance for a longer period or with a larger amount of ingredients other than that recommended by appliance manufacturer.
- The maximum rating of this unit is based on using the chopping/mixing blade. Using the slicing/shredding disc may draw significantly less power.
- Do not fill the bowl above the marked maximum fill line (or rated capacity) to avoid risk of injury due to damage to the cover or bowl.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Please care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

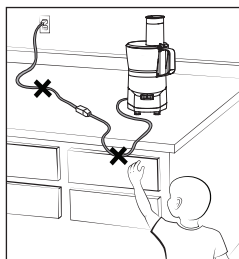

DO NOT DRAPE CORD!


**KEEP AWAY FROM
CHILDREN!**

SAVE THESE INSTRUCTIONS

Parts Description

- | | |
|---------------------------------|----------------------------------|
| A Food Pusher | H Fritter cutter |
| B Lid with feeding chute | I Slice cutter |
| C Bowl | J Cutting disk |
| D Motor clutch | K Blades |
| E Motor unit | L Shaft |
| F Power cord with plug | M ON button |
| G Cord compartment | N OFF/PULSE button |



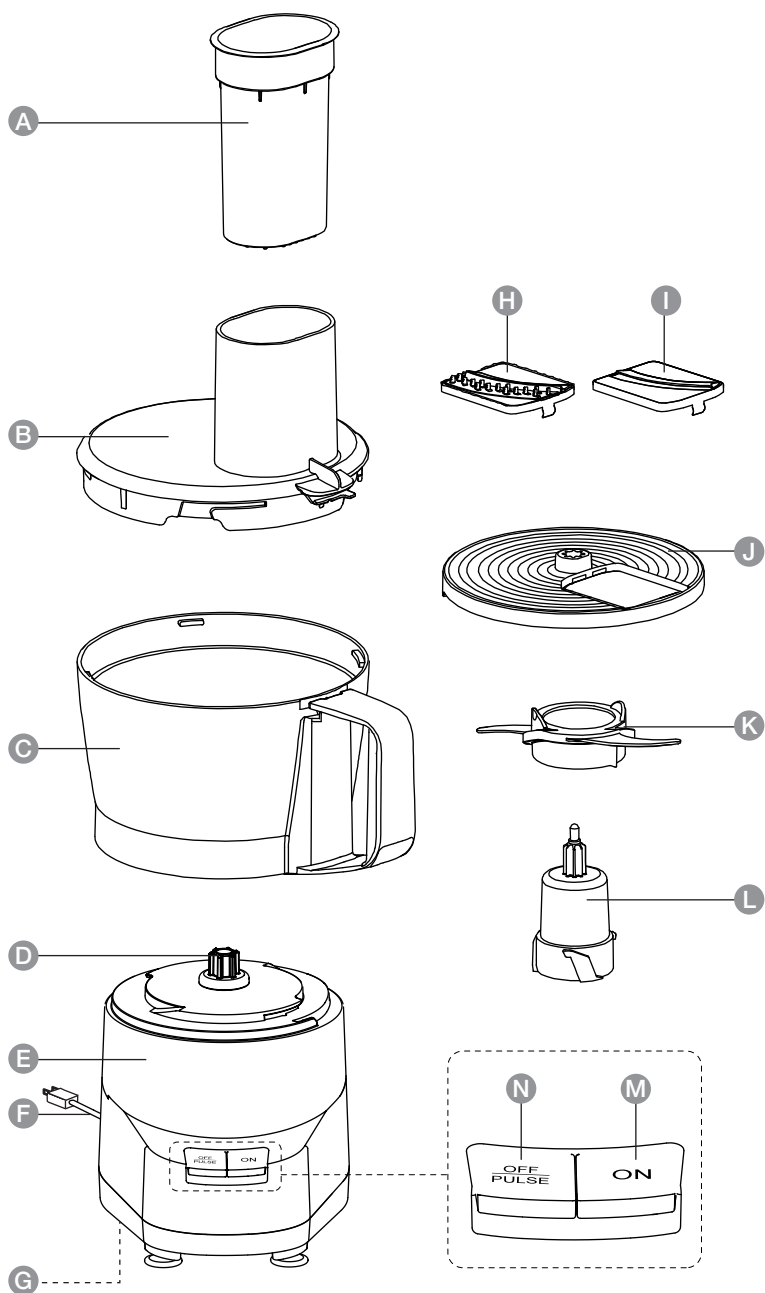



Intended Use

- This product is intended for food processing and blending.
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use


- Check the product for transport damages.
- Remove all packing materials.
- Clean the product before first use.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.



⚠ DANGER Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.


Assembly

Bowl

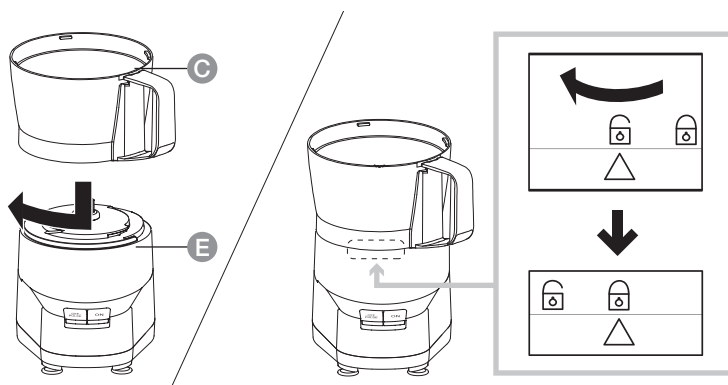

- Place the bowl (C) on the motor unit (E).
- Turn the bowl (C) in a clockwise direction until it locks in place.


Blades (option A)

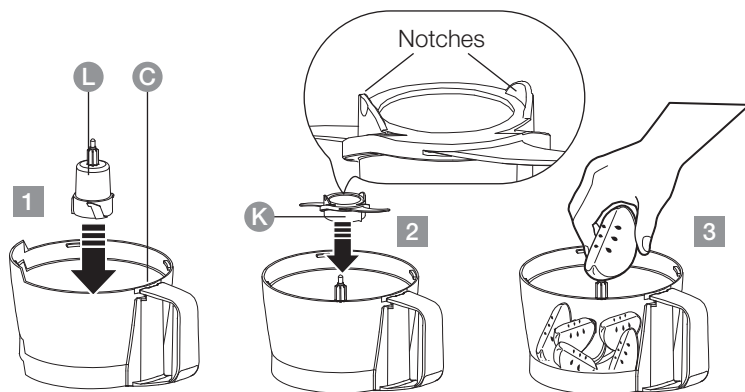

- Place the shaft (L) in the middle of the bowl (C).
- Place the blades (K) on the shaft (L). The notches must face upwards.
- Fill in the food.

NOTICE To remove the blades (K) first pull out the shaft (L). Then carefully divide both parts.


Cutting disk (option B)

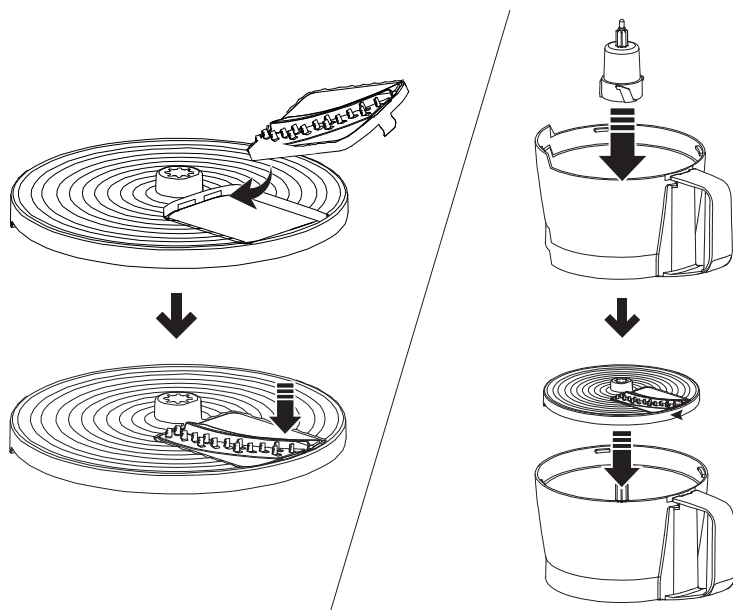

- Carefully slide the cutter (H/I) in the inner edge of the cutting disk (J).
- Press the cutter (H/I) down until it locks in place.
- Place the shaft (L) in the middle of the bowl (C).
- Place the cutting disk (J) on the shaft (L).

NOTICE To remove the cutter (H/I) from the cutting disk (J) carefully push it out from the bottom.

Lid

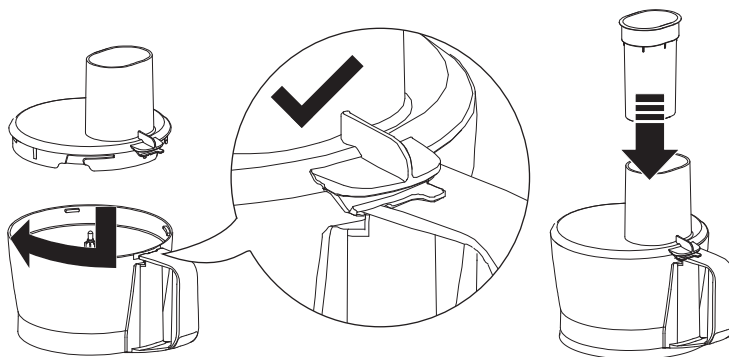

- Place the lid (B) on the bowl (C).
- Turn the lid (B) in a clockwise direction until it locks in place.
- **Option A:** Close the feeding chute with the pusher (A).
- **Option B:** Put the food into the feeding chute. Use the pusher to move it to the cutting disk (J).

Operation

Place the motor unit (A) on a stable and level surface.

Switching on/off

NOTICE The product cannot be switched on if the bowl (C) and the lid (B) are not placed and locked properly.

- Connect the plug (F) to a suitable socket outlet.
- To switch the product on, press the **ON** (M) button.
- To switch the product off, press the **OFF/PULSE** (N) button.
- To use the pulse function, press and hold the **OFF/PULSE** (N) button. Release to switch off.



NOTICE

The pulse mode is intended to pulverize, finely chop and dice food at short controlled bursts.

NOTICE

The maximum continuous operating time for:

- The blades (K) (option A): 60 seconds.
- The cutting disc (J) (option B): 30 seconds.

After reaching the maximum operation time, keep a rest time for at least 2 minutes.



Tips

Chopping blades (Option A)

- Before use, first cut food such as meat, bread and vegetables into cubes approximately 0.7, 1.2 or 1.6" (2, 3, or 4 cm) large and then put them into the mixing bowl (C).
- Biscuits should be broken into pieces and added down the feeding chute while the product is running.
- When making a pastry, use fat ingredients straight from the fridge already cut into 0.7, 1.2 or 1.6" (2, 3, or 4 cm) large cubes.
- Store vegetables with high water content in the refrigerator prior to processing. Room-temperature vegetables are less firm and do not perform as well.
- Do not over-process food.

Recommended food volume			
Food		Max. amount	Operation time
	Onion	16 oz (500 g)	5 sec
	Meat	16 oz (500 g)	5 sec
	Nuts	8 oz (250 g)	60 sec
	Chocolate	8 oz (250 g)	45 sec
	Salad / herbs	1.5 oz (50 g)	30 sec

Slicing (Option B)

- Peel or core food and cut them into pieces that fit into the feeding chute on the lid (B).
- Do not overfill. Add small pieces of food at a time.
- Use the pusher (A) to push the food onto the blades. Never use bare hands or other tools.
- Apply only as much pressure on the pusher as needed to feed food onto the blades. Let food pass through slowly and steadily using the pusher (A).

Recommended food volume			
Food		Max. amount	Operation time
 Carrot		16 oz (500 g)	30 sec
 Cucumber		2 pieces	30 sec
 Potato		16 oz (500 g)	30 sec
 Onion		10 oz (300 g)	30 sec
 Cheese		8 oz (250 g)	30 sec

- Cheese should be processed immediately after being removed from the refrigerator. Soft cheese like mozzarella must be placed in the freezer for 30 minutes prior to processing to ensure it is firm enough for shredding.

NOTICE

After processing the food, keep a rest time for at least 2 minutes.

Cleaning and Maintenance



⚠ WARNING Risk of electric shock! To prevent electric shock, unplug the product before cleaning.

⚠ WARNING Risk of electric shock! During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

⚠ CAUTION Risk of cuts! Blades are sharp. Take caution when cleaning the blades.



Cleaning

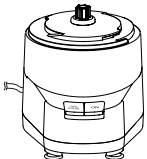			
	✗	✗	✓
     	✓	✗	✓

Storage

- Wind the power cord (F) onto cord compartment (G) on the bottom of the motor unit (E).
- Store the product in its original packaging in a dry area. Keep away from children and pets.

Maintenance

- Any other servicing than mentioned in this manual should be performed by an authorized service representative.

Troubleshooting

Problem	Solution
The product does not switch on.	- Check if the power plug is connected to the socket outlet. Check if the socket outlet works. - The mechanical interlock on the motor unit (E) is triggered only when the bowl (C) and the lid (B) are locked in place. Repeat the assembly.
Food is not sliced or shredded uniformly.	Packing too much food in the food chute or pushing too hard on the food pusher may cause the processed food to be irregular sliced or shredded. Refer to the orientation aid for recommended sizes and quantities.

Specifications

Rated voltage:	120 V~, 60 Hz
Power consumption:	450 W
Capacity:	approx. 35 fl.oz. (1 L)
Dimensions (D x W x H):	approx. 8.5 x 8.5 x 15" (216 x 216 x 38 mm)
Net weight:	approx. 4.7 lb (2.15 kg)

Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



amazon.com/review/review-your-purchases#



amazon.com/gp/help/customer/contact-us





amazon.com/AmazonBasics

MADE IN CHINA
HECHO EN CHINA
FABRIQUÉ EN CHINE

V01-08/19