

Leo Prouducts Online Help-es-V1.1

Leo Prouducts Online Help-es-V1.1

Issue 01
Date 2017-06-26

Copyright © Huawei Technologies Co., Ltd. 2017. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions



and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China

Website: <http://www.huawei.com>

Email: support@huawei.com

Contents

1 Getting started	1
1.1 What you can do with the HUAWEI WATCH 2	1
1.2 Charging your watch.....	2
1.3 Power-on and off	3
1.4 Pairing your watch with an Android phone	4
1.5 Pairing your watch with an iOS phone	6
1.6 Relevant apps.....	9
1.7 Installing a nano SIM card.....	10
1.8 Activating your eSIM	11
2 Basic information	13
2.1 Quick start.....	13
2.2 Screen operations.....	14
2.3 Shortcut menu.....	15
2.4 Modes	15
2.5 Status icon.....	16
3 Call	18
3.1 Enabling the Bluetooth calling	18
3.2 Contacts	20
3.3 Making, receiving, and rejecting phone calls	21
3.4 Switching between phone calls.....	22
3.5 Adjusting in-call volume.....	23
4 Messaging assistant	24
4.1 Viewing, replying to, and deleting messages	24
4.2 Blocking notifications.....	25
4.3 Sending messages from your watch.....	25
4.4 Reminder	26
5 Ok Google	27
5.1 Enabling Google Assistant.....	27
5.2 Common commands	27
6 Fitness and health	29
6.1 Monitoring your fitness	29

6.2 Monitoring your fitness time and calories	30
6.3 Monitoring your heart rate	30
7 More apps	32
7.1 Playing music	32
7.2 Finding your phone	33
7.3 Reminders	33
7.4 App management	33
8 Watch face	35
8.1 Adding, changing, and hiding the watch face	35
8.2 Downloading watch faces	35
8.3 Customizing the watch face	36
9 Manipulating your watch screen	37
9.1 Adjusting the brightness	37
9.2 Zooming in	37
9.3 Locking the screen	37
10 Settings	39
10.1 Alarms	39
10.2 Network data	40
10.3 Accessibility	40
10.4 Wrist gestures	41
10.5 Font size	41
10.6 Notification alert	41
10.7 Date and time	41
10.8 Factory reset	42
10.9 Watch updates	42
11 Maintenance	43
11.1 Power saving	43
11.2 Adjusting and changing your strap	44
11.3 Water and dust resistance	45
11.4 Maintenance	46

1 Getting started

- 1.1 [What you can do with the HUAWEI WATCH 2](#)
- 1.2 [Charging your watch](#)
- 1.3 [Power-on and off](#)
- 1.4 [Pairing your watch with an Android phone](#)
- 1.5 [Pairing your watch with an iOS phone](#)
- 1.6 [Relevant apps](#)
- 1.7 [Installing a nano SIM card](#)
- 1.8 [Activating your eSIM](#)

1.1 What you can do with the HUAWEI WATCH 2

Thanks for using the HUAWEI WATCH 2 (referred to as watch). Using your watch with your phone, you can make phone calls and quick payments, set a workout plan, receive notifications, enjoy an intelligent voice assistant, and install various apps with your watch. Just wear it and pair it.

Phone calls

Your watch features an independent SIM card. When call forwarding is enabled, you can use your watch to make or receive phone calls, even when it is outside the normal Bluetooth range for your phone.

Fast payment

Make quick payments with your watch by linking your bank card and attaching your watch to the payment devices, making purchasing easy and convenient.

Exercise

Allows you to make exercise plans and provides scientific suggestions to you to improve your exercise routine.

Instant notifications

Raise your wrist to view incoming calls and messages, including SMS and emails.

Google Assistant

Say what you need and get help from Google Assistant.

Heart rate monitoring

Automatically monitor your heart rate at all times.


1.2 Charging your watch

Charging

Your watch comes with a magnetic charging cradle and a USB cable, which can be used with a standard charger (5 V/1 A) to charge your watch.

 **NOTE**

- Charge your watch in a cool and dry place.
 - Keep the charging port **dry and clean** before charging.
1. Connect the charging cradle to the charger using the USB cable. Place your watch onto the charging cradle. Align and attach the charging port to the magnets of the charging cradle. You should see the battery level on the watch face.

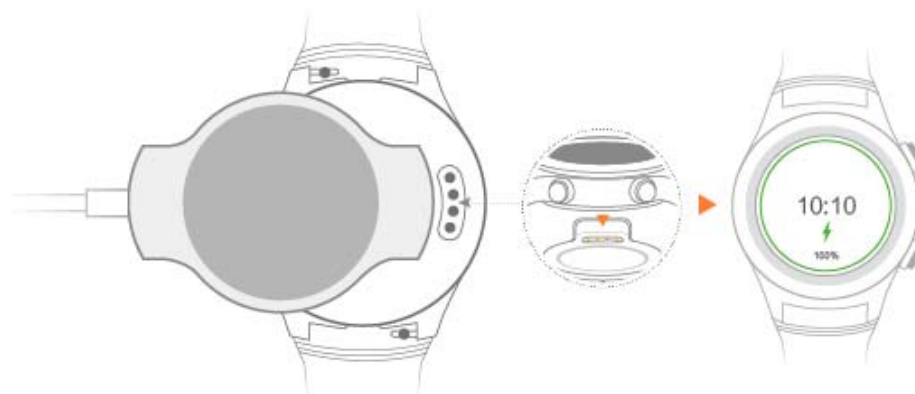

2. When your watch is fully charged, **100%** will be displayed on the watch screen. Remove your watch from the charging cradle.



Viewing the battery level

Use one of the following four methods to view the battery level:


Method 1: When your watch is charging, the battery level will be displayed on the charging screen. Press the power button to exit the charging screen.



Method 2: Swipe from the top. You can view the battery level in the drop-down menu.




Method 3: View the battery percentage from **Settings > System > About > Battery**.

Method 4: Touch  to access the settings screen in the Android Wear app, and touch **DEVICE SETTINGS > Watch battery** to view the battery level and a detailed battery usage report.

1.3 Power-on and off

Power on: Press and hold the power button until **HUAWEI** is displayed on the watch face.

Power off: Press the power button, and choose **Settings > System > Power off** to power off your watch.

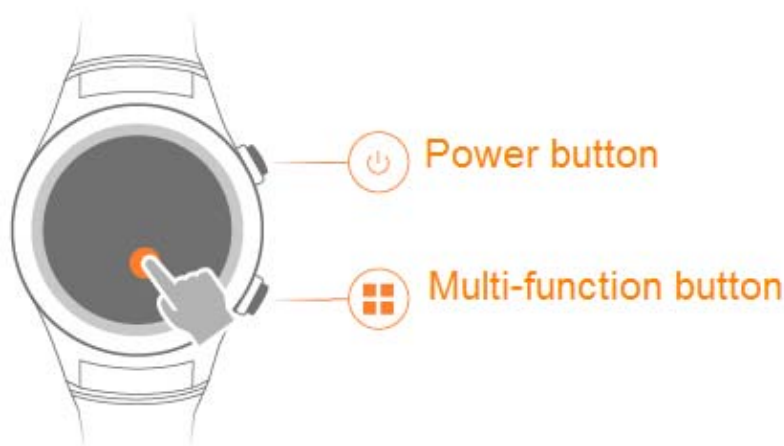

1.4 Pairing your watch with an Android phone

Download and install the Android Wear app from Google Play™, and pair your watch with your phone through this app.

NOTE

- You can pair your watch with your phone only through the Android Wear app.
- Make sure your phone runs Android™ 4.4 or later.

Preparations

1. Download and install Android Wear app in Google Play™.
Make sure your phone is connected to Wi-Fi or mobile data.
2. Press and hold the power button to power on your watch, and follow the onscreen instructions to choose the language.




Pairing your watch with your phone

1. On your phone, enable Bluetooth and open the Android Wear app. The available Bluetooth devices will be displayed on your phone.

Swipe the watch face to view your watch's name. Touch the matching watch name on your phone.

**NOTE**

If you do not find your watch on the list, touch **I DON'T SEE MY WATCH** to try again.

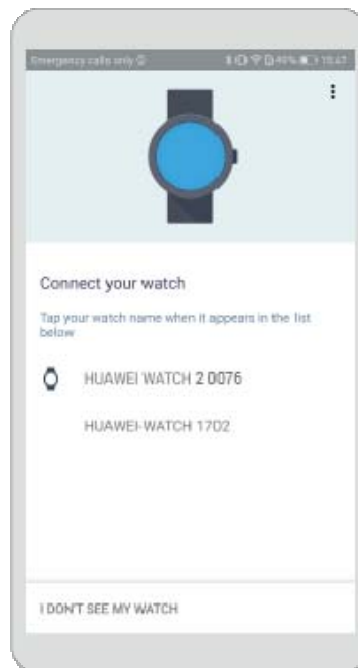


2. Make sure pairing code displayed on your phone is the same as the one shown on your watch, and then touch **PAIR**.

"Checking for updates..." will be displayed on both your phone and your watch once the pairing succeeds. The checking may take some time.



3. Touch **ADD ACCOUNTS** to add a Google account, and follow the onscreen instructions.

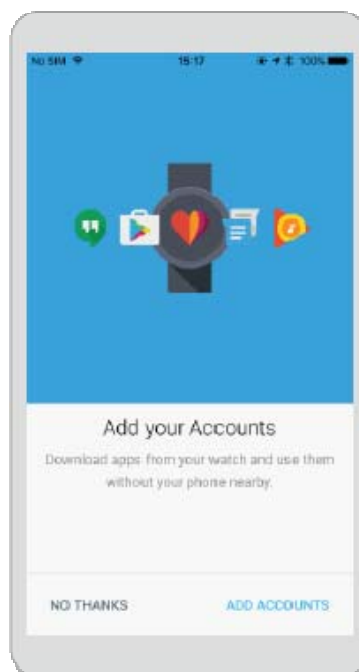

4. After your watch is paired with your phone, **Connected** will be displayed on the upper left corner of the Android Wear app home screen.

When the watch face is displayed, pairing and synchronization between your watch and your phone are finished. You can then follow the onscreen instructions to learn commonly used gestures and basic operations tips.

 **NOTE**

- If the pairing failure persists, check whether multiple Bluetooth devices have been paired with your phone. Unpair one of them and try again, or disable and re-enable Bluetooth on your phone.
- If you want to pair your phone with another watch, touch the watch name displayed on the upper left corner of the Android Wear app, and choose **Add a new watch**.
- During pairing, Android Wear syncs and installs certain apps from your phone to your watch over Bluetooth. The amount of time required for pairing depends on the number of apps on your phone, and the quality of the Bluetooth connection. Therefore, pairing can take a while.

1.5 Pairing your watch with an iOS phone

Download and install the Android Wear app from the App Store, and pair your watch with your phone through this app.

 **NOTE**

- You can pair your watch with your phone only through the Android Wear app.
- Make sure your phone runs iOS 9.0 or later.

Preparations

1. Download and install Android Wear app in App Store.
Make sure your phone is connected to Wi-Fi or mobile data.
2. Press and hold the power button to power on your watch, and follow the onscreen instructions to choose the language.



Pairing your watch with your phone


1. On your phone, enable Bluetooth. Open the Android Wear app and follow the onscreen instructions. The available Bluetooth devices will be displayed on your phone.

Swipe the watch face to view your watch's name. Touch the matching watch name on your phone, and then touch **Pair**.



NOTE


If you do not find your watch on the list, touch **I DON'T SEE MY DEVICE** to try again.

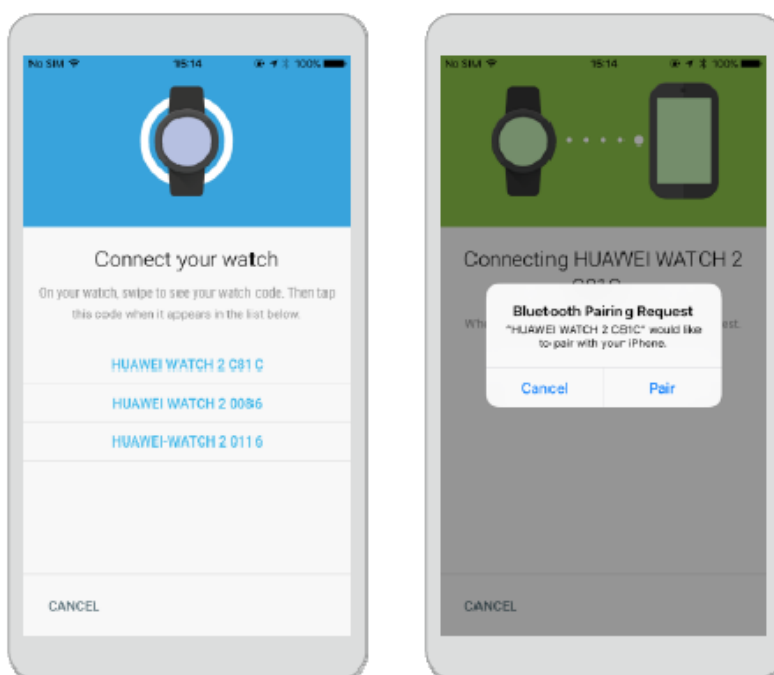


2. Make sure the pairing code displayed on your phone is the same as the one shown on your watch, and then touch **CONFIRM**.


"Checking for updates..." will be displayed on your watch once the pairing succeeds. The checking may take some time.

On your phone:

- Touch  at the bottom of the screen to view the app video.
- You can also touch **Skip** to skip the video and continue the set-up procedure.

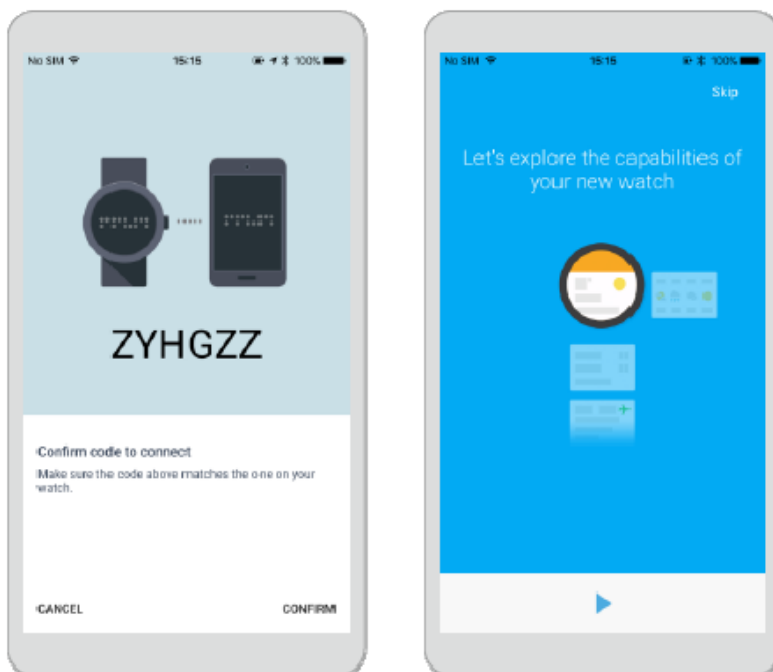

3. Touch **ADD ACCOUNTS** to add a Google account, and follow the onscreen instructions.

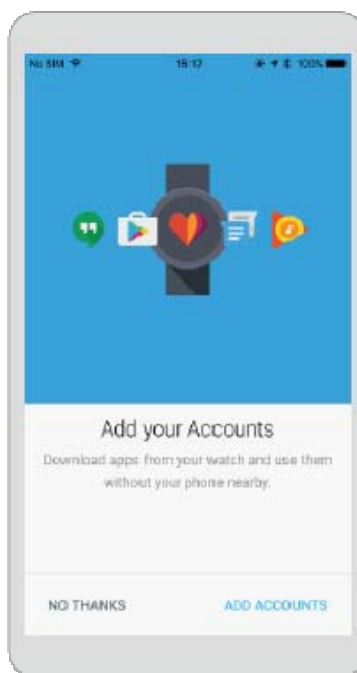

4. After your watch is paired with your phone, **Connected** will be displayed on the upper left corner of the Android Wear app home screen.
 When the watch face is displayed, pairing and synchronization between your watch and your phone are finished. You can then follow the onscreen instructions to learn commonly used gestures and basic operations tips.

NOTE

- You iPhone can only pair with one watch at a time.

- Your watch may carry out updates automatically and restart once it is successfully paired with your phone.
- If the pairing failure persists, check whether multiple Bluetooth devices have been paired with your phone. Unpair one of them and try again, or disable and re-enable Bluetooth on your phone.

1.6 Pairing your watch with Bluetooth

1. On your watch, go to **Settings > Connectivity > Bluetooth > Available devices** to search for available devices.
2. Power on your headphones and then press and hold the power, volume up, and volume down buttons simultaneously for 2 seconds to pair them with your watch. If your headphones have a user interface, follow the onscreen instructions for pairing.
3. Touch the Bluetooth device name for your headphones on the list of available devices.

1.7 Relevant apps

Android users can download the **Huawei Wear** and **Huawei Health** apps in Google Play™ to make better use of the watch.

- With Huawei Wear, you can manage your device, activate the eSIM card, as well as view the step counts and calories burnt.
- With Huawei Health, you can set a personal workout plan, and view detailed sport and heart rate data.



NOTE

- You can download the Huawei Wear app on your iOS device, but currently you cannot use this app to manage your watch.
- Huawei Health is not supported on iOS devices.

Functions of various apps

The functions of each app are listed in the following table.

Android Wear	<ul style="list-style-type: none"> • Pair your watch with the app. • Manage your watch. • Change watch faces.
Huawei Wear	<ul style="list-style-type: none"> • View steps, calories burnt, and walked distance.

	<ul style="list-style-type: none"> • Set user information. • Manage your device. • Activate the eSIM card (not applicable to the SIM card edition).
Huawei Health	<ul style="list-style-type: none"> • View detailed sport data. • Set user information. • Collect daily and historical sport data. • Record the movement track. • Draw heart rate curve. • Set a workout plan. • Provide workout reports and scientific suggestions. • Set a workout target. • Share your sports data.

Huawei Wear

The Huawei Wear app helps you manage your watch. The available functions vary by the watch edition.

Watch edition	Manage your watch	Enable the eSIM
Bluetooth edition	√	/
SIM edition	√	/
eSIM edition	√	√

Huawei Health

The Huawei Health app measures your exercise and heart rate in detail and designs a personalized workout plan.

1.8 Installing a nano SIM card


1. Rotate the mounting ears and remove the strap.
2. Use your fingernails or a flat tool, such as a plastic card, to pop open the nano-SIM card tray.
3. Place a nano-SIM card into the card tray in the proper direction.
4. Insert the tray back in the same orientation that you removed it, and slide the strap back in.



NOTE

- Insert the card tray completely and keep the rubber ring dry and clean.
- Your watch supports standard nano-SIM cards only. Please contact your carrier for a standard nano-SIM card.

- Use a standard nano-SIM card to prevent the card tray of your watch being damaged.
- Insert the nano-SIM card in the correct direction and keep the card tray level.

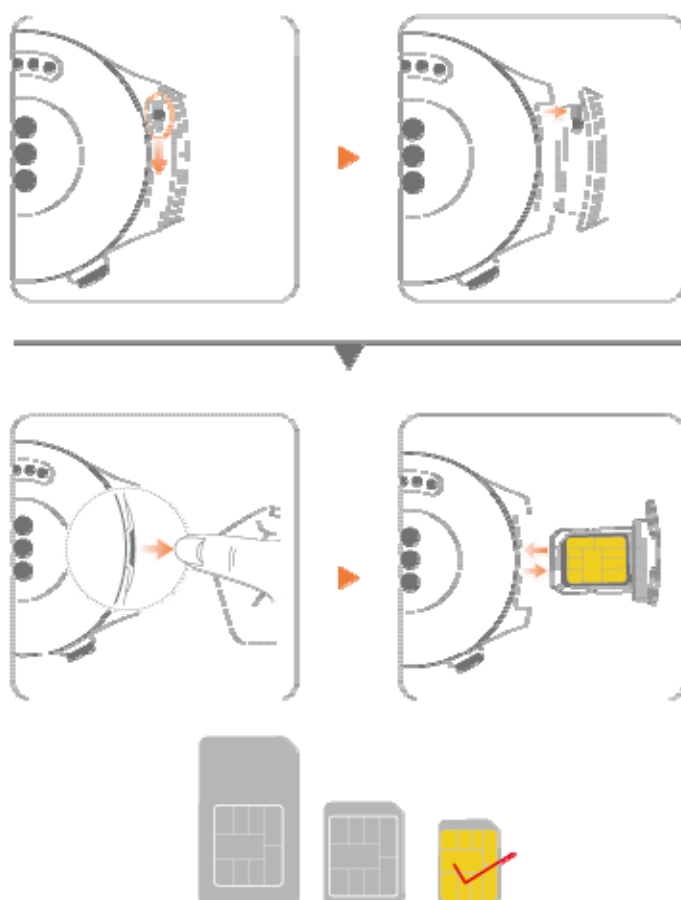

1.9 Activating your eSIM

If your watch is an eSIM edition, activate the eSIM as follows:

1. Use the **Android Wear** app to connect your phone to your watch.
2. On the **Huawei Wear** home screen, choose **Cellular management > eSIM service > SET UP NOW**.
3. Use your phone to scan the QR code provided by your carrier as instructed. Enter the security code sent by your carrier if necessary.
4. The eSIM account is automatically activated upon the first time you download and configure the eSIM service.

To add an eSIM account, follow the onscreen instructions on your watch.



NOTE

Please make sure that:

- Your phone is connected to your watch through Bluetooth, and your phone can access the Internet.
- Your watch is powered on with the battery level higher than 40%, your phone is powered on with the battery level higher than 30%.

- No operation is performed on your watch during the activation process.




2 Basic information

- 2.1 Quick start
- 2.2 Screen operations
- 2.3 Shortcut menu
- 2.4 Modes
- 2.5 Status icon

2.1 Quick start

You can perform different operations using the side buttons and touch gestures. See the following for more details.

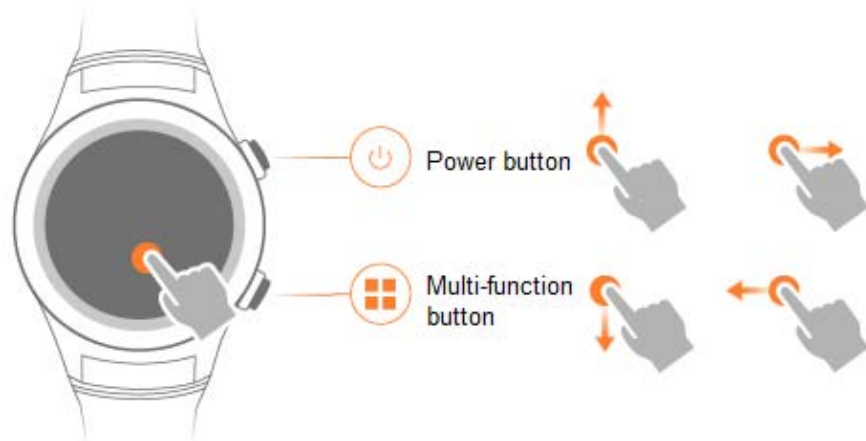

Power button

Press the power button:

- Turn on the screen.
- Access the app list screen.
- Return to the home screen.

- Turn off **Theater mode**.

Press and hold the power button:

- Press and hold the power button for 3 seconds to power on your watch.
- Press and hold the power button for 3 seconds to enable the voice assistant.
- Press and hold the power button for 10 seconds to restart your watch.

Multi-function button

Press and hold the multi-function button to open the workout app when the screen is turned on.



NOTE

You can change the workout app opened by pressing the multi-function button by choosing

Settings > Personalization > Customize hardware button, and touch **Bottom right** to access the app list.

Double-press the multi-function button to open the payment app.

Touch gestures

The following table describes the gestures supported by your watch.


Gesture	Description
Touch	Choose and confirm.
Swipe up	View card information.
Swipe down	View shortcut menus. Hide a card.
Swipe left and right	Access the watch face list (On the home screen).
Swipe right	Return to the previous screen.

2.2 Screen operations

Turning on the screen

You can raise or rotate your wrist inward to turn on the screen.

Method 1: Press the power button, then go to **Settings > Gestures** and touch **Tilt-to-wake**.

Method 2: In the Android Wear app, touch  screen. Choose the paired watch in **DEVICE SETTINGS**, and select **Tilt to wake screen**.



NOTE

In **Theater mode**, you can only turn on the screen by pressing the power button.

Turning off the screen

Manually/Automatically turning off the screen

If you disable **Always-on Screen** in **Settings > Display**, you can turn off the screen by simply covering the watch with your palm.

The screen automatically turns off if there are no operations for a specified period.

If you enable **Always-on Screen** in **Settings > Display**, the watch will switch to ambient mode after you cover your watch with your palm or perform no operations for 5 seconds. The screen automatically turns off if there are no operations for 30 minutes.






Lowering your wrist to turn off the screen

When you lower your wrist, your watch screen automatically turns off. In **Settings > Display**:

- Enable **Always-on Screen**, and when you lower your wrist, the screen switches to ambient mode.
- Disable **Always-on Screen**, and when you lower your wrist, the screen turns off.

2.3 Shortcut menu

Swipe down on the watch screen to view the shortcut menu and access the following settings.

Icon	Description
 Airplane mode	Enable or disable Airplane mode .
 Sound	Enable or disable the notification sound.
 Theater mode	In Theater mode , the screen is off and cannot be turned on by your wrist moving, screen touching, or incoming calls or messages.
 Do not disturb	Enable Do not disturb mode.
 Settings	Access the settings screen.

2.4 Modes



Enable **Theater mode** in quiet and dark environments, such as theaters and cinemas to avoid bothering other people. The **Theater mode** keeps the watch screen off. You cannot turn on the

screen by moving your wrist or touching the screen. The screen will remain off even when there is an incoming call or new message.

To enable **Theater mode**, swipe down on the watch screen to open the shortcut menu and


touch .

To disable **Theater mode**, press the power button or multi-function button.

Airplane mode .



Enable **Airplane mode** when you are on the plane to prevent interfering the aviation system. In **Airplane mode**, Wi-Fi and Bluetooth will be turned off, your watch cannot receive notifications and incoming calls from your phone, and the synchronization between your phone and your watch will stop. However, you can still use the alarm, timer, stopwatch, and record sports data on your watch.

To enable or disable **Airplane mode**, swipe down on the watch screen to open the shortcut

menu and touch .

Do not disturb .






In **Do not disturb** mode, only alarms will ring. There will be no notifications for incoming calls or messages, helping you concentrate on your work or have a good rest.

- **Enabling Do not disturb mode**
To enable **Do not disturb** mode, swipe down on the watch screen to open the shortcut menu and touch .
- **Disabling Do not disturb mode**
To disable **Do not disturb** mode, swipe down on the watch screen to open the shortcut menu and touch .
- **Enabling notifications for some apps in Do not disturb mode**
If you still want to receive notifications under **Do not disturb** mode, perform the following operations:
Press the power button, choose **Settings > Sound & notifications > Do not disturb unless...**, and enable the message notification for **Calls from favorites**, **Reminders**, or **Events**.

2.5 Status icon

The icons displayed on the watch home screen help you quickly know your watch's status.

Icon	Description
------	-------------

Icon	Description
	The watch is disconnected from your phone.
	Airplane mode is enabled, and Wi-Fi is disabled. However, you can still use other functions that do not require Wi-Fi.
	Your watch is being charged.
	Do not disturb mode is enabled, where your watch only rings or vibrates for alarms and receives notifications from specified apps.
	Your watch is at its first use. Touch this icon and follow the onscreen instructions to view and delete the tutorial cards. Your watch can receive notifications only after all the tutorial cards are deleted.

3 Call

- 3.1 Enabling the Bluetooth calling
- 3.2 Contacts
- 3.3 Making, receiving, and rejecting phone calls
- 3.4 Switching between phone calls
- 3.5 Adjusting in-call volume

3.1 Enabling the Bluetooth calling

SIM edition or eSIM edition

SIM edition and eSIM edition watches have an independent mobile network connection

- When your watch is paired with your phone, and you have enabled the Bluetooth call function, you can choose to make phone calls with your watch's SIM card or your phone's SIM card.
- If your watch is unpaired with your phone, you can still use your watch's SIM card to make and receive phone calls.



NOTE

For the 4G edition: **Cellular** is set to **Automatic** by default. When your phone and watch are paired over Bluetooth, your watch automatically disables cellular data, and you will not be able to send and receive messages, or make phone calls using your watch's SIM card. If you want to receive calls on your watch when it is paired with your phone, set **Cellular** to **ON** (enabling **ON** reduces battery life). To enable mobile data, go to **Settings > Connectivity > Cellular** and set **Cellular** to **ON**.


Bluetooth edition

You can make calls with your watch only when it has Bluetooth calling enabled and is paired with your phone connected to a cellular network.

Enabling the Bluetooth calling function

The Bluetooth call function is disabled by default. To enable it:

Method 1: If it is the first time you use the Bluetooth calling, touch **Phone** on your watch. The message "Turn on Bluetooth audio to make and receive calls on your watch?" will display, touch the confirm button, and start using the Bluetooth calling function.

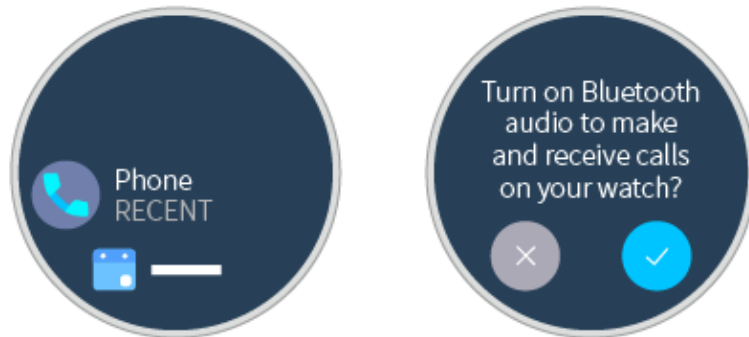


Method 2: Choose **Settings > Connectivity > Bluetooth**, and set **Play phone audio on watch** to **ON**.



Pairing your watch with your phone for Bluetooth audio

Make sure your watch is paired with your phone for Bluetooth audio.

Go to **Settings > Bluetooth**, touch the your watch name, and ensure that **Phone audio** is enabled.

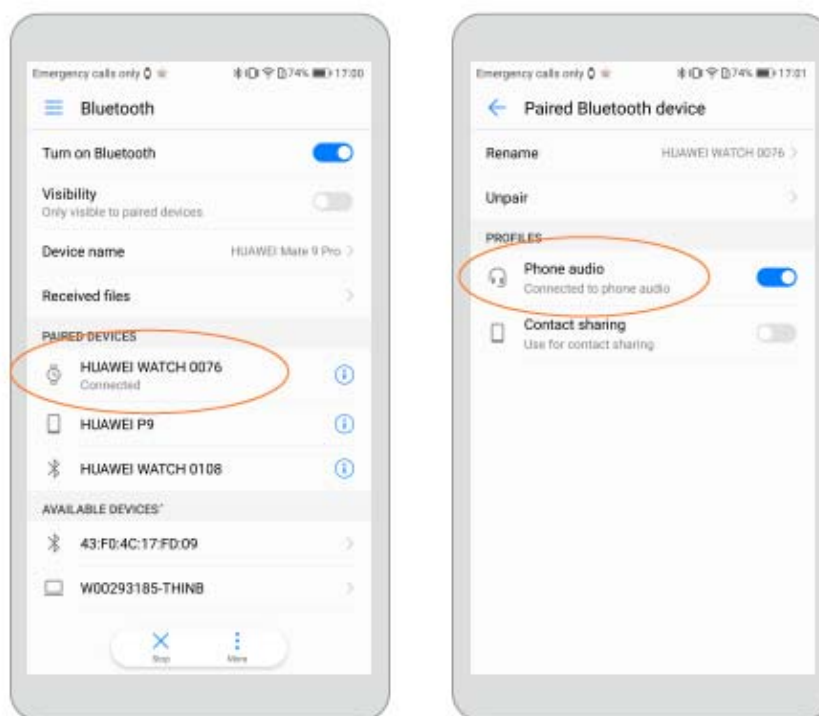

NOTE

- You cannot make phone calls with your watch if your watch is paired with an iOS device.
- For the SIM and eSIM editions: **Cellular** is set to **Automatic** by default. When your phone and watch are paired over Bluetooth, your watch can make calls, but it cannot receive them. Callers will be notified that the number being dialed is powered off.
- For the SIM and eSIM editions: When the battery level falls below 15%, a **Battery saver on** notification will be displayed on the screen, and mobile data is automatically disabled. You cannot receive phone calls or messages with your watch number. Touch **Turn off battery saver** to enable mobile data.
- If you go to **Settings > Connectivity > Bluetooth** and set **Play audio on watch** to **OFF**, you will only be able to hang up phone calls on your watch.
- If you cannot make phone calls with your watch, for example, if "Bluetooth phone audio is unavailable" is displayed, check whether the Bluetooth call function and phone audio are enabled. If both functions are enabled, disable **Phone audio** and enable it again. Wait for about 1 minute, and you should be able to make phone calls with your watch. If the failure persists, restart your watch and try again.
- For the SIM and eSIM editions: If you go to **Settings > Connectivity > Cellular > Advanced > Watch shares number with phone** and set **Calls** to **ON**, incoming calls on your phone will not be forwarded to your watch, and **Play phone audio on watch** will not be displayed in your watch's Bluetooth settings.
- For an Android phone, other Bluetooth devices cannot automatically connect the Bluetooth call function. Make sure your phone is paired with any other Bluetooth device you need before you enable Bluetooth calling.

3.2 Contacts

Synchronizing contacts

If your watch is synchronized to a Google account:

- The contacts in the Google account will automatically synchronize to your watch.
- The frequent and favorites contacts on your phone will also synchronize to your watch.

If your watch does not have synchronized to a Google account:

The frequent contacts and favorites contacts on your phone will be synchronized to your watch.

Viewing your contacts

You can view your contacts by one of the following two methods.

**NOTE**

If you do not have contacts on your watch, trust the Android Wear app, and enable the permissions for the Android Wear app in the permission settings. Restart the Android Wear app, and wait for a moment. Your contacts will automatically be synchronized to your watch.

Method 1: Press the power button, and you can view your favorite contacts in **Contacts** (favorite and frequent contracts).

**NOTE**

- If there are no contacts shown, check whether there are contacts in **Favorites** in your phone. To add contacts to **Favorites**, star or make a call to the contact, and restart your phone.
- The types of displayed contacts vary by phone model.


Method 2: Open **Phone** and access the **Contacts** screen. You can view your favorite contacts and synchronized contacts there.

3.3 Making, receiving, and rejecting phone calls

Making phone calls

Enable Bluetooth calling function, and you can make phone calls by using the one of the following two methods.

Method 1: Open **Phone**. The contacts screen is displayed. Swipe left to view the call history and dialer screens. You can use either of these screens to make calls as needed.

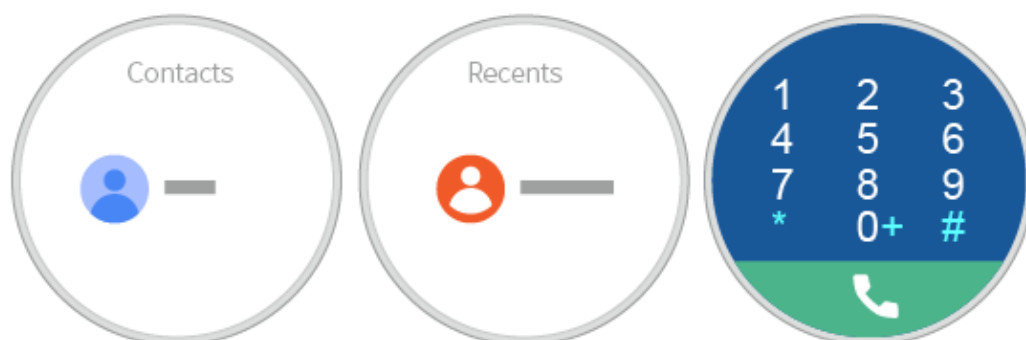

Method 2: Press the power button, and the frequent and favorite contacts (varies by phone model) will be displayed in **Contacts**. You can also make phone calls.

**NOTE**

If there are no contacts shown, check whether there are contacts in **Favorites** in your phone. To add contacts to **Favorites**, star or make a call to the contact, and restart your phone.

Receiving phone calls

After you have enabled the Bluetooth calling function for you watch, you can answer incoming calls with your watch.

**NOTE**

If you do not enable the Bluetooth call function, you can only use the paired phone to answer incoming phone calls.

Rejecting phone calls


Touch the red button to reject incoming calls.

3.4 Switching between phone calls

- If you make or answer phone calls with your watch, the calls are done on your watch by default.
- If you make or receive phone calls with your phone, the calls are done on your phone by default.

To switch between your watch and your phone during phone calls, perform the following operations:

On the call screen of your phone, touch **Bluetooth** to use your watch for the call, or choose **Speaker** or **Headset earpiece** to use your phone for the call.

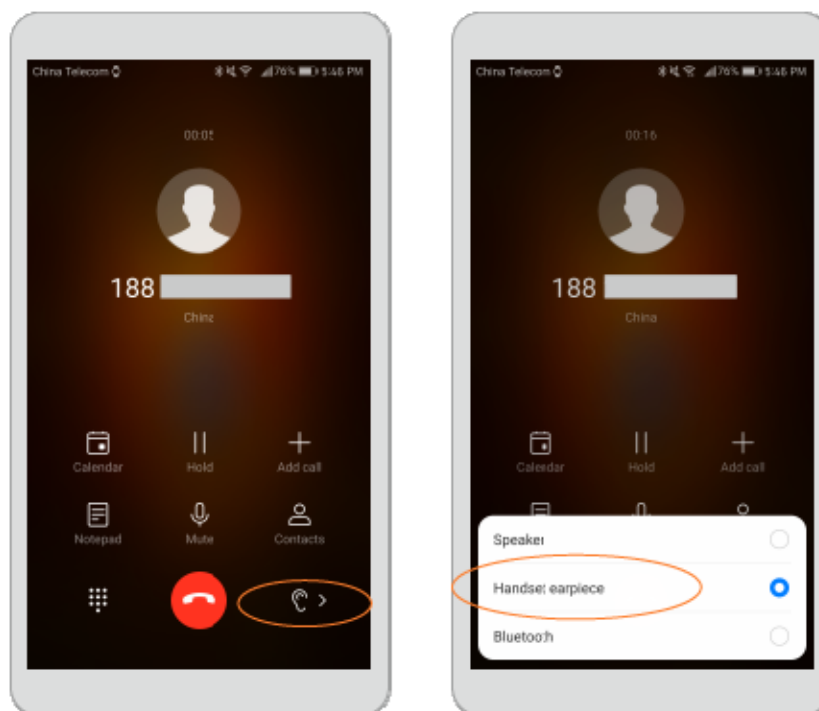

**NOTE**

- If you do not enable the Bluetooth call function on your watch, even when you make and receive the phone calls from your watch, the calls can only be done on your phone.
- The call history is stored on your watch or phone depending on which device you use to make the call.

3.5 Adjusting in-call volume

During a phone call, swipe up on the call screen, and choose **Volume** in **Call options** to adjust in-call volume.

There are many factors that can affect call audio quality, such as poor signal reception or wireless interference.

If you frequently experience poor audio quality during calls, follow the steps below:

- Check whether you are making calls directly with the SIM card on your watch or using the watch as a Bluetooth device for your phone.
- If you are using your watch as a Bluetooth device for your phone, move your watch closer to your phone and ensure that you have good reception on the phone. If the distance between your watch and phone is overly great, you may experience poor sound quality during calls, as Bluetooth requires the two devices to be close together. It is also recommended that you disable Wi-Fi on your phone, as the Wi-Fi function on some phones may interfere with calls made over the Bluetooth.
- Check whether water has entered your watch. The watch is waterproof. However, water may collect on the diaphragm inside the microphone and speaker holes, causing distorted sounds or a reduction in volume. If you think water may have entered the watch, shake the watch a few times and leave it to dry.

**NOTE**

The waterproofing of the watch is designed to prevent water from entering the interior of the watch and damaging the internal components and main board.

4 Messaging assistant

- 4.1 Viewing, replying to, and deleting messages
- 4.2 Blocking notifications
- 4.3 Sending messages from your watch
- 4.4 Reminder

4.1 Viewing, replying to, and deleting messages

Viewing messages

When you are wearing your watch, it will vibrate if it receives new message. Lift your wrist and swipe up the message card to view the new messages.

Your messages are saved in your watch for later viewing if you do not view the messages instantly.

The message card will display for 5 seconds by default. To modify the display duration, go to **Settings > Sound & notifications > Notification preview**, and choose **High**(Always show), **Normal**(Show for 5 seconds) or **Off**(Never show).



NOTE

- When your watch receives multiple messages, swipe up on the screen to view the next message.
- If you delete messages on your watch, the messages in your phone will also be deleted.



Replying to messages

For some messages, such as SMS, email, and app notifications, you can touch the message card and reply by voice (will be transferred to texts then), emoji, or texts.

Replying to messages

You can use your watch to reply directly to messages forwarded from your phone when it is paired with a Nexus6, Huawei phones running EMUI 4.1/5.0 or later versions, or other devices that support this function. This function is not supported for certain phone models, including iOS phones.

Replying to messages on your Android phone

You can respond directly to messages on social media apps such as WhatsApp, Hangouts, Facebook Messenger, WeChat, and Gmail if they are installed on both your phone and your watch.

Replying to messages on your iOS phone


When your watch is paired with an iOS phone, you can log in to your Google account to receive and reply to messages from Gmail. The reply method varies between apps.

Deleting messages


You can swipe left the message card to ignore or delete the message.

4.2 Blocking notifications

Blocking notifications from specific apps

Touch  on the upper right corner of Android Wear app to access the settings screen. Add the apps from which you do not wish to receive notifications for in **Block app notifications**.

Enabling app notification

Touch  on the upper right corner of Android Wear app to access the settings screen. Delete the apps from which you wish to receive notifications for in **Block app notifications**.

4.3 Sending messages from your watch

You can send messages from your watch after enabling SMS permission to for the Android Wear app on your phone.

Enabling the message sending permission

If you are using a Huawei phone, to enable the message sending permission, go to **Settings > Permissions > SMS**, and touch **Android Wear**. The operations on phones of other brands are similar.


1. You can use your watch to reply directly to messages forwarded from your phone when it is paired with a Nexus6, Huawei phones running EMUI 4.1/5.0 or later versions, or other devices that support this function.

2. For the 4G edition: When your watch is not paired with your phone, SMS service must be enabled to use the messaging function.

Sending messages

Method 1: Say "Ok Google" on the home screen, and say "Send a text to XXX".

Method 2: Press the power button to wake your screen, then access the **Messenger** screen.

Touch  to send messages.

Method 3: Use the Messenger app.



NOTE


The third method is only applicable for the 4G watch edition.

4.4 Reminder

Set a new event and time period in the **Calendar** of the paired phone. The event will synchronize to your watch, and your watch will remind you at the specified time.



NOTE

- You can view your agenda on your watch.
- If the event you added is not synchronized to your watch, touch  in the Android Wear app, and make sure **Phone** is selected in **Calendar settings**.

5 Ok Google

5.1 Enabling Google Assistant

5.2 Common commands

5.1 Enabling Google Assistant

You can use either of the methods below to interact with your watch using voice commands:

- Say "OK Google" when the home screen is displayed. You can now issue voice commands to interact with your watch.
- Press and hold the power button to open the voice assistance screen, you can issue voice commands to interact with your watch.



NOTE

- Keep your watch connected to your phone and make sure you have an available Internet connection.
- Some languages may not be supported.



5.2 Common commands

Google Commands include the following commands:

- General Commands
- Notes & Reminders
- Time & Date
- Communication
- Weather
- Maps & Navigation
- Sports
- Flight information

Recommended examples of voice commands:

Search for nearby restaurants, Call Tom, Remind me of important meetings, Navigate home.


6 Fitness and health

- 6.1 Monitoring your fitness
- 6.2 Monitoring your fitness time and calories
- 6.3 Monitoring your heart rate


6.1 Monitoring your fitness

Wear your watch and it will automatically record your fitness data all day. Your watch can automatically identify your status, such as walking, running, climbing, and standing.


Setting a workout target

Press the power button, and choose  **Daily tracking**. If you are using this feature for the first time, swipe left on the screen to enter your personnel information such as gender, age, weight, and height. You can then set your workout target in **Daily goal**.

Checking sports data on your watch

Press the power button on the home screen, and choose  **Daily tracking**. Swipe up on the screen to view sports data, such as walking and running distance, steps, calories burnt, flights climbed, workout duration, and standing data.

NOTE

- Providing accurate height and weight information will help your watch record more accurate calories burnt data.
- Set **Notification** to **ON** in  **Daily tracking**. Your watch will notify you once you reach 100% of your workout target.
- Between 7:00 and 19:00, if you stand up or do exercise with medium or high intensity for over 1 minute, the motion is recorded as you standing up once. Standing up multiple times within 1 hour are recorded as standing up once.

Checking sports data on your phone

You can view steps, calories, and distance on the Huawei Wear app home screen. Download and install the Huawei Health app to sync your fitness and health data with Huawei Wear.

For detailed health and sport data, touch **Health** on the Huawei Wear app home screen. You can set a workout plan and exercise target, view historical data, and share data to third-party apps with the Huawei Health app.




NOTE

- Huawei Health is pre-installed on Huawei phones running EMUI 5.0 and later.
- Huawei Health is not supported on iOS devices.



6.2 Monitoring your fitness time and calories



The **Workout** app on your watch helps you record the fitness data for a single exercise session. Set your fitness time and calories target and start exercising.

1. Touch the multi-function button to quickly start a single exercise session.
2. Choose the sport you want and touch  to set the fitness target.
 - Set targets for **Distance**, **Time**, or **Calories**.
 - Choose **No goal set** if you do not wish to set a target.
 - Select **Fat burn** or **Cardio**, and your watch will provide professional workout suggestions.

Then, after a countdown from 3 to 1, you can start your exercise.

3. During an exercise, touch your watch screen or press the multi-function button, and touch  to pause your exercise, or  to end your exercise and view your fitness data.




NOTE

Your watch will not record your fitness data if your workout time is less than 1 minute, or the walking and running distance is less than 100 meters.

6.3 Monitoring your heart rate

Monitoring your heart rate

Wear your watch to monitor your heart rate using one of the following methods.

Scenario 1: Press the power button, swipe up or down on your watch screen, choose  **Heart rate**, and follow the onscreen instructions to enable the heart rate sensor. Your watch will then measure your heart rate.

To ensure higher accuracy, wear your watch with the watch screen facing upward and gently press the watch to make sure it makes proper contact with your wrist. Do not move.

Scenario 2: Your watch measures your heart rate while you exercise. If your heart rate exceeds the set limit, your watch will notify you.

Scenario 3: Your watch will measure your heart rate every 10 minutes throughout the day once your watch detects that you are wearing it.

**NOTE**

- To ensure higher heart rate accuracy, wear your watch properly.
- The data from the watch cannot be used as a basis for medical purposes.

Heart rate limit warning

Enable the heart rate limit warning in the Huawei Health app. If your heart rate exceeds the set limit when you are working out, your watch will notify you.

To get a warning from your watch, choose **My > Settings > Heart rate limit interval and warning**, and switch on **Heart rate limit warning**.

**NOTE**

You can set your heart rate limit in **Heart rate limit**.

Heart rate limit intervals

Heart rate limit intervals are an effective way to measure exercise intensity. Keeping your heart rate within the appropriate limit interval while exercising can increase your cardiopulmonary capabilities and improve your exercise results. Understanding your heart rate limit interval can prevent you from over-exercising and injuring yourself.

A heart rate limit interval refers to the heart rate range per minute, which is calculated based on the percentage of the maximum heart rate.

In Huawei Health app, choose **My > Settings > Heart rate limit interval and warning**, and touch **Maximum** to set your maximum heart rate. The preset maximum heart rate on your watch is 220 minus your age.

Heart Rate Limit Interval	Description
Warm-up	This builds up your strength or warms up your body before exercise. Exercise type: walking fast
Fat burning	This improves your body strength, increases the fat burning speed of your body, and improves your cardiovascular adjustment. Exercise type: walking slowly
Aerobic endurance	This is for endurance training and improves your aerobic fitness, vital capacity, and breath control. Exercise type: easy running
Anaerobic endurance	This is for speed training and improves your fitness. You need to control your exercise time at this interval. Exercise types: tempo running and running at intervals
Limit	This is for explosive power training, during which time lactic acid is accumulated fast with a high possibility of injury. You should strictly control your exercise time at this interval. Exercise type: running as long and fast as you can

7 More apps

- [7.1 Playing music](#)
- [7.2 Finding your phone](#)
- [7.3 Reminders](#)
- [7.4 App management](#)

7.1 Playing music

To play music on your phone:

When your watch is paired with your phone over Bluetooth, you can use your watch to control music playback on your phone. For example, you can skip songs and adjust the volume.

To play music offline:

Connect your watch to a Bluetooth headset so that you can play music without the need to carry your phone with you, for example, when walking, running, or exercising.

Perform the following operations to synchronize your music to your watch and play it on a Bluetooth headset:

1. Download and install the Google Play Music app on your Android phone or tablet.
2. Purchase music in Google Play™, and wait for the music to be downloaded to your phone.
3. Open the Google Play Music app. After the watch connects to the Internet, choose the music you want to play.

Listen to music online:

If you are using the 4G version of the watch, you can listen to music online when the watch has a mobile data or Wi-Fi connection.

If you are using the Bluetooth version of the watch, you can listen to music online when the watch has a Wi-Fi connection.



NOTE

Prolonged music playback will shorten your watch's battery life.

7.2 Finding your phone

Your watch can help you find your phone easily.

When your watch is paired with your phone over Bluetooth, press the power button when

home screen is displayed, and touch



Find my phone. Your phone will ring and you can quickly find your phone.

7.3 Reminders

Reminders help you directly and conveniently set a reminder on your watch.

Press the power button when the home screen is displayed, choose **Reminders**, and touch



to set a reminder. Your watch vibrates and displays a notification card at the specified time.



NOTE

If you are using the Nexus or other phones with Android Calendar, the reminders you created on your phone will synchronize to your watch.

7.4 App management

Downloading apps

Your watch supports a range of popular apps such as Facebook, Twitter, and WeChat. You can select **Get APPS** in the Android Wear app to access Google Play™ and download your favorite apps.

Installing apps

Select **Get APPS** in the Android Wear app to access Google Play™ and download your favorite apps. If the app is compatible with the Android Wear app, the app icon will appear in the app list.

Uninstalling apps

- You can uninstall or disable third-party apps on your watch by performing the following operations:

Press the power button, choose **Settings** > **Apps**, touch the third-party app you want to uninstall or disable, and touch **Disable** or **Force stop**.

You can also uninstall apps on your phone. The apps will be removed from your watch simultaneously.

- Some pre-installed apps can only be disabled. To disable the apps, perform the following operations:

Press the power button, choose **Settings** > **Apps** > **System Apps**, touch the app you want to disable, and touch **Force stop**.



NOTE

Force stop may cause system exceptions, and affect your normal use. Please exercise with caution.

8 Watch face

- [8.1 Adding, changing, and hiding the watch face](#)
- [8.2 Downloading watch faces](#)
- [8.3 Customizing the watch face](#)

8.1 Adding, changing, and hiding the watch face

Adding watch faces

Your watch provides you with multiple watch faces in a range of colors and styles. You can add more watch faces for even more options.

To add watch face, swipe left on your watch's home screen and touch **Add more watch faces**.

Change watch faces

Choose one of the following two methods to change your watch face.

Method 1: Swipe left on your watch's home screen. Swipe left or right to scroll through the watch faces and then touch to apply the desired face.

Method 2: Touch **MORE** in **Watch faces** on the Android Wear app home screen to view the watch faces, and then touch to apply the desired face.

Hiding watch faces

Hide some of the watch faces and display only your personalized watch face.



To do this, swipe left on your watch's home screen to view the existed watch faces. Swipe up or down the watch faces you wish to hide, and they will no longer be listed in the watch face list.

8.2 Downloading watch faces

Method 1: You can download watch face apps from Google Play™.

Method 2: Touch **More** under **Watch faces** on the Android Wear app home screen. Scroll down the screen to the bottom, touch **Get more watch faces**, and download a watch face app.

8.3 Customizing the watch face

Your watch provides you with multiple watch faces in a range of colors and styles. Watch faces with  are customizable. You can touch  to set the background, pointer style, and displayed content to create your own watch face.

9 Manipulating your watch screen

[9.1 Adjusting the brightness](#)

[9.2 Zooming in](#)

[9.3 Locking the screen](#)

9.1 Adjusting the brightness

To adjust the brightness:

Press the power button, choose **Settings > Display > Adjust brightness**, and scroll the watch screen to select **Automatic** or adjust the brightness from level 1 to level 5.

9.2 Zooming in

Triple-touch your watch screen to zoom in and view information more clearly. Touch the screen three times in quick succession to restore it to the original view. Note: This operation does not disable Magnification gestures. To disable this function, disable the **Magnification gestures** switch.

You can also press the power button, choose **Settings > Accessibility**, and touch **Magnification gestures** to zoom in the screen.

9.3 Locking the screen

There will be no notifications for incoming calls or messages when your watch screen is locked, protecting your privacy.

To lock your watch screen, press the power button, and choose **Settings > Personalization > Screen lock**. Choose **Pattern**, **PIN**, or **Password** and follow the onscreen instructions to lock the screen.



NOTE

- Your watch vibrates when there is a new message coming in. You need to unlock your screen to view the message.

- Please remember your password. If you forget the password, go to a service center for technical support. Do not try to unlock on your own.



10 Settings

- 10.1 Alarms
- 10.2 Network data
- 10.3 Accessibility
- 10.4 Wrist gestures
- 10.5 Font size
- 10.6 Notification alert
- 10.7 Date and time
- 10.8 Factory reset
- 10.9 Watch updates

10.1 Alarms


The alarms you set will vibrate at the specified time.

Setting an alarm

Press the power button and access the app list. Touch  **Alarm**. Scroll to the desired time, then touch  to set the alarm.

You can also set an alarm using Google Assistant. Say "Ok Google" and "Set an alarm for 7am". Your watch will open **Alarm** for you.

NOTE

- The alarm you set will not repeat by default.
- You can touch  to modify the alarm settings, for example, you can set the alarm to work every Monday, or every Wednesday.
- Alarms set on your Huawei phone (EMUI 5.0 or later) will be synced to your watch.

Deleting an alarm

In the alarm list, touch  **Remove** to delete the alarm.

Setting the alarm interval

The following is the procedure for setting an alarm that repeats every day.

1. Touch **One time** to access the interval screen. **One time** is selected by default.
2. Touch **One time** to deselect it.
3. Swipe right on the screen to change the interval to **Every day**.

If the added alarm is the same as an existing alarm, the existing alarm will be updated.

For example, if you have already set an alarm for 9am from Monday to Friday, when you set a new alarm for 9 am from Saturday to Sunday, the older one will be updated. There will be only one alarm for 9am from Saturday to Sunday.

Adjusting the alarm volume

Choose **Settings > Sound & notifications > Alarm volume**. Swipe left and right to adjust the alarm volume.

10.2 Network data

You can set and view the network data on your watch, such as traffic usage, turning on and off data roaming, and SIM card status if your watch is a SIM edition or eSIM edition.

Setting traffic limit

If you set a traffic limit, the system will disable mobile data to avoid unnecessary fees when your traffic exceeds the traffic limit you set. To set data limit, choose **Settings > Connectivity > Cellular > Data usage > Set data limit**. Enable data limit and set a value under **Data limit**.

Setting the preferred network type

Choose an appropriate network based on the network your SIM card supports and network coverage to avoid frequent network switchover. To choose an appropriate network, choose **Settings > Connectivity > Cellular > Advanced**, and select the proper network in **Preferred network type**.

10.3 Accessibility

Your watch provides you with various convenient functions, such as zooming in, setting the language and speaking speed of the voice assistant, as well as settings for answering and declining a call. You can modify your settings in **Settings > Accessibility**.

- **Magnification gestures**: Zoom in the screen quickly.
Triple-touch your watch screen to zoom in and view information more clearly.
- **Text-to-speech output**: Set the language and speaking speed of the voice assistant.

- **TalkBack:** Provide voice messages for people with visual impairment. For example, your watch can speak out the contents you touch, choose, and activate.
- **Select to Speak:** Provide voice messages of contents you choose.
- **Power button ends call:** Decline the call, canceling the call. However, this function does not support rejecting a call.

10.4 Wrist gestures

You can rotate your wrist to switch among messages after you enable **Wrist gestures**. Press the power button, enable **Wrist gestures** in **Settings > Gestures**.

- **Launch tutorial:** Provide instructions to learn the gestures.
- **More tips:** Open Google and learn gestures online.

10.5 Font size

To adjust the font size, press the power button, choose **Settings > Display > Font size**, and scroll the screen to adjust the font size.

10.6 Notification alert


Setting the ringtone

Press the power button, choose **Settings > Sound & notifications**, and touch **Watch ringtone**. You can either choose **None** or any ringtone in the list. You cannot set songs saved locally as a ringtone.

Adjusting Media volume, Alarm volume, and Ring volume

To adjust the **Media volume**, **Alarm volume**, and **Ring volume**, press the power button, choose **Settings > Sound & notifications**, and swipe left and right on the scroll bar to adjust the volume.

- The media volume includes music playback volume and game sound volume.
- If there is no sound, make sure the alert is enabled in the shortcut menu.

Swipe down on the home screen and check whether the alert icon is  , indicating the watch is muted. Unmute to receive alerts.

- You cannot adjust the ringtone volume when **Do not disturb** mode is enabled.

10.7 Date and time

When your watch is paired with your phone over Bluetooth, the date and time on your watch will be synchronized from your phone by default.

To manually set the date and time, go to **Settings > System > Date & time** and disable automatic setting. You can then manually set the time zone, time, 24-hour time on your watch.

**NOTE**


After you set the date and time manually, the message synchronization may not work properly if the settings are different from your phone. It is recommended that you set the watch to automatically synchronize the date and time with your phone.

10.8 Factory reset

If you restore your watch to the factory settings, all data stored on your watch will be deleted. You will also need to pair the watch with your phone again.

You can restore your watch to the factory settings by one of the following two methods.

Method 1: Press the power button, and choose **Settings > System > Disconnect and reset**.

Method 2: When your watch is paired with your phone over Bluetooth, touch  on the upper right corner of the Android Wear app, choose your watch, and touch **UNPAIR WATCH**.

10.9 Watch updates

Updating your watch

Your watch will notify you when an update is available. Touch the confirm icon to download the update. This type of updates will usually upgrade the pre-installed apps and improve the watch performance.

If you fail to update your watch, perform the following operations:

Scenario 1: If your watch can be powered on, try updating your watch for the next time.

Scenario 2: If your watch cannot be powered on, go to a service center for support.

**NOTE**

- You cannot manually check for watch updates.
- Your watch must be paired with your phone over Bluetooth. If your phone is connected to the network and your watch is being charged, the updates will be downloaded automatically.

Updating apps in your phone

If you have updated an app in your phone, the app will also be updated on your watch after a certain period.


11 Maintenance

- 11.1 Power saving
- 11.2 Adjusting and changing your strap
- 11.3 Water and dust resistance
- 11.4 Maintenance


11.1 Power saving

Both the battery capacity and user's operation will affect your watch's battery life. For example, if you have installed too many apps or use your watch heavily, the standby time will decrease.

To prolong the standby time of your watch, perform one of the following two methods:

Method 1: It is recommended that you uninstall or refrain from using certain power-intensive third-party apps. In the Android Wear app, touch the  icon to open the settings screen. Under **Device settings**, select the connected **HUAWEI WATCH 2**, and then touch **Watch battery** to check detailed battery statistics. Under **Settings > APPs**, choose the power-intensive third-party apps, and then click **Uninstall** or **Disable**.

Method 2: Use the watch's Smart power saving mode. Press the watch's upper right key (power key) to access the app list, touch and open the Battery app, then select **Smart power saving mode**.

Method 3: Block notification messages. After the watch receives a notification message, press and hold the screen and select **Block all notifications** to block all further notification messages from this app. Alternatively, enter the Android wear App, touch the  icon to enter the **Settings** screen, then under **Block app notifications** add the apps that you do not want to receive notifications from.

Method 4: Use the watch's Airplane mode. If you find yourself not needing a network connection (for example, when you are on a plane, asleep, or exercising for extended periods), switch the watch to Airplane mode. To enable Airplane mode, pull down the shortcut menu and touch the airplane icon.

Method 5: Disable the Always-on screen setting. Go to **Settings > Display**, and disable **Always-on screen**.

Method 6: Disable the Tilt-to-wake setting. Go to **Settings > Gestures**, and disable **Tilt-to-wake**.

Method 7: Enable Watch mode. Press the power button and then enable **Watch mode** in the Battery app.

Method 8: If **Cellular** on the 4G version of the watch is set to **ON** (the default value is Automatic), power consumption increases. It is recommended that this setting be set to Automatic. Set the **Cellular** to **Automatic** by going to **Settings > Connectivity > Cellular**.



NOTE

- Your watch's battery capacity, functions, and usage will all affect your watch's battery life.
- Third-party apps can enhance the functionality of the watch, but some third-party apps also increase power consumption. Take care when downloading and installing third-party apps.
- When Smart power saving mode is enabled, the watch will disable the Always-on screen function, the mobile network will switch to automatic mode, and the screen brightness will be lowered.
- Your watch will not receive notifications from apps whose notifications are blocked.
- In Airplane mode, Bluetooth and network connection are disconnected. You will not be able to make or receive calls, send or receive messages, or use any online functions.
- Watch mode keeps only the basic Clock and Pedometer functions, prolonging the watch's standby time.


11.2 Adjusting and changing your strap

Adjust your strap based on your wrist size. To change your strap, see the following instructions.


Gently pull the strap to make sure you have properly fastened it.

You can change your watch strap with another HUAWEI WATCH 2 watch strap of the same size. Do not use unauthorized metallic straps or other types of watch strap, as they may cause the watch to function incorrectly (such as affecting the communication, GPS, Bluetooth, Wi-Fi, heart rate or waterproof functions).

Removing your strap

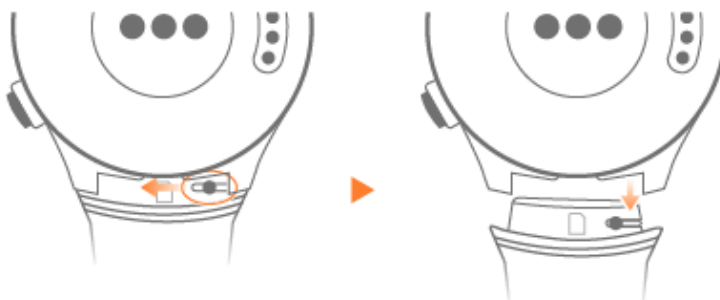

Fastening your strap

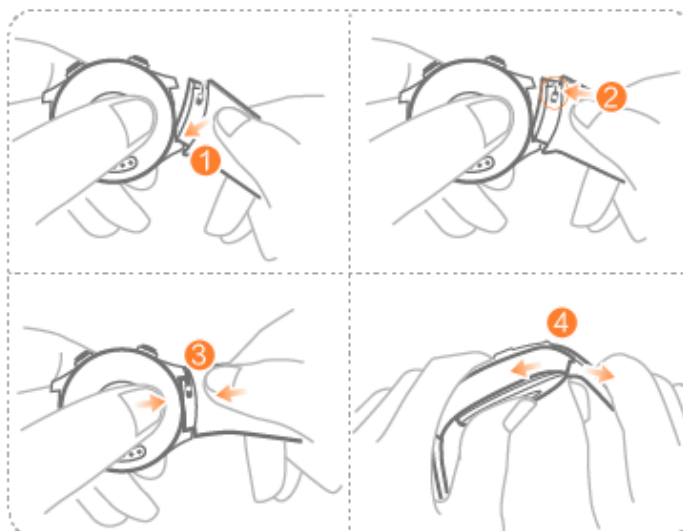

 **NOTE**

Explanation: You can only use Huawei approved accessories for the relevant model number. The use of other accessories may void the device warranty, present safety issues or violate the related regulations of the country where the device is located. Contact an authorized service center for more information on how to obtain approved accessories.

11.3 Water and dust resistance

The IP68 design helps protect your watch from dust and moisture. You can wear your watch when you are washing your hands or in the rain. Do not wear it when washing cars, swimming, diving, scuba diving, or showering.



**NOTE**

- IPXX is a water and dust resistance standard (IEC60529) made by the International Electrotechnical Commission (IEC). The first digit indicates the dust resistance level (0–6 levels, and level 6 is the highest), and the second digit indicates the water resistance level (0–8 levels, and level 8 is the highest).
- Your watch supports the highest level of water and dust resistance. You can use your watch in the water with a depth of up to 1.5 m for 30 minutes (the difference between the test water's temperature and product's temperature shall be within 5°).
- Please follow the instructions stated in this section when using your watch. Huawei is not liable for any damage caused by improper operations.

11.4 Maintenance

Cleaning your watch

Wipe your watch dry if it comes into contact with water. Keep the watch clean and dry. Use soft cloth to wipe and clean your watch regularly.

Maintaining your watch face

The watch display is protected by a layer of scratch-resistant glass and ceramic. However, avoid dropping the watch or exposing it to strong impacts. Do not allow the watch face to come into contact with sharp objects. For example, avoid scratching the face with a knife or against a rock.

Leather strap maintenance

- Pull the strap carefully when putting your watch on to reduce wear and tear.
- Keep your leather strap in a dry, well-ventilated area and wipe it dry immediately after exposure to water. Use leather conditioner to clean your strap regularly. Avoid placing your watch in places with direct sunlight or moisture to prevent deformation.
- Wipe off any water or dirt using a clean cloth or tissue. Place the strap in a cool, well-ventilated area to dry and then apply a layer of leather polish.
- Avoid wearing the watch in hot or rainy weather or when swimming, taking a shower, or exercising for prolonged periods.
- Do not dry the strap by placing it in direct sunlight or by using heating appliances such as microwaves or hairdryers, otherwise it may shrink or expand.
- Keep the watch strap away from flammable, acidic, and alkaline materials, as well as inks or makeups. Natural marks or imperfections on the leather are not covered by the warranty.
- Avoid contact with rough or sharp objects to prevent damage to your strap.
- Do not compress the strap or bend it for prolonged periods, otherwise it may distort it.
- Do not pull the strap too tight to prevent creases. Do not bend the strap in the wrong direction, as this will result in creases or cracks in the leather.
- Do not attempt to punch holes in the strap yourself. Failure to apply protective oil after punching holes will cause the strap to crack.
- Apply a thin layer of Vaseline to the strap during the autumn and winter. Wipe the strap dry using a soft cloth and then apply the Vaseline. Reapply the Vaseline weekly.

- The leather strap is not covered under the warranty. Replace the strap once it is damaged. The service life of your strap is determined by your use and environment.