

Digital Music Player
NW-E393/E394/E395



Use this manual when you have troubles or when you need to know how to use your WALKMAN®.

The color of Walkman sold in some countries/regions may differ from those shown above.

How to Use

[Getting Started](#) >

[Basic Operations](#) >

[Transferring/Deleting Content](#) >

[Music](#) >

[Photos](#) >

[FM Radio](#) >

[Settings](#) >

[Announcement](#) >

[Specifications](#) >

Troubleshooting

[Troubleshooting](#)



[Q&A](#)



List of Topics

[How to Use](#)



[Troubleshooting](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation

Table Of Contents

Help Guide NW-E393/E394/E395.....	i
Getting Started.....	1
Customer Registration Website.....	18
Customer registration website.....	59
Before Use.....	19
Before first use.....	60
Walkman instruction manuals.....	61
How to use the operating explanations.....	62
Enjoying Using Your Walkman.....	20
3 steps to listening to music.....	63
Various ways to enjoy using your Walkman.....	65
Parts and Controls.....	21
Parts and controls.....	66
Power/Charging.....	22
Turning the power on.....	68
Turning the power off.....	69
Using the HOLD switch.....	70
Charging the battery.....	71
Extending the battery life.....	72
Notes on charging the battery.....	73
Initial Settings.....	23
Selecting the display language.....	74
Basic Operations.....	2
Home Menu/Option Menu.....	24
Home menu.....	75
How to use the Home menu.....	76
How to use the option menu.....	78
List of icons displayed in the information area.....	80
Connecting Your Walkman to Your Computer.....	25
Connecting to a computer.....	82
Notes on connecting your Walkman to a computer.....	83
Initializing/Updating.....	26
Restarting your Walkman.....	84
Resetting to the factory settings.....	85
Formatting memory.....	86
Updating the system software of your Walkman.....	87
Displaying your Walkman information.....	88
Transferring/Deleting Content.....	3

Operation Flow for Transferring Content to Your Walkman.....	27
Preparing content using a Windows computer.....	89
Preparing content using a Mac computer.....	90
Installing Media Go.....	28
About Media Go.....	91
Installing Media Go.....	92
Installing Content Transfer.....	29
About Content Transfer.....	93
Installing Content Transfer.....	94
Importing Content to the Software.....	30
Importing and transferring content from media using Media Go.....	95
Importing content on your Windows computer into Media Go.....	97
Transferring Content to Your Walkman.....	31
Transferring content using Media Go.....	98
Transferring iTunes content using Media Go.....	99
Transferring content using Content Transfer.....	100
Transferring content using Explorer.....	101
Transferring content using the Finder.....	103
Notes for transferring content such as music from your computer.....	105
Deleting Content from Your Walkman.....	32
Deleting content from your Walkman using Media Go.....	106
Deleting content from your Walkman using Content Transfer.....	107
Deleting content from your Walkman using Explorer.....	108
Deleting content from your Walkman using the Finder.....	109
Operating with Media Go.....	33
Deleting content imported to Media Go.....	110
Music.....	4
Playing Music.....	34
Preparing music.....	111
Playing music.....	112
Browsing the music list screen.....	113
Volume operation (Only for countries/areas complying with European Directives).....	114
Browsing the music playback screen.....	115
Music playback operations.....	117
Searching for songs.....	119
Playing playlist songs.....	120
Choosing an album from the cover art images.....	121
Deleting Songs.....	35
Deleting songs.....	122

Music Settings.....	36
Shuffle playback.....	123
Repeat playback.....	124
Customizing sound quality settings.....	125
Presetting your equalizer settings.....	126
Photos.....	5
Viewing Photos.....	37
Preparing photos.....	127
Viewing photos.....	128
Browsing the photo screen.....	129
Operations on the photo screen.....	130
Browsing photos using the Slide Show function.....	131
Deleting photos.....	132
Photo Settings.....	38
Changing the photo information display setting.....	133
Playing the Slide Show repeatedly.....	134
FM Radio.....	6
Listening to FM Radio.....	39
Listening to FM radio.....	135
Browsing the FM radio screen.....	136
FM radio operations.....	137
Presetting broadcast stations automatically.....	138
Presetting broadcast stations manually.....	139
Deleting preset broadcast stations.....	140
FM Radio Settings.....	40
Changing the FM radio scan sensitivity.....	141
Setting monaural/auto for FM radio.....	142
Settings.....	7
Music Settings.....	41
Shuffle playback.....	123
Repeat playback.....	124
Customizing sound quality settings.....	125
Presetting your equalizer settings.....	126
Photo Settings.....	42
Changing the photo information display setting.....	133
Playing the Slide Show repeatedly.....	134
FM Radio Settings.....	43
Changing the FM radio scan sensitivity.....	141
Setting monaural/auto for FM radio.....	142
Sleep Timer Settings.....	44

Setting the sleep timer.....	143
Common Settings.....	45
Displaying your Walkman information.....	88
Limiting the volume.....	144
Setting the operation sound.....	145
Setting the screen off timer.....	146
Adjusting the screen brightness.....	147
Resetting to the factory settings.....	85
Formatting memory.....	86
Language Settings.....	46
Selecting the display language.....	74
Announcement.....	8
Precautions.....	47
Notes on handling your Walkman.....	148
Notes on headphones.....	151
Notes on the software.....	152
Maintenance of your Walkman.....	153
Customer Support Website.....	48
Customer support website.....	154
Specifications.....	9
Specifications.....	49
Specifications.....	155
Battery life.....	157
Maximum recordable number of songs and time (Approx.).....	158
Supported formats.....	159
System requirements.....	161
Contents.....	162
Troubleshooting.....	10
What Can I Do to Solve a Problem?.....	50
What can I do to solve a problem?.....	163
Customer support website.....	154
Q&A.....	11
Operation.....	51
Your Walkman does not operate or the power does not turn on.....	164
Your Walkman does not work properly.....	165
Your Walkman power turns off or on automatically.....	166
You want your Walkman screen to stay on longer before it turns off automatically.....	167
A drink (water, coffee, etc.) was spilled on your Walkman, or the Walkman was washed in the washing machine.....	168

You want to back up the content such as music stored on your Walkman.....	169
You want to find the product name (model name) of your Walkman.....	170
An alarm (beep) is heard and the message [Check the volume level] is displayed.....	171
Sound.....	52
There is no sound.....	172
Content such as music suddenly stops during playback.....	173
Noise is generated.....	174
Volume cannot be turned up, or the volume remains low when the playback volume is turned up.....	175
Sound can only be heard from one side of the headphones.....	176
Sound is interrupted or skips.....	177
The sound effect settings do not seem to have any effect.....	178
Power.....	53
You cannot charge your Walkman.....	179
How long is the life of the built-in rechargeable battery?.....	180
The rechargeable battery needs to be replaced.....	181
The battery life is short.....	182
How long is the standard battery duration?.....	183
How long does it take to charge the battery?.....	184
Connection to a Computer.....	54
The computer does not recognize your Walkman.....	185
Even if you use "Safely Remove Hardware" on the computer, [Connected USB. The player cannot be operated.] remains displayed on your Walkman screen.....	186
You cannot install software to your computer.....	187
The progress bar on the install screen does not proceed while installing the software.....	188
Your Walkman is not recognized by Media Go.....	189
Content such as music cannot be transferred from the computer to your Walkman.....	190
Displaying/Playing/Deleting Content.....	55
You cannot play content such as music transferred to your Walkman.....	191
Songs are not played back in the expected order.....	192
Playback progresses to the next album when repeat playback is set.....	193
Songs are only played within a limited range such as within one album.....	194
Songs are not displayed in the order they were transferred in.....	195
The content such as music is displayed repeatedly.....	196
Thumbnails such as cover art are not displayed.....	197
[%i] is displayed in the screen.....	198

[Unknown] is displayed for the album name or artist name.....	199
You cannot delete content such as music using the Walkman functions.....	200
FM Radio.....	56
You cannot hear FM radio broadcasts.....	201
There is a lot of noise in an FM radio broadcast and the sound quality is poor.....	202
Other.....	57
Your Walkman gets warm.....	203
Message.....	58
Message list.....	204
How to Use.....	12
Troubleshooting.....	16

Digital Music Player
NW-E393/E394/E395

Getting Started

[Customer Registration Website](#)



[Before Use](#)



[Enjoying Using Your Walkman](#)



[Parts and Controls](#)




[Power/Charging](#)



[Initial Settings](#)





How to Use

Digital Music Player
NW-E393/E394/E395

Basic Operations

[Home Menu/Option Menu](#)



[Connecting Your Walkman to Your Computer](#)



[Initializing/Updating](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Transferring/Deleting Content

[Operation Flow for Transferring Content to Your Walkman](#)



[Installing Media Go](#)



[Installing Content Transfer](#)



[Importing Content to the Software](#)



[Transferring Content to Your Walkman](#)



[Deleting Content from Your Walkman](#)



[Operating with Media Go](#)



Digital Music Player
NW-E393/E394/E395

Music

[Playing Music](#)



[Deleting Songs](#)




[Music Settings](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Photos

[Viewing Photos](#)



[Photo Settings](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

FM Radio

[Listening to FM Radio](#)



[FM Radio Settings](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Settings

[Music Settings](#)



[Photo Settings](#)



[FM Radio Settings](#)



[Sleep Timer Settings](#)




[Common Settings](#)



[Language Settings](#)





How to Use

Digital Music Player
NW-E393/E394/E395

Announcement

[Precautions](#)




[Customer Support Website](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Specifications

[Specifications](#)



4-579-798-11(1)
Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Troubleshooting

[What Can I Do to Solve a Problem?](#)



4-579-798-11(1)
Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Q&A

[Operation](#)



[Sound](#)



[Power](#)



[Connection to a Computer](#)



[Displaying/Playing/Deleting Content](#)



[FM Radio](#)



[Other](#)



[Message](#)



Digital Music Player
NW-E393/E394/E395

How to Use

Getting Started

Customer Registration Website

- [Customer registration website](#)

Before Use

- [Before first use](#)
- [Walkman instruction manuals](#)
- [How to use the operating explanations](#)

Enjoying Using Your Walkman

- [3 steps to listening to music](#)
- [Various ways to enjoy using your Walkman](#)

Parts and Controls

- [Parts and controls](#)

Power/Charging

- [Turning the power on](#)
- [Turning the power off](#)
- [Using the HOLD switch](#)
- [Charging the battery](#)
- [Extending the battery life](#)
- [Notes on charging the battery](#)

Initial Settings

- [Selecting the display language](#)

Basic Operations

Home Menu/Option Menu

- [Home menu](#)
- [How to use the Home menu](#)
- [How to use the option menu](#)
- [List of icons displayed in the information area](#)

Connecting Your Walkman to Your Computer

- [Connecting to a computer](#)
- [Notes on connecting your Walkman to a computer](#)

Initializing/Updating

- [Restarting your Walkman](#)
- [Resetting to the factory settings](#)
- [Formatting memory](#)
- [Updating the system software of your Walkman](#)
- [Displaying your Walkman information](#)

Transferring/Deleting Content

Operation Flow for Transferring Content to Your Walkman

- [Preparing content using a Windows computer](#)
- [Preparing content using a Mac computer](#)

Installing Media Go

- [About Media Go](#)
- [Installing Media Go](#)

Installing Content Transfer

- [About Content Transfer](#)
- [Installing Content Transfer](#)

Importing Content to the Software

- [Importing and transferring content from media using Media Go](#)
- [Importing content on your Windows computer into Media Go](#)

Transferring Content to Your Walkman

- [Transferring content using Media Go](#)
- [Transferring iTunes content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)
- [Notes for transferring content such as music from your computer](#)

Deleting Content from Your Walkman

- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Content Transfer](#)
- [Deleting content from your Walkman using Explorer](#)
- [Deleting content from your Walkman using the Finder](#)

Operating with Media Go

- [Deleting content imported to Media Go](#)

Music

Playing Music

- [Preparing music](#)
- [Playing music](#)
- [Browsing the music list screen](#)
- [Volume operation \(Only for countries/areas complying with European Directives\)](#)

- [Browsing the music playback screen](#)
- [Music playback operations](#)
- [Searching for songs](#)
- [Playing playlist songs](#)
- [Choosing an album from the cover art images](#)

Deleting Songs

- [Deleting songs](#)

Music Settings

- [Shuffle playback](#)
- [Repeat playback](#)
- [Customizing sound quality settings](#)
- [Presetting your equalizer settings](#)

Photos

Viewing Photos

- [Preparing photos](#)
- [Viewing photos](#)
- [Browsing the photo screen](#)
- [Operations on the photo screen](#)
- [Browsing photos using the Slide Show function](#)
- [Deleting photos](#)

Photo Settings

- [Changing the photo information display setting](#)
- [Playing the Slide Show repeatedly](#)

FM Radio

Listening to FM Radio

- [Listening to FM radio](#)
- [Browsing the FM radio screen](#)
- [FM radio operations](#)
- [Presetting broadcast stations automatically](#)
- [Presetting broadcast stations manually](#)
- [Deleting preset broadcast stations](#)

FM Radio Settings

- [Changing the FM radio scan sensitivity](#)
- [Setting monaural/auto for FM radio](#)

Settings

Music Settings

- [Shuffle playback](#)
- [Repeat playback](#)

[Customizing sound quality settings](#)

- [Presetting your equalizer settings](#)

Photo Settings

- [Changing the photo information display setting](#)
- [Playing the Slide Show repeatedly](#)

FM Radio Settings

- [Changing the FM radio scan sensitivity](#)
- [Setting monaural/auto for FM radio](#)

Sleep Timer Settings

- [Setting the sleep timer](#)

Common Settings

- [Displaying your Walkman information](#)
- [Limiting the volume](#)
- [Setting the operation sound](#)
- [Setting the screen off timer](#)
- [Adjusting the screen brightness](#)
- [Resetting to the factory settings](#)
- [Formatting memory](#)

Language Settings

- [Selecting the display language](#)

Announcement

Precautions

- [Notes on handling your Walkman](#)
- [Notes on headphones](#)
- [Notes on the software](#)
- [Maintenance of your Walkman](#)

Customer Support Website

- [Customer support website](#)

Specifications

Specifications

- [Specifications](#)
- [Battery life](#)
- [Maximum recordable number of songs and time \(Approx.\)](#)
- [Supported formats](#)
- [System requirements](#)
- [Contents](#)

Digital Music Player
NW-E393/E394/E395

Troubleshooting

Troubleshooting

What Can I Do to Solve a Problem?

- [What can I do to solve a problem?](#)
- [Customer support website](#)

Q&A

Operation

- [Your Walkman does not operate or the power does not turn on.](#)
- [Your Walkman does not work properly.](#)
- [Your Walkman power turns off or on automatically.](#)
- [You want your Walkman screen to stay on longer before it turns off automatically.](#)
- [A drink \(water, coffee, etc.\) was spilled on your Walkman, or the Walkman was washed in the washing machine.](#)
- [You want to back up the content such as music stored on your Walkman.](#)
- [You want to find the product name \(model name\) of your Walkman.](#)
- [An alarm \(beep\) is heard and the message \[Check the volume level\] is displayed.](#)

Sound

- [There is no sound.](#)
- [Content such as music suddenly stops during playback.](#)
- [Noise is generated.](#)
- [Volume cannot be turned up, or the volume remains low when the playback volume is turned up.](#)
- [Sound can only be heard from one side of the headphones.](#)
- [Sound is interrupted or skips.](#)
- [The sound effect settings do not seem to have any effect.](#)

Power

- [You cannot charge your Walkman.](#)
- [How long is the life of the built-in rechargeable battery?](#)
- [The rechargeable battery needs to be replaced.](#)
- [The battery life is short.](#)
- [How long is the standard battery duration?](#)
- [How long does it take to charge the battery?](#)

Connection to a Computer

- [The computer does not recognize your Walkman.](#)

- Even if you use "Safely Remove Hardware" on the computer, [Connected USB. The player cannot be operated.] remains displayed on your Walkman screen.
- You cannot install software to your computer.
- The progress bar on the install screen does not proceed while installing the software.
- Your Walkman is not recognized by Media Go.
- Content such as music cannot be transferred from the computer to your Walkman.

Displaying/Playing/Deleting Content

- You cannot play content such as music transferred to your Walkman.
- Songs are not played back in the expected order.
- Content such as music suddenly stops during playback.
- Playback progresses to the next album when repeat playback is set.
- Songs are only played within a limited range such as within one album.
- Songs are not displayed in the order they were transferred in.
- The content such as music is displayed repeatedly.
- Thumbnails such as cover art are not displayed.
- [□] is displayed in the screen.
- [Unknown] is displayed for the album name or artist name.
- You cannot delete content such as music using the Walkman functions.

FM Radio

- You cannot hear FM radio broadcasts.
- There is a lot of noise in an FM radio broadcast and the sound quality is poor.

Other

- Your Walkman gets warm.

Message

- [Message list](#)

Digital Music Player
NW-E393/E394/E395

Customer Registration Website

[Customer registration website](#)

View information on websites where you can register your Walkman.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Before Use

[Before first use](#)

Be sure to read this manual before you use your Walkman for the first time.

[Walkman instruction manuals](#)

There are a wide variety of instruction manuals available in addition to this Help Guide.

[How to use the operating explanations](#)

This section explains how the operating explanations are written in this Help Guide.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Enjoying Using Your Walkman

[3 steps to listening to music](#)

This section explains how you can start enjoying using your Walkman after purchase in three simple steps.




[Various ways to enjoy using your Walkman](#)

Your Walkman can do more than simply play back music. Get to know more about various ways you can enjoy using the Walkman.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Parts and Controls

[Parts and controls](#)

This section introduces the functions of buttons, jacks, and other parts of your Walkman.



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Power/Charging

[Turning the power on](#)

Turn on the power to start your Walkman.

[Turning the power off](#)

Turn off the power when not using your Walkman.

[Using the HOLD switch](#)

You can use the HOLD switch to prevent the buttons from being pressed and operated accidentally.

[Charging the battery](#)

Charge your Walkman by connecting it to a computer.

[Extending the battery life](#)

This section introduces various ways to reduce battery consumption such as frequently turning the power off and changing various settings.

[Notes on charging the battery](#)

This section contains various notes about charging your Walkman.

Digital Music Player
NW-E393/E394/E395

Initial Settings

[Selecting the display language](#)

This section explains how to set the language for menus and messages.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Home Menu/Option Menu

[Home menu](#)

View the list of items in the Home menu.



[How to use the Home menu](#)

This section explains the basic operations of the Home menu, which is the starting point of each function.



[How to use the option menu](#)

Display the option menu to change the settings of each function.



[List of icons displayed in the information area](#)

A list of the icons displayed on your Walkman is shown.





Digital Music Player
NW-E393/E394/E395

Connecting Your Walkman to Your Computer

[Connecting to a computer](#)

Connect your Walkman to a computer via USB to charge the Walkman or transfer data.



[Notes on connecting your Walkman to a computer](#)

This section contains notes on connecting your Walkman to a computer.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Initializing/Updating

[Restarting your Walkman](#)

Restart your Walkman if operations become unstable.

[Resetting to the factory settings](#)

Reset your Walkman to the default settings.

[Formatting memory](#)


Initialize your Walkman by formatting the memory.

[Updating the system software of your Walkman](#)

Add new features to your Walkman by installing the latest system software.

[Displaying your Walkman information](#)

Display information on your Walkman, such as the model name and system software version.



Digital Music Player
NW-E393/E394/E395

Operation Flow for Transferring Content to Your Walkman

[Preparing content using a Windows computer](#)


Installing the latest version of Media Go, available on the Internet, enables you to import CDs, download and manage content from online music services, and transfer them to the Walkman. >

[Preparing content using a Mac computer](#)

Installing the latest version of Content Transfer, available on the Internet, enables you to transfer content to the Walkman. >

4-579-798-11(1)


Copyright 2016 Sony Corporation




Digital Music Player
NW-E393/E394/E395

Installing Media Go

[About Media Go](#)

Media Go is software that allows you to import various content to your Windows computer, manage the content and transfer it to your Walkman. 

[Installing Media Go](#)

Connect your Walkman to your Windows computer and install Media Go. 

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Installing Content Transfer

[About Content Transfer](#)

Content Transfer is software that allows you to transfer content managed with iTunes or the Finder to your Walkman.



[Installing Content Transfer](#)

Connect your Walkman to your Mac computer and install Content Transfer.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Importing Content to the Software

[Importing and transferring content from media using Media Go](#)

This section explains how to import and transfer music from CDs using Media Go.



[Importing content on your Windows computer into Media Go](#)

You can organize a wide range of content such as music that you have already imported to your Windows computer using other software together using Media Go.



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Transferring Content to Your Walkman

[Transferring content using Media Go](#)

Use Media Go to transfer content or playlists that are also managed on your computer to your Walkman.

[Transferring iTunes content using Media Go](#)

Use Media Go to transfer content on your computer or managed with iTunes to your Walkman.

[Transferring content using Content Transfer](#)

Use Content Transfer to transfer content or playlists on your Mac computer or managed with iTunes to your Walkman.

[Transferring content using Explorer](#)

Use drag-and-drop in Windows Explorer to directly transfer content to your Walkman.

[Transferring content using the Finder](#)

Use drag-and-drop in the Finder to directly transfer content to your Walkman.

[Notes for transferring content such as music from your computer](#)

When transferring files and folders to your Walkman by drag-and-drop, you need to make sure that the default folder names remain unchanged and the hierarchy is correct.



Digital Music Player
NW-E393/E394/E395

Deleting Content from Your Walkman

[Deleting content from your Walkman using Media Go](#)

Use Media Go to delete content stored on your Walkman.

[Deleting content from your Walkman using Content Transfer](#)

Use Content Transfer to delete content stored on your Walkman.

[Deleting content from your Walkman using Explorer](#)

Use Windows Explorer to delete content stored on your Walkman.

[Deleting content from your Walkman using the Finder](#)

Use the Finder to delete content stored on your Walkman.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Operating with Media Go

[Deleting content imported to Media Go](#)

Use Media Go to delete content imported to Media Go.



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Playing Music

[Preparing music](#)

You need to transfer music from your computer to your Walkman in order to listen to music on the Walkman.

[Playing music](#)

Play music that you transferred from your computer to your Walkman.

[Browsing the music list screen](#)

View the song list or album list screen.

[Volume operation \(Only for countries/areas complying with European Directives\)](#)

An alarm (beep) and a warning [Check the volume level] are meant to protect your ears when you turn the volume up to a level that is harmful for your ears for the first time.

[Browsing the music playback screen](#)

This section explains how to browse the information on the music playback screen.

[Music playback operations](#)

Use various operations on the music playback screen.

[Searching for songs](#)


You can quickly search a song by artist, genre, etc.

[Playing playlist songs](#)

Playlists (lists of songs to play) created using Media Go can be transferred and played on your Walkman.

[Choosing an album from the cover art images](#)

You can choose an album from the cover art images in the music playback screen by registering jacket photos using Media Go.



Digital Music Player
NW-E393/E394/E395

Deleting Songs

Deleting songs

Delete songs transferred to your Walkman.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Music Settings

[Shuffle playback](#)

Play songs in the playback range in random order.



[Repeat playback](#)

Play songs within a playback range repeatedly.



[Customizing sound quality settings](#)

You can use various functions to set the desired sound quality.



[Presetting your equalizer settings](#)

You can preset the value of the 5 band equalizer as a custom setting.



Digital Music Player
NW-E393/E394/E395

Viewing Photos

[Preparing photos](#)

You need to transfer photos onto your Walkman from your computer in order to view them on the Walkman.

[Viewing photos](#)

You can view photos that you have transferred onto your Walkman.

[Browsing the photo screen](#)

This section explains how to view the information displayed on the photo screen.

[Operations on the photo screen](#)

You can display the next/previous photo and consecutively display photos in the photo screen.

[Browsing photos using the Slide Show function](#)

You can watch series of photos stored in your Walkman using the Slide Show function.

[Deleting photos](#)

To delete photos from your Walkman, use the software on your computer that you used to transfer the photos.



Digital Music Player
NW-E393/E394/E395

Photo Settings

[Changing the photo information display setting](#)

You can set your Walkman to display or not display photo information while playing back photos.



[Playing the Slide Show repeatedly](#)

You can repeatedly play the Slide Show.



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Listening to FM Radio

[Listening to FM radio](#)

Listen to FM radio on your Walkman.

[Browsing the FM radio screen](#)

This section explains how to browse the information on the FM radio screen.

[FM radio operations](#)

Select the desired frequency or preset number on the FM radio screen.

[Presetting broadcast stations automatically](#)

You can search for and automatically preset up to 30 receivable FM broadcast stations in your area.

[Presetting broadcast stations manually](#)

You can manually preset receivable FM broadcast stations.

[Deleting preset broadcast stations](#)

You can delete preset FM broadcast stations.



Digital Music Player
NW-E393/E394/E395

FM Radio Settings

[Changing the FM radio scan sensitivity](#)

You can change the scan sensitivity if the FM radio reception sensitivity is too strong, causing many unwanted broadcast stations to be received.



[Setting monaural/auto for FM radio](#)

You can change this setting if noise occurs during FM reception.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Music Settings

[Shuffle playback](#)

Play songs in the playback range in random order.



[Repeat playback](#)

Play songs within a playback range repeatedly.



[Customizing sound quality settings](#)

You can use various functions to set the desired sound quality.



[Presetting your equalizer settings](#)

You can preset the value of the 5 band equalizer as a custom setting.





Digital Music Player
NW-E393/E394/E395

Photo Settings

[Changing the photo information display setting](#)

You can set your Walkman to display or not display photo information while playing back photos.




[Playing the Slide Show repeatedly](#)

You can repeatedly play the Slide Show.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

FM Radio Settings

[Changing the FM radio scan sensitivity](#)

You can change the scan sensitivity if the FM radio reception sensitivity is too strong, causing many unwanted broadcast stations to be received.



[Setting monaural/auto for FM radio](#)

You can change this setting if noise occurs during FM reception.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Sleep Timer Settings

[Setting the sleep timer](#)

You can change the set time of the sleep timer. Your Walkman power switches off automatically at the set time.



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Common Settings

[Displaying your Walkman information](#)

Display information on your Walkman, such as the model name and system software version.

[Limiting the volume](#)

You can use AVLS (Automatic Volume Limiter System) to limit the maximum volume.

[Setting the operation sound](#)

You can change the operation sounds of your Walkman.

[Setting the screen off timer](#)

You can set the time after which the screen is turned off when there are no operations. You can preserve battery power by setting this to a shorter time.

[Adjusting the screen brightness](#)

You can set the screen brightness to one of five levels. You can preserve battery power by setting this to a lower level.

[Resetting to the factory settings](#)

Reset your Walkman to the default settings.

[Formatting memory](#)

Initialize your Walkman by formatting the memory.

Digital Music Player
NW-E393/E394/E395

Language Settings

[Selecting the display language](#)

This section explains how to set the language for menus and messages.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Precautions

[Notes on handling your Walkman](#)

Important information for using your Walkman is explained.

[Notes on headphones](#)


Important notes for the headphones are explained.

[Notes on the software](#)

Important notes for the software are explained.

[Maintenance of your Walkman](#)

Important notes for cleaning your Walkman are explained.



Digital Music Player
NW-E393/E394/E395

Customer Support Website

[Customer support website](#)

Visit the customer support website if you have any questions or issues with your Walkman.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Specifications

[Specifications](#)

Details on the Walkman specifications (size, weight, and memory size, etc.) are shown.

[Battery life](#)

The estimated battery usage hours based on typical usage conditions and settings are explained.

[Maximum recordable number of songs and time \(Approx.\)](#)

The maximum recordable number of songs and time are explained.

[Supported formats](#)

The file formats that are supported by your Walkman are explained.

[System requirements](#)

Details on the system requirements needed to use your Walkman (the operating system version and memory size, etc.) are shown.

[Contents](#)


A list of the supplied items with your Walkman is shown.



Digital Music Player
NW-E393/E394/E395

What Can I Do to Solve a Problem?

[What can I do to solve a problem?](#)

This section contains solutions for when your Walkman does not function as expected or if a problem occurs during operation. 

[Customer support website](#)

Visit the customer support website if you have any questions or issues with your Walkman. 

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Operation

Your Walkman does not operate or the power does not turn on. 

Your Walkman does not work properly. 

Your Walkman power turns off or on automatically. 

You want your Walkman screen to stay on longer before it turns off automatically. 

A drink (water, coffee, etc.) was spilled on your Walkman, or the Walkman was washed in the washing machine. 

You want to back up the content such as music stored on your Walkman. 

You want to find the product name (model name) of your Walkman. 

An alarm (beep) is heard and the message [Check the volume level] is displayed. 

Digital Music Player
NW-E393/E394/E395

Sound

[There is no sound.](#)



[Content such as music suddenly stops during playback.](#)



[Noise is generated.](#)



[Volume cannot be turned up, or the volume remains low when the playback volume is turned up.](#)



[Sound can only be heard from one side of the headphones.](#)



[Sound is interrupted or skips.](#)



[The sound effect settings do not seem to have any effect.](#)



Digital Music Player
NW-E393/E394/E395

Power


[You cannot charge your Walkman.](#) 

[How long is the life of the built-in rechargeable battery?](#) 

[The rechargeable battery needs to be replaced.](#) 

[The battery life is short.](#) 

[How long is the standard battery duration?](#) 

[How long does it take to charge the battery?](#) 


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Connection to a Computer

The computer does not recognize your Walkman. 

Even if you use "Safely Remove Hardware" on the computer, [Connected USB. The player cannot be operated.] remains displayed on your Walkman screen. 

You cannot install software to your computer. 


The progress bar on the install screen does not proceed while installing the software. 

Your Walkman is not recognized by Media Go. 

Content such as music cannot be transferred from the computer to your Walkman. 

Digital Music Player
NW-E393/E394/E395

Displaying/Playing/Deleting Content


You cannot play content such as music transferred to your Walkman. 

Songs are not played back in the expected order. 

Content such as music suddenly stops during playback. 

Playback progresses to the next album when repeat playback is set. 

Songs are only played within a limited range such as within one album. 

Songs are not displayed in the order they were transferred in. 

The content such as music is displayed repeatedly. 

Thumbnails such as cover art are not displayed. 

[□] is displayed in the screen. 

[Unknown] is displayed for the album name or artist name. 

You cannot delete content such as music using the Walkman functions. 

Digital Music Player
NW-E393/E394/E395

FM Radio

You cannot hear FM radio broadcasts.



There is a lot of noise in an FM radio broadcast and the sound quality is poor.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Other

[Your Walkman gets warm.](#)





Digital Music Player
NW-E393/E394/E395

Message

[Message list](#)

This section explains messages and their causes and solutions.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Customer registration website

We recommend that you register your Walkman so we can provide better customer support. Visit one of the following websites to register the Walkman.

For customers in the USA:

<http://www.sony.com/walkmanreg/>

For customers in Canada:

English

<http://www.Sony.ca/Registration>

French

<http://www.Sony.ca/Enregistrement>

For customers in Latin America:

<http://www.sony-latin.com/registration>

For customers in Europe:

www.sony.eu/mysony

For customers in Asia/Oceania/Middle East/Africa:

English/Korean/Traditional Chinese

<http://www.sony-asia.com/dmpwalkman/register/>

Simplified Chinese

https://www.sonystyle.com.cn/b2c_sony/b2c/productRegister.do

Digital Music Player
NW-E393/E394/E395

Before first use

Thank you for purchasing this Walkman.

This “Help Guide” explains how to transfer content to your Walkman, and how to use the various functions. Browse this “Help Guide” for necessary information.

The printed manuals (supplied), such as “Instruction Manual,” also contain important information for you. For information about the customer support website, see “Customer support website.”

- For information on laws, regulations and trademark rights, refer to “Important Information” contained in the supplied software. To read it, install the supplied software on your computer.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and ® marks are not specified.

About model names mentioned in this “Help Guide”

Depending on the country/region in which you have purchased your Walkman, some models may not be available.

Computer system requirements when connecting your Walkman

See “System requirements” for details on computer system requirements.

Battery charging

The battery might be low when you use your Walkman for the first time. Charge the battery before using the Walkman.

About images used in this “Help Guide”

The screens and illustrations shown are for reference only and may differ from the actual product or screen.

Design and specifications are subject to change without notice.

Related Topic

- [System requirements](#)
- [Customer support website](#)
- [Charging the battery](#)
- [Walkman instruction manuals](#)
- [Notes on handling your Walkman](#)

Digital Music Player
NW-E393/E394/E395

Walkman instruction manuals

The operations of this Walkman are explained in the following instruction manuals.

(Startup Guide) (paper)

Describes the operation flow from turning your Walkman on to listening to music.

Instruction Manual (paper)

Describes the notes on use, compliance and other information.

Help Guide

You are currently viewing the Help Guide. This contains information such as explanations of Walkman operations and software.

Important Information



Contains information on trademark rights, laws, and regulations. You can read it by installing the software (supplied) on your computer.


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395


How to use the operating explanations

This Help Guide shows icons on your Walkman as follows:  [Music],  [Settings]. Items such as menus on the screen are shown as follows: [Album], [Play Mode].

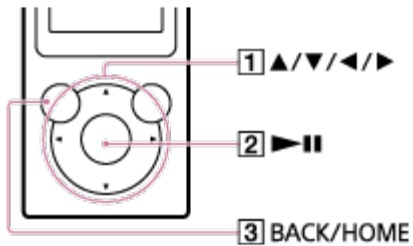

Press the button (1) to select items. Press the button (2) to confirm.

Home menu

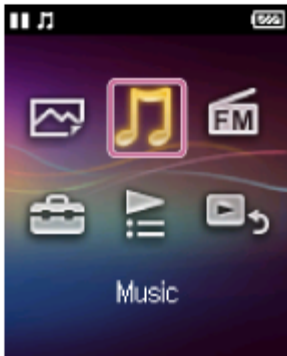

Press and hold the button (3) to display the Home menu.

Note

- Except for some special cases, operating explanations assume that you are starting from the Home menu. Operations may differ from the explanation in situations such as during playback of music.
- If a function or setting can be done in more than one way, the simpler method is explained.


Related Topic

- [Home menu](#)
- [How to use the Home menu](#)

Digital Music Player
NW-E393/E394/E395

3 steps to listening to music

Be sure to charge the battery before you use your Walkman for the first time. You can transfer music while charging the battery. You can listen to your music as soon as the transfer has completed.

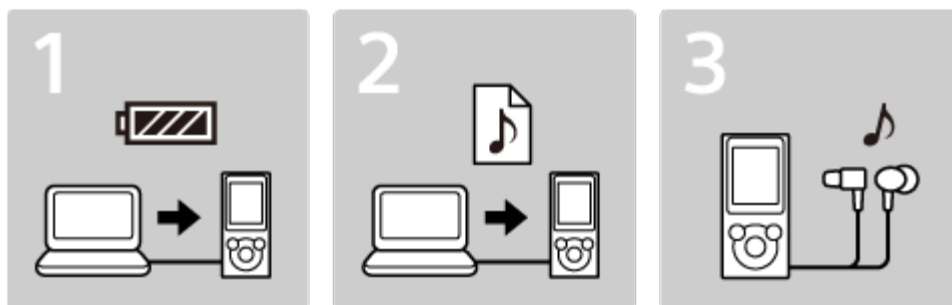

1. Connect your Walkman to a computer.

You can charge the battery by connecting your Walkman via a USB connection to a computer that is turned on and running.

2. Import music to your computer and transfer the music to your Walkman.

For Windows users

- Recommended: Install the latest version of Media Go, which is available on the Internet. You can transfer music that you have imported from CDs or downloaded from online music services to your Walkman.
- You can transfer music by drag-and-drop directly from Windows Explorer to your Walkman.

For Mac users

- Recommended: Install the latest version of Content Transfer, which is available on the Internet. You can transfer music and playlists that are managed with iTunes to your Walkman by an easy operation.
- You can transfer music by drag-and-drop directly from the Finder to your Walkman.

3. Enjoy your music!

Connect the headphones, unlock the HOLD function, and turn on your Walkman. Then simply select the music you want to listen to to start playback!

Related Topic

- [Charging the battery](#)

- Installing Media Go
- Importing and transferring content from media using Media Go
- Transferring content using Media Go
- Installing Content Transfer
- Transferring content using Content Transfer
- Transferring content using Explorer
- Transferring content using the Finder
- Turning the power on
- Playing music

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Various ways to enjoy using your Walkman

Your Walkman can do more than simply play back music. Get to know more about various ways you can enjoy using the Walkman.

Viewing photos

You can enjoy viewing photos stored on your Walkman while you are listening to music.

Listening to FM radio

You can enjoy listening to FM radio on your Walkman.

Related Topic

- [Viewing photos](#)
- [Listening to FM radio](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Parts and controls

This section explains the functions of buttons, jacks, and other parts of your Walkman.

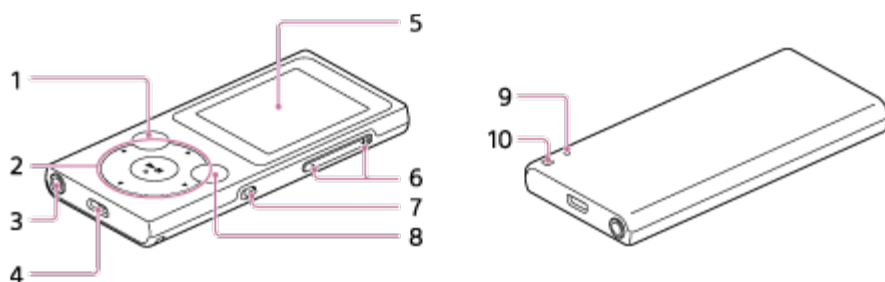

1. BACK/HOME button

Press to go up one list screen level or to return to the previous menu.

Press and hold to display the Home menu.

2. 5-way button


Press the **▶||** button at the center to start playback, or press the **▲/▼/◀/▶** marks to navigate through the on-screen menus of your Walkman.

There is a tactile dot on the **▶||** button to help you operate the buttons without looking.

3. Headphone jack

Insert the headphone plug until it clicks into place.

Sound will be impaired if the headphones are not connected properly.

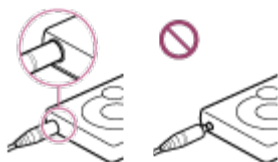

4. USB jack

Connect the USB cable (supplied) or other accessories that support microUSB (not supplied).

5. Display

6. VOL (Volume) +/- button

Press to adjust the volume.

There is a tactile dot on the + button to help you operate the buttons without looking.

7. HOLD switch

Set the HOLD switch to protect your Walkman against accidental operation during transportation.

Slide the HOLD switch in the direction of the arrow (**➡**) to disable all operation buttons. Slide the HOLD switch to the opposite position to release the HOLD function.

8. OPTION/POWER button

Press to display the option menu.

Press and hold to turn your Walkman on. Press and hold again to turn your Walkman off. The screen will go blank and the power will turn off.

9. RESTART button

Press the RESTART button with a small pin, etc. to restart your Walkman.

10. Strap hole

Use to attach a strap (not supplied).

Related Topic

- [Turning the power on](#)
- [Turning the power off](#)
- [Home menu](#)
- [How to use the Home menu](#)
- [How to use the option menu](#)
- [Using the HOLD switch](#)
- [Restarting your Walkman](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Turning the power on

Turn on the power to start your Walkman.

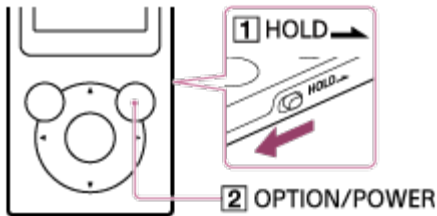

1. Press and hold the button (2).
Slide the switch (1) to unlock the Walkman when you want to operate it.

Hint

- If there is no operation, the screen will be turned off. To turn on the screen, press the button (2).
- If there is no operation for an extended period, your Walkman will be turned off automatically. When you turn on the Walkman again, it will take a while before the power comes on.


Related Topic

- [Turning the power off](#)
- [Using the HOLD switch](#)
- [Setting the screen off timer](#)

Digital Music Player
NW-E393/E394/E395

Turning the power off

Turn off the power when not using your Walkman.

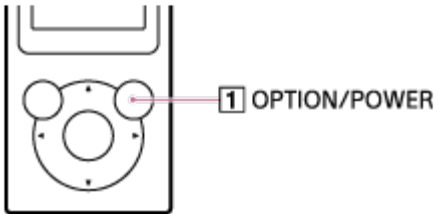

1. Press and hold the button (1).
[POWER OFF] appears.

Hint

- If there is no operation for an extended period, your Walkman will be turned off automatically.


Related Topic

- [Turning the power on](#)
- [Setting the screen off timer](#)

Digital Music Player
NW-E393/E394/E395

Using the HOLD switch

You can use the HOLD switch to prevent the buttons from being pressed and operated accidentally.

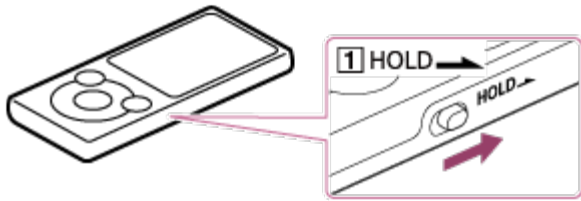

1. Slide the switch (1) in the direction of the arrow.
The HOLD function is enabled and all operation buttons are disabled.

Hint

- Slide the switch (1) in the opposite position to release the HOLD function.
- **HOLD** flashes at the top of the screen if buttons are pressed while the HOLD function is enabled.

Related Topic


[Parts and controls](#)



Digital Music Player
NW-E393/E394/E395

Charging the battery

Charge your Walkman by connecting it to a computer.

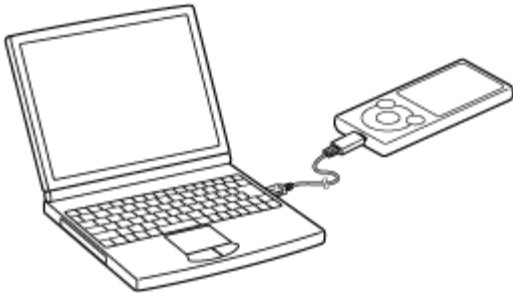

1. Connect your Walkman to a running computer via USB.
The battery status icon shows **Full** when charging is complete.
2. Disconnect your Walkman from the computer when charging is complete.

Hint

- For information about the time to fully charge the battery, see “Specifications.”

Note

- When you charge your Walkman when it has not been used for a long period of time or when you use it for the first time, your computer may not recognize it. The Walkman should start operating normally again after charging for about 10 minutes.
- You cannot operate your Walkman when it is connected to a computer.

Related Topic

- [Connecting to a computer](#)
- [Extending the battery life](#)
- [Notes on charging the battery](#)
- [Specifications](#)



Digital Music Player
NW-E393/E394/E395

Extending the battery life

You can reduce battery consumption by using your Walkman as follows.

For a comparison of battery life based on set effects, default settings and functions, see “Battery life.”

- Turn off the power manually.
- Set a shorter time for [Screen Off Timer].
- Adjust the screen brightness.
- Set all sound quality settings to off.


Related Topic

- [Turning the power off](#)
- [Setting the screen off timer](#)
- [Adjusting the screen brightness](#)
- [Customizing sound quality settings](#)
- [Battery life](#)



Digital Music Player
NW-E393/E394/E395

Notes on charging the battery


- The charging time differs depending on the battery usage conditions.
- If the battery life is reduced to about half of its normal life even if sufficiently charged, it has probably worn out. Please contact your nearest Sony dealer.
- If you charge your Walkman when it has not been used for a long period of time, your computer may not recognize it, or the Walkman may not respond. Charge the Walkman for about 10 minutes, after which it should start operating normally again.
- When the ambient temperature exceeds the recommended range,  is displayed on the screen and charging is forcibly stopped. Charge the battery in an ambient temperature between 5 °C to 35 °C (41 °F to 95 °F).
- The number of times the battery can be recharged from complete discharge is approximately 500 times. This number may vary depending on the conditions under which you use your Walkman.
- To prevent battery deterioration, charge the battery at least once every six months or every year.
- Charging is not guaranteed with homebuilt or modified computers.
- Operation with a USB port extended with a USB hub is only guaranteed when a self-powered USB hub that carries an authorized logo is used.
- Do not leave your Walkman connected for an extended period of time to a laptop computer that is not connected to an AC power supply. Doing so may discharge the computer's battery.
- Do not turn on, restart, wake up from sleep mode, or shut down the computer with your Walkman connected to the computer via USB. Doing so may cause the Walkman to malfunction. Disconnect the Walkman from the computer before conducting these operations.
- Your Walkman may become hot while charging. This is not a malfunction.
- You cannot operate your Walkman when it is connected to a computer.
- The battery indicator scales are not equal. Refer the battery indicator as a guide.
- [Do not disconnect.] is displayed when transferring data between your Walkman and the computer. Do not remove the USB cable when [Do not disconnect.] is displayed. Doing so may result in a loss of the data being transferred and data on the Walkman.



Digital Music Player
NW-E393/E394/E395

Selecting the display language

You can select the language for menus and messages.

1. From the Home menu, select  [Settings].
2. Select [Language Settings] - desired language setting.

Hint

- Select the display language before transferring content.

Related Topic







[How to use the Home menu](#)

Digital Music Player
NW-E393/E394/E395

Home menu

The following list shows the items in the Home menu.



1. Information area
2.  [Photos]
View photos transferred to your Walkman.
3.  [Music]
Listen to songs transferred to your Walkman.
4.  [Settings]
Set up your Walkman and its functions.
5.  [FM Radio]
Listen to FM radio broadcasts.
6.  [Go to song playback screen]
Display the music playback screen.
7.  [Playlists]
Play songs from playlists transferred using Media Go, etc. to your Walkman.


Related Topic


- [How to use the Home menu](#)
- [Listening to FM radio](#)
- [Viewing photos](#)
- [Playing music](#)

Digital Music Player
NW-E393/E394/E395

How to use the Home menu


The Home menu is the starting point for all applications such as those for searching for songs and changing settings.

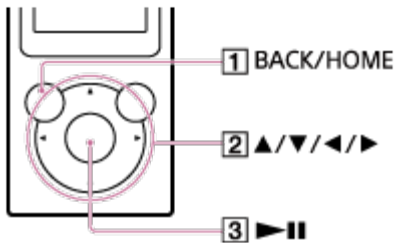


1. Press and hold the button (1) until the Home menu appears.
2. Press the button (2) to select the desired menu (for example  [Music]) and then press the button (3) to confirm.



3. Press the button (2) to select the desired function (for example [Album]) and then press the button (3) to confirm.

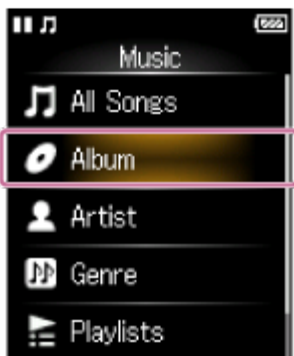

4. Press the button (2) to select the desired content (for example a desired album) and then press the button (3) to confirm.

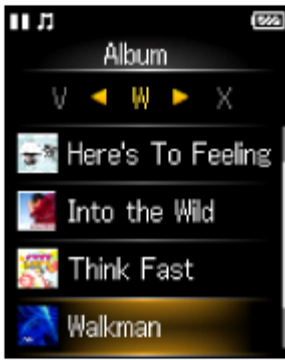

5. Press the button (2) to select the desired content (for example a desired song) and then press the button (3) to confirm.



Hint

- Press the button (1) to return to the previous screen during an operation.
- Press and hold the button (1) to return to the Home menu during an operation.


4-579-798-11(1)

Copyright 2016 Sony Corporation


Digital Music Player
NW-E393/E394/E395

How to use the option menu

Display the option menu by pressing the OPTION/POWER button. The option menu items vary depending on the function and allow you to change the settings.

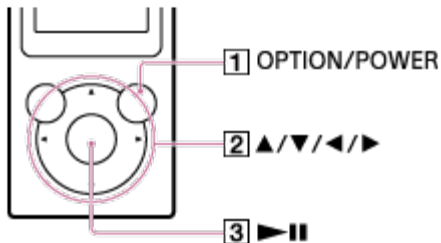

1. Press the button (1) while your Walkman is playing, for example while in the music playback screen.
2. Press the button (2) to select the desired menu (for example [Play Mode]) and then press the button (3) to confirm.

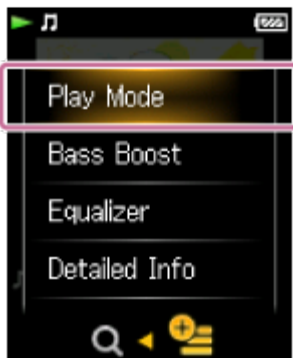

3. Press the button (2) to select the desired menu (for example [Shuffle]) and then press the button (3) to confirm.



Hint

- To dismiss the option menu, press the button (**1**) while the option menu is displayed.

Related Topic

● [Playing music](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
 NW-E393/E394/E395

List of icons displayed in the information area

The icons vary according to the playback status, setting and screen.



1. Information area

Icons in the information area

Playback status

▶ (play), || (pause), ►► (fast forward), ◀◀ (fast rewind), ►► (find the beginning of the next song), ◀◀ (find the beginning of the previous (or current) song), etc.

HOLD indication



Remaining battery power



Sleep timer



Music functions available



Related Topic

- [Music playback operations](#)
- [Using the HOLD switch](#)
- [Setting the sleep timer](#)
- [Playing music](#)
- [Limiting the volume](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Connecting to a computer

Connect your Walkman to a computer via USB to charge the Walkman or transfer data.

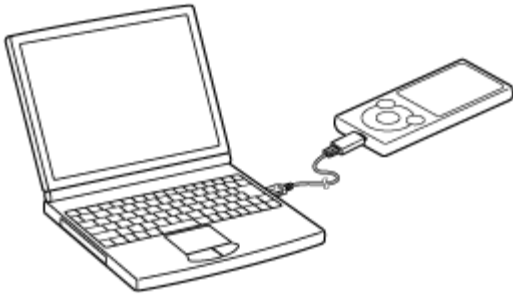

1. Connect your Walkman to a running computer via USB.

Note

- You cannot operate your Walkman when it is connected to a computer.

Hint

- If you are prompted to make a Windows operation, click “Cancel” or “x.”

Related Topic

- [Notes on connecting your Walkman to a computer](#)
- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Charging the battery](#)



Digital Music Player
NW-E393/E394/E395

Notes on connecting your Walkman to a computer

- Your Walkman cannot be operated when connected to a computer.
- Do not disconnect your Walkman from your computer when transferring data between the Walkman and the computer via USB. Doing so may result in loss of the data being transferred and data on the Walkman.
- Do not turn on, restart, wake up from sleep mode, or shut down the computer with your Walkman connected to the computer via USB. Doing so may cause the Walkman to malfunction. Disconnect the Walkman from the computer before conducting those operations.


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Restarting your Walkman

Try restarting your Walkman if operations become unstable. Before restarting the Walkman, disconnect the Walkman from your computer and check that no content such as music is being played. Otherwise, the data may be damaged.

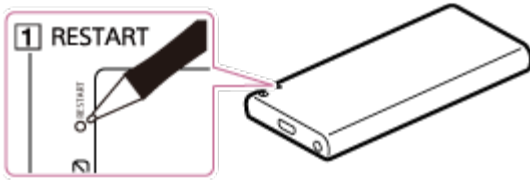

1. Press the button (1) with a pen or a paper clip, etc. to restart your Walkman.

Note

- Restarting your Walkman will not delete any data or reset any settings.

Related Topic


- [Resetting to the factory settings](#)
- [Formatting memory](#)
- [Customer support website](#)



Digital Music Player
NW-E393/E394/E395

Resetting to the factory settings

Your Walkman can be reset to the default settings. Resetting the Walkman will not delete content such as music.

1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Reset/Format] - [Reset All Settings] - [Yes].

Related Topic

- [Restarting your Walkman](#)
- [Formatting memory](#)

4-579-798-11(1)


Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Formatting memory

You can initialize your Walkman by formatting the memory.

1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Reset/Format] - [Format] - [Yes].
3. Follow the on-screen instructions to format the memory.

Note

- Be sure not to initialize (format) the memory of your Walkman using a computer. If you have formatted it with a computer, format it again using the Walkman.
- Formatting the memory erases all content data (songs, etc., including the sample data installed at the factory, and the supplied software installer). Be sure to check the data stored in the memory and export any important data to your computer before formatting.

Related Topic

- [Restarting your Walkman](#)
- [Resetting to the factory settings](#)

Digital Music Player
NW-E393/E394/E395

Updating the system software of your Walkman

You can add new features to your Walkman by installing the latest system software. For details on the latest system software information and how to install it, visit the customer support website for your area.

1. Download the update program to your computer from the website.
2. Connect your Walkman to your computer and start the update program.
3. Follow the on-screen instructions to update the system software of your Walkman.

Hint

- To confirm the version information of your Walkman, select  [Settings] - [Common Settings] - [Unit Information].

Related Topic


- [Customer support website](#)
- [Connecting to a computer](#)
- [Displaying your Walkman information](#)



Digital Music Player
NW-E393/E394/E395

Displaying your Walkman information

Display information such as model name and system software version.

1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Unit Information].

Related Topic

[Updating the system software of your Walkman](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Preparing content using a Windows computer

Installing the latest version of Media Go, available on the Internet, enables you to import CDs, download and manage content from online music services, and transfer them to the Walkman.

1. Install the latest version of Media Go, available on the Internet, on your Windows computer.
2. Import content to Media Go.
You can import content on media or your Windows computer to Media Go.
3. Transfer the content to your Walkman.
Transfer the imported content from Media Go to your Walkman.

Hint

- You can also transfer content directly from Windows Explorer to your Walkman by drag-and-drop.

Related Topic

- [About Media Go](#)
- [Installing Media Go](#)
- [Importing and transferring content from media using Media Go](#)
- [Importing content on your Windows computer into Media Go](#)
- [Transferring content using Media Go](#)
- [Transferring iTunes content using Media Go](#)
- [Transferring content using Explorer](#)
- [Notes for transferring content such as music from your computer](#)
- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Explorer](#)

Digital Music Player
NW-E393/E394/E395

Preparing content using a Mac computer

Installing the latest version of Content Transfer, available on the Internet, enables you to transfer content to the Walkman.

1. Install the latest version of Content Transfer, available on the Internet, on your Mac computer.
2. Drag-and-drop the content on your Mac computer to Content Transfer.
The content is transferred to your Walkman.

Hint

- You can also transfer content directly from iTunes or the Finder to your Walkman by drag-and-drop.

Related Topic

- [About Content Transfer](#)
- [Installing Content Transfer](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using the Finder](#)
- [Notes for transferring content such as music from your computer](#)
- [Deleting content from your Walkman using the Finder](#)



Digital Music Player
NW-E393/E394/E395

About Media Go

Media Go is software for your Windows computer that allows you to import various content such as music, photos or videos to your Windows computer and manage stored content on your Windows computer. You can transfer content that you have imported from CDs or downloaded from online music services to your Walkman. If you have already managed content such as music with iTunes, etc., you can use Media Go to transfer the content to the Walkman.

Related Topic

- [Installing Media Go](#)
- [Importing and transferring content from media using Media Go](#)
- [Transferring content using Media Go](#)
- [Transferring iTunes content using Media Go](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Installing Media Go

Install Media Go to your Windows computer.

1. Access the Media Go download website.

<http://mediago.sony.com/>

2. Install Media Go.

Confirm the supported operating systems, and then click . Click “Run” to install the software without downloading the installer.

3. Follow the on-screen instructions to install Media Go.

When you click “Finish” after installation, Media Go automatically starts.

Hint

- The installer is automatically downloaded to the Downloads folder with some web browsers.
- When your Windows computer is connected to the Internet, the latest version of Media Go is automatically searched and downloaded. If a message to install the latest version of Media Go appears, click the message and follow the on-screen instructions to install the software.

Note

- Depending on the environment, restarting your computer may be required. Follow the on-screen instructions.

Related Topic

- [About Media Go](#)
- [Importing and transferring content from media using Media Go](#)
- [Transferring content using Media Go](#)



Digital Music Player
NW-E393/E394/E395

About Content Transfer

Content Transfer is software for your Mac computer that allows you to transfer content such as music managed with iTunes or the Finder to your Walkman easily. You can transfer files, folders, and playlists to the appropriate folder of the Walkman simply by drag-and-drop.

Related Topic

- [Installing Content Transfer](#)
- [Transferring content using Content Transfer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Installing Content Transfer

Install Content Transfer to your Mac computer.

1. Access the installer for Content Transfer for Mac.



<http://www.sony.net/ct-mac/>

Confirm "System requirements."

2. Open the downloaded file.

The "ContentTransfer.dmg" file saved automatically to the Downloads folder opens.

3. Start installation.

Run "ContentTransfer.pkg" and follow the on-screen instructions to install Content Transfer for Mac.  is displayed in the Dock when the installation is completed. Click  to start Content Transfer.


Related Topic

- [System requirements](#)
- [About Content Transfer](#)
- [Transferring content using Content Transfer](#)

Digital Music Player
NW-E393/E394/E395

Importing and transferring content from media using Media Go

Use Media Go to import and transfer content such as music on your Windows computer. This section explains how to import and transfer music from CDs. Your computer must be connected to the Internet to obtain CD information such as song names and artist names automatically.

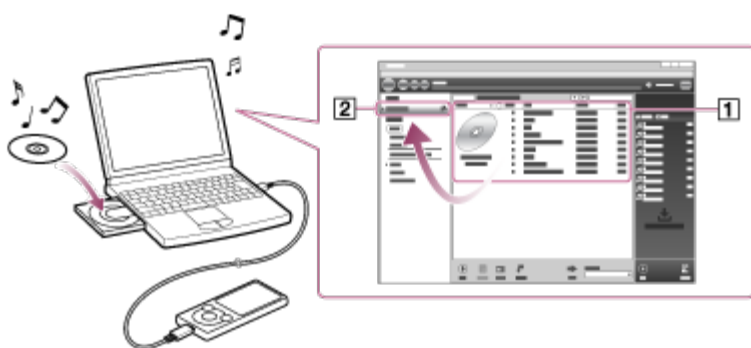

1. Connect your Walkman to your Windows computer via USB.
2. Start Media Go.
3. Insert an audio CD into the CD drive of your Windows computer.
4. Confirm the music content on the audio CD.
5. Transfer the music content on the audio CD to your Walkman.
Drag-and-drop the cover art of the desired CD ([1]) to “WALKMAN (model name)” ([2]).

Hint

- For details about how to use Media Go, refer to the help of Media Go.
- Songs transferred to your Walkman are imported to your computer at the same time.
- Recommended file formats for ripping CDs are AAC (.mp4) and MP3 (.mp3) for normal sound quality.
- Media Go obtains the CD information from a database on the Internet. Information on some CDs may not be available in the database. If information on your CD is missing, you can add it manually after importing the CD. For information about adding and editing CD information, refer to the help of Media Go.

Note

- Imported content is limited to private use only. Use of content for other purposes requires the permission of the copyright holders.

- Commercial DVDs and Blu-ray discs cannot be imported into Media Go.

Related Topic

- [Installing Media Go](#)
- [Transferring content using Media Go](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Importing content on your Windows computer into Media Go

Import content such as music imported to your Windows computer into Media Go.

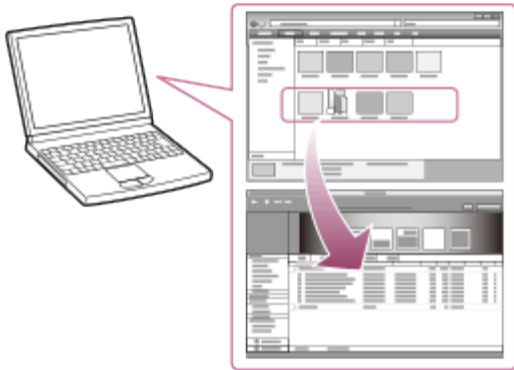

1. Start Media Go.
2. Select the type of content you want to import from “Library.”
3. Drag-and-drop the content into the Content List area.

Hint

- You can also import data organized by programs such as iTunes by selecting “File” - “Add/Remove Media from Library” in Media Go. For details, refer to the help of Media Go.


Related Topic

- [Transferring content using Media Go](#)

Digital Music Player
NW-E393/E394/E395

Transferring content using Media Go

Transfer content such as music or playlists managed with Media Go on your computer to your Walkman. Content with copyright protection cannot be transferred.

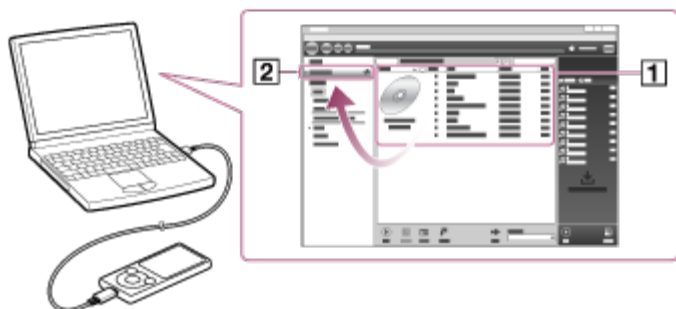

1. Connect your Walkman to a running computer via USB, and then start Media Go.
2. Select the desired content (**1**) on Music Library of Media Go, and drag-and-drop it to your “WALKMAN (model name)” (**2**).

Media Go recognizes the type of data by the filename extension and sends it to the appropriate folder of your Walkman.

Note

- Media Go does not support content that uses Windows Media digital rights management technology (“WM-DRM”).
- Your Walkman will start constructing the database when it is disconnected from the computer. If you want to reconnect your Walkman to the computer, first make sure that it has finished constructing the database. If not, your Walkman may be damaged.


Related Topic

- [Connecting to a computer](#)
- [Importing and transferring content from media using Media Go](#)
- [Importing content on your Windows computer into Media Go](#)
- [Deleting content from your Walkman using Media Go](#)

Digital Music Player
NW-E393/E394/E395

Transferring iTunes content using Media Go

Media Go supports transfer of data from iTunes to your Walkman. Transfer content such as music managed with iTunes on your computer to the Walkman. Content with copyright protection cannot be transferred.

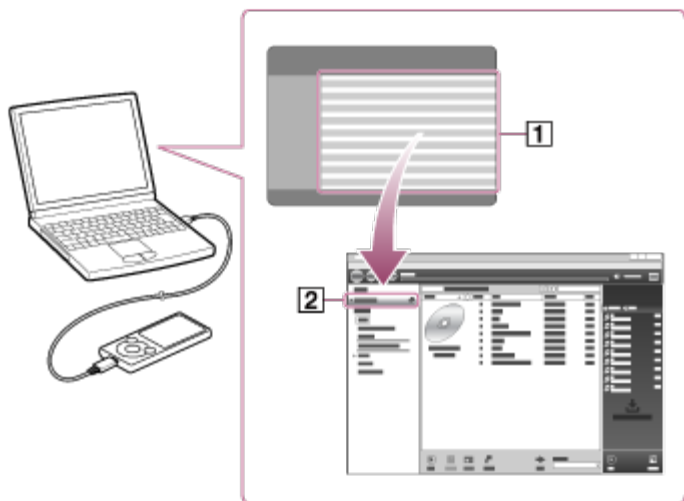

1. Connect your Walkman to a running computer via USB, and then start Media Go.
2. Start iTunes.
3. Select the desired content from iTunes ([1]), and drag-and-drop it to your “Walkman (model name)” ([2]).
Media Go recognizes the type of data by the filename extension and sends it to the appropriate folder of your Walkman.

Hint

- You can also transfer playlists created with iTunes to your Walkman. Use iTunes to export playlists in m3u file format. Then use Media Go to import the m3u files and transfer the playlists to the Walkman.


Related Topic

- [Connecting to a computer](#)
- [Transferring content using Media Go](#)
- [Deleting content from your Walkman using Media Go](#)

Digital Music Player
NW-E393/E394/E395

Transferring content using Content Transfer

Transfer content such as music or playlists on your Mac computer or managed with iTunes to your Walkman. Content with copyright protection cannot be transferred.

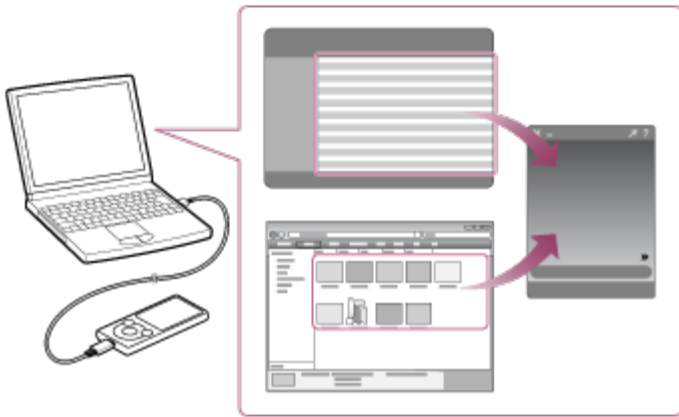

1. Connect your Walkman to a running computer via USB, and then start Content Transfer.
2. Display the desired content on the Finder or the desired content or playlists on iTunes.
3. Drag-and-drop the content or playlists you want to transfer to Content Transfer.
Content is transferred to your Walkman.


Related Topic

- [Connecting to a computer](#)
- [Deleting content from your Walkman using Content Transfer](#)

Digital Music Player
NW-E393/E394/E395

Transferring content using Explorer

Content such as music can be directly transferred by drag-and-drop using Windows Explorer.

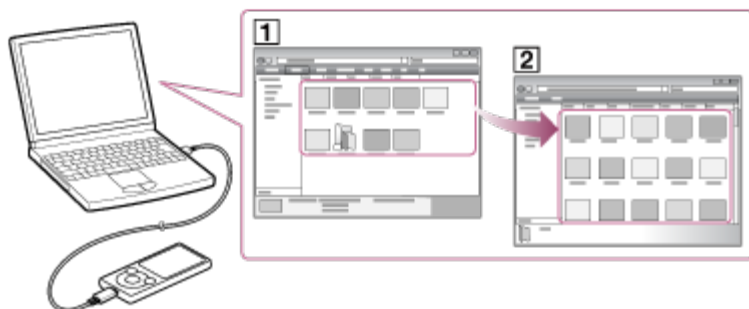

1. Connect your Walkman to a running computer via USB.
2. Open "WALKMAN" using the procedure below that corresponds to your computer.
 - Windows 7 or earlier:
Select "Start" – "Computer," and then open "WALKMAN."
 - Windows 8:
Select "Desktop" from the "Start screen" to open "File Explorer." In the "Computer" list, open "WALKMAN."
 - Windows 8.1:
Select "Desktop" to open "File Explorer." In the "This PC" list, open "WALKMAN."
 - Windows 10:
Select "File Explorer" in the "Start" menu, and then select "WALKMAN" from the left screen.
3. Open the folder to which you want to transfer content.
To transfer music files or folders: "MUSIC" folder
To transfer photo files or folders: "PICTURE" or "DCIM" folder
4. Drag-and-drop the desired files or folders ([1]) to the applicable folder ([2]) in "WALKMAN."

Note

- Drop music files directly into the MUSIC folder. Music files located elsewhere may not be playable.
- You cannot operate your Walkman when it is connected to a computer.
- Do not change folder name placed in root memory such as "MUSIC."
- Some songs may not be played back on your Walkman due to copyright protection.

- Depending on the language setting of your Walkman, the information of the transferred content may not be displayed correctly.

Related Topic

- [Connecting to a computer](#)
- [Selecting the display language](#)
- [Notes for transferring content such as music from your computer](#)
- [Deleting content from your Walkman using Explorer](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Transferring content using the Finder

Content such as music can be directly transferred by drag-and-drop using the Finder.

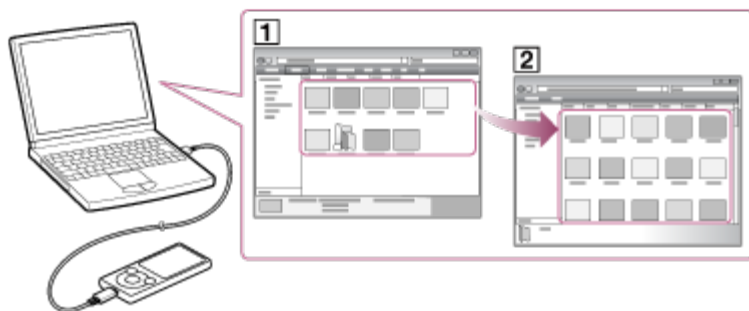

1. Connect your Walkman to a running computer via USB.
2. Select “WALKMAN” in the sidebar of the Finder.
3. Open the folder to which you want to transfer content.
To transfer music files or folders: “MUSIC” folder
To transfer photo files or folders: “PICTURE” or “DCIM” folder
4. Drag-and-drop the desired files or folders (**1**) to the applicable folder (**2**) in “WALKMAN.”

Note

- Drop music files directly into the MUSIC folder. Music files located elsewhere may not be playable.
- You cannot operate your Walkman when it is connected to a computer.
- Do not change folder name placed in root memory such as “MUSIC.”
- Some songs may not be played back on your Walkman due to copyright protection.
- Do not disconnect your Walkman while the data is transferred. Otherwise, data being transferred or stored on the Walkman may be damaged. If the Walkman is disconnected while files are being transferred, unnecessary files may be left in the Walkman. In this case, transfer usable files back to the computer and format the Walkman.
- Depending on the language setting of your Walkman, the information of the transferred content may not be displayed correctly.

Related Topic

- [Connecting to a computer](#)

- [Selecting the display language](#)
- [Notes for transferring content such as music from your computer](#)
- [Formatting memory](#)
- [Deleting content from your Walkman using the Finder](#)

4-579-798-11(1)


Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Notes for transferring content such as music from your computer

Drag-and-drop content such as music or folders into the correct folder as shown in the following illustrations. Your Walkman can play back content stored in the 1st to 8th level of each folder.

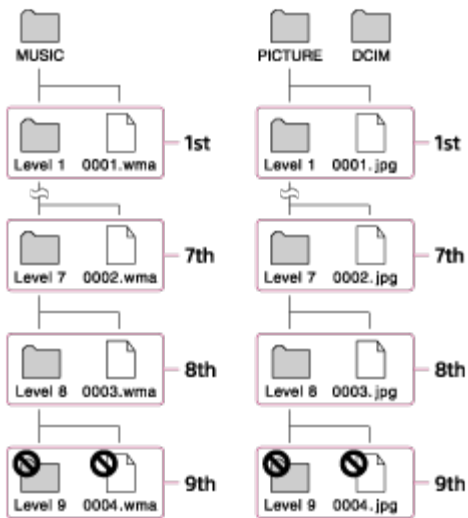

Note

- Do not rename the following default folders.
 - MUSIC
 - PICTURE and DCIMOtherwise, they will not be recognized by your Walkman anymore.
- Some songs may not be played back on your Walkman due to copyright protection.



Digital Music Player
NW-E393/E394/E395

Deleting content from your Walkman using Media Go

You can use Media Go to delete content stored on your Walkman.

1. Connect your Walkman to a running computer via USB.
2. Start Media Go.
3. Double-click "WALKMAN (model name)" and select the type of content you want to delete.
The content list is displayed.
4. Select the content you want to delete.
5. Click "Edit" - "Delete."
A window to confirm the deletion of the item is displayed.
6. Click "Yes."


Related Topic

- [Connecting to a computer](#)
- [Transferring content using Media Go](#)

Digital Music Player
NW-E393/E394/E395

Deleting content from your Walkman using Content Transfer

You can use Content Transfer to delete content stored on your Walkman.

1. Connect your Walkman to a running computer via USB.
2. Start Content Transfer.
3. Click  at the right bottom of the screen.
4. Click the icon of the folder (such as “Music”) that contains the content you want to delete.
The content list is displayed.
5. Select the content you want to delete.
6. Click “Delete.”
The selected content is deleted.

Related Topic

- [Connecting to a computer](#)
- [Transferring content using Content Transfer](#)



Digital Music Player
NW-E393/E394/E395

Deleting content from your Walkman using Explorer

Delete content stored on your Walkman using Windows Explorer.

1. Connect your Walkman to a running computer via USB.
2. Open "WALKMAN" using the procedure below that corresponds to your computer.
 - Windows 7 or earlier:
Select "Start" - "Computer," and open "WALKMAN."
 - Windows 8:
Select "Desktop" from the "Start screen" to open "File Explorer." In the "Computer" list, open "WALKMAN."
 - Windows 8.1:
Select "Desktop" to open "File Explorer." In the "This PC" list, open "WALKMAN."
 - Windows 10:
Select "File Explorer" in the "Start" menu, and then select "WALKMAN" from the left screen.
3. Open the folder containing the file(s) you want to delete.
To delete a music file or a folder that contains music: "MUSIC" folder
To delete a photo file or a folder that contains photos: "PICTURE" or "DCIM" folder
4. Select the content you want to delete.
5. Delete the content.

Note

- Do not change folder name placed in root memory such as "MUSIC."

Related Topic

- [Connecting to a computer](#)
- [Transferring content using Explorer](#)



Digital Music Player
NW-E393/E394/E395

Deleting content from your Walkman using the Finder

Delete content stored on your Walkman using the Mac Finder.

1. Connect your Walkman to a running computer via USB.
2. Open a folder under “WALKMAN” from the sidebar of the Finder.
3. Open the folder containing the file(s) you want to delete.
To delete a music file or a folder that contains music: “MUSIC” folder
To delete a photo file or a folder that contains photos: “PICTURE” or “DCIM” folder
4. Select the content you want to delete.
5. Delete the content.

Note

- Do not change folder name placed in root memory such as “MUSIC.”

Related Topic

- [Connecting to a computer](#)
- [Transferring content using the Finder](#)



Digital Music Player
NW-E393/E394/E395

Deleting content imported to Media Go

You can delete content imported to Media Go.

1. Start Media Go.
2. Select the type of content you want to delete from “Library.”
The content list is displayed.
3. Select the content you want to delete.
4. Click “Edit” - “Delete.”
A “Confirm Delete” window is displayed.
5. Select a method to delete the content.
6. Click “OK.”

Related Topic

● [Deleting content from your Walkman using Media Go](#)



Digital Music Player
NW-E393/E394/E395

Preparing music

You need to transfer music from your computer to your Walkman in order to listen to music on the Walkman. Use Media Go to transfer songs from a CD or your computer to the Walkman. You can also transfer them by drag-and-drop from Windows Explorer. For a Mac computer, you can use Content Transfer to transfer the songs from iTunes, etc. You can also transfer them by drag-and-drop from the Mac Finder.


Related Topic



- [Connecting to a computer](#)
- [Importing and transferring content from media using Media Go](#)
- [Importing content on your Windows computer into Media Go](#)
- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)
- [Notes for transferring content such as music from your computer](#)

Digital Music Player
NW-E393/E394/E395

Playing music

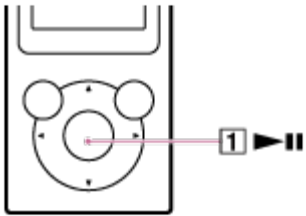Play music transferred to your Walkman.



1. From the Home menu, select  [Music].
2. Select the desired search method and items until a song list appears, and then select the desired song. Playback starts and the music playback screen is displayed. To pause playback, press the button ().

Note

- If there is no operation for an extended period while paused, your Walkman will be turned off automatically. In this case, turn on the power before performing step 1 above.
- Depending on the way of transferring songs to your Walkman, songs might be played in different order from the song order on your computer. When you specify a song order other than that on your Walkman, edit the playlists with a function of Media Go or iTunes, and then transfer them to your Walkman.


Related Topic

- [Preparing music](#)
- [Music playback operations](#)
- [Setting the screen off timer](#)
- [Turning the power on](#)
- [Searching for songs](#)
- [Browsing the music list screen](#)
- [Transferring content using Media Go](#)
- [Browsing the music playback screen](#)

Digital Music Player
NW-E393/E394/E395

Browsing the music list screen

The music list screen displays lists such as the song list and album list.

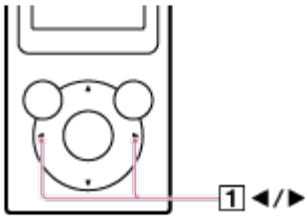

1. Index

The index displays a list of song or album names, along with each letter of the alphabet. Navigate the index by pressing the button (1) to move to the next or previous letters.

Hint

- The display format of the album list can be changed so that only the cover art is displayed.

Related Topic

● [Playing music](#)



Digital Music Player
NW-E393/E394/E395

Volume operation (Only for countries/areas complying with European Directives)

An alarm (beep) and a warning [Check the volume level] are meant to protect your ears when you turn the volume up to a level that is harmful for your ears for the first time. You can cancel the alarm and warning by pressing any button.

Note

- You can turn up the volume after canceling the alarm and warning.
- After the initial warning, the alarm and warning repeat every 20 cumulative hours that the volume is set to a level that is harmful for your ears. When this happens, the volume is turned down automatically.
- If the volume is set to a level that is harmful for your ears and you turn off your Walkman, the volume is turned down to a level that is safe for your ears automatically.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player NW-E393/E394/E395

Browsing the music playback screen

The following items are displayed on the music playback screen.



1. Information area

The playback status, remaining battery power, etc. are displayed.






2. Song title/Artist name

3. Selected search method

4. Elapsed time of current song

5. Time line bar

6. Music settings icons

-  [Bass Boost]
-  [Repeat] from the [Play Mode] settings
-  [Shuffle] from the [Play Mode] settings
-  [Shuffle & Repeat] from the [Play Mode] settings
-  [Repeat 1 Song] from the [Play Mode] settings

Note

- The elapsed time and the time line bar indications may be unstable and inaccurate when playing variable bit rate (VBR) songs.

Related Topic

- [Playing music](#)
- [List of icons displayed in the information area](#)
- [Music playback operations](#)

- Repeat playback
- Shuffle playback
- Customizing sound quality settings
- Presetting your equalizer settings


4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Music playback operations

The following operations are available on the music playback screen.

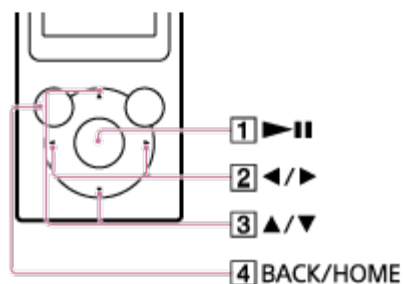

To play/pause

Press the button (1).

To fast forward or rewind

Press and hold the button (2).

The length of the current song will be displayed in the bottom right area.

To go to the beginning of the next song or go to the beginning of the previous (or current) song

Press the button (2).

The current song number/total number of songs will be displayed for several seconds in the bottom right area.

To browse cover art to select an album

Press the button (3).

To return to the list screen

Press the button (4).

Hint

- If there is no operation for an extended period while paused, your Walkman will be turned off automatically.

Related Topic

- [Playing music](#)
- [Browsing the music playback screen](#)

- Browsing the music list screen
- Shuffle playback
- Repeat playback
- Setting the screen off timer

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Searching for songs

You can quickly search a song by artist, genre, etc.

1. On the music playback screen or the list screen, display the option menu and select **Q** (Search) - desired search method - desired song.

Hint

- The [All Songs], [Album], [Artist] and [Genre] lists are arranged in alphanumeric order. In the [Folder] list, folders are displayed in name order first, then files are displayed in name order. Upper and lower case letters are not distinguished.
- You can search for songs from [All Songs], [Album], [Artist], [Genre], [Playlists] or [Folder].
- [Playlists] are created by using software like Media Go. For information on how to create a playlist, refer to the Help of your software.

Related Topic


- [Playing music](#)
- [How to use the option menu](#)
- [Music playback operations](#)
- [Playing playlist songs](#)



Digital Music Player
NW-E393/E394/E395

Playing playlist songs

You can transfer and play playlists created by using software like Media Go. For information on how to create a playlist, refer to the Help of your software.

1. From the Home menu, select  [Playlists].
2. Select desired playlist - desired song.

Note

- Cover art images registered to a playlist are not displayed on your Walkman.


Related Topic

- [Playing music](#)
- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)

Digital Music Player
NW-E393/E394/E395

Choosing an album from the cover art images

If you register cover art images to albums using Media Go beforehand, you can choose an album by selecting a cover art image (Album scroll). For details on how to register cover art images to albums, refer to the Help of Media Go.

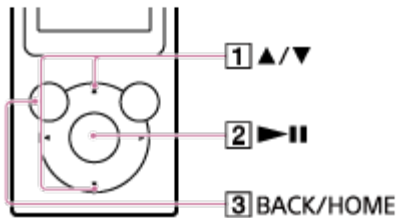

1. Press the button (**1**) in the music playback screen to browse cover art images.
2. Choose the cover art image registered to your desired album, then press the button (**2**).

Hint

- To return to the music playback screen during this operation, press the button (**3**).

Note

- Cover art appears only when a cover art image is registered to the album or song.
- Cover art in some formats may not be displayed on your Walkman.

Related Topic

- [Playing music](#)
- [Browsing the music playback screen](#)



Digital Music Player
NW-E393/E394/E395

Deleting songs

To delete songs from your Walkman, use the software on your computer that you used to transfer the songs. If you used Windows Explorer to transfer the songs, use Windows Explorer to delete them. If you used the Finder on a Mac to transfer the songs, use the Finder on a Mac to delete the songs.

Hint

- Sample music is pre-installed on your Walkman. If you want to delete it, use the software.

Note

- Do not delete or rename the “MUSIC” folder. Otherwise, songs may not be recognized by your Walkman.

Related Topic

- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Content Transfer](#)
- [Deleting content from your Walkman using Explorer](#)
- [Deleting content from your Walkman using the Finder](#)


Digital Music Player
NW-E393/E394/E395

Shuffle playback

Play songs in the playback range in random order.

1. On the music playback screen, display the option menu and select [Play Mode] - [Shuffle] or [Shuffle & Repeat].

Note

- To play all songs on your Walkman in random order, play the songs from  [Music] - [All Songs].

Related Topic

- [Playing music](#)
- [How to use the option menu](#)
- [Browsing the music playback screen](#)
- [Music playback operations](#)
- [Repeat playback](#)
- [List of icons displayed in the information area](#)

Digital Music Player
NW-E393/E394/E395

Repeat playback

Play songs within a playback range repeatedly.

1. On the music playback screen, display the option menu and select [Play Mode] - desired setting.

Note

- To play all songs on your Walkman repeatedly, play the songs from  [Music] - [All Songs].


Related Topic

- [Playing music](#)
- [How to use the option menu](#)
- [Browsing the music playback screen](#)
- [Music playback operations](#)
- [Shuffle playback](#)
- [List of icons displayed in the information area](#)

Digital Music Player
NW-E393/E394/E395

Customizing sound quality settings

You can use various functions to set the desired sound quality.

1. From the Home menu, select  [Settings].
2. Select [Music Settings] - desired function - desired setting.

Bass Boost function

You can increase the level of the bass (low) sound range.

Equalizer function

You can set the sound quality according to the music genre. You can also preset your equalizer settings as a custom setting.

Hint

- You can also set some sound quality items from the option menu in the music playback screen.

Note

- The [Equalizer] setting is not applied if [Bass Boost] is turned on.


Related Topic

- [Presetting your equalizer settings](#)
- [How to use the option menu](#)

Digital Music Player
NW-E393/E394/E395

Presetting your equalizer settings

You can preset the value of the 5 band equalizer as a custom setting.

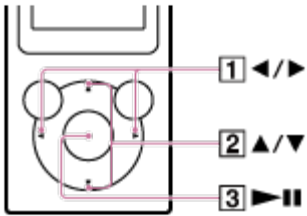

1. In the music playback screen, display the option menu and select [Equalizer] - [Custom].
2. Press the button (**1**) to select the frequency range setting, and press the button (**2**) to adjust the setting level.
3. Press the button (**3**) to confirm.

Related Topic

- [How to use the option menu](#)
- [Customizing sound quality settings](#)



Digital Music Player
NW-E393/E394/E395

Preparing photos

You need to transfer photo content onto your Walkman from your computer in order to view photos on the Walkman. After importing the photo content you want to display onto your computer, use Media Go to transfer the photos to the Walkman. For a Mac computer, you can use Content Transfer to transfer them. You can also transfer them by drag-and-drop from Windows Explorer or the Mac Finder.

Related Topic


- [Connecting to a computer](#)
- [Importing and transferring content from media using Media Go](#)
- [Importing content on your Windows computer into Media Go](#)
- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)
- [Notes for transferring content such as music from your computer](#)



Digital Music Player
NW-E393/E394/E395

Viewing photos

You can view photos that you have transferred onto your Walkman. The Walkman uses landscape display when viewing photos.

1. From the Home menu, select  [Photos].
2. Select the desired search method, then browse the list until the photo you want to select appears.
3. Select the desired photo.

Hint

- Playback of songs continues while searching for photos in the photo screen, photo folder or photo list screen.

Note

- If a photo is too large or the data is corrupted,  is displayed and the photo cannot be displayed.


Related Topic

- [Preparing photos](#)
- [Browsing the photo screen](#)
- [Operations on the photo screen](#)

Digital Music Player
NW-E393/E394/E395

Browsing the photo screen

The following information is shown on the photo screen.

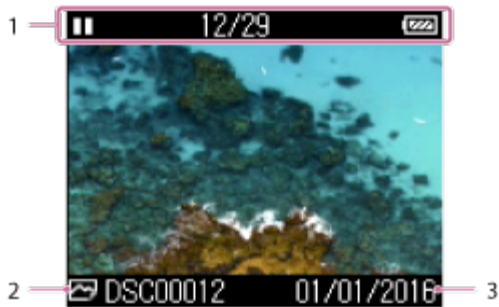

1. Information area

The Slide Show playback status, repeat status, current photo number, total number of photos, remaining battery power, etc. are displayed for several seconds.

2. Photo file name
3. Shooting date

Hint

- These indications disappear after a while. They will appear again with button operations.


Related Topic

- [Viewing photos](#)
- [List of icons displayed in the information area](#)
- [Operations on the photo screen](#)

Digital Music Player
NW-E393/E394/E395

Operations on the photo screen

You can use the following operations in the photo screen. Your Walkman uses landscape display when viewing photos.

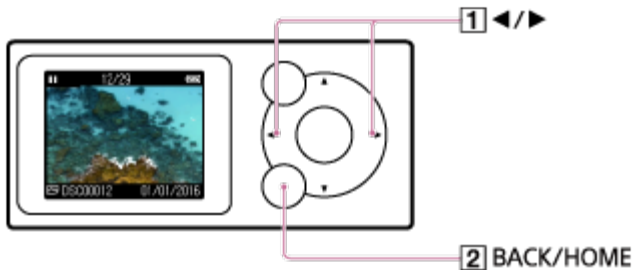

Display the previous or next photo

Press the button (1).

Scroll through the previous or next photos

Press and hold the button (1).

Return to the list screen

Press the button (2).


Related Topic


- [Viewing photos](#)
- [Browsing the photo screen](#)

Digital Music Player
NW-E393/E394/E395

Browsing photos using the Slide Show function

You can watch series of photos stored in your Walkman using the Slide Show function.

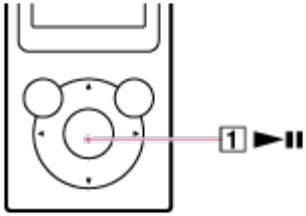

1. From the Home menu, select  [Photos].
2. Select a folder that contains photos you want to view, and then select a photo to start playback.
3. Press the button (1).
All photos in the selected folder will be played.

Hint

- You can also start the Slide Show by performing one of the following operations.
 - Press and hold the button (1) while a folder is selected. All photos in the selected folder will be played.
 - Select [Begin slide show] from the option menu while a photo list (thumbnail view) is displayed.
 - Press and hold the button (1) while [All Photos] is selected and a list of folders is displayed. All photos stored in your Walkman will be played.
- To stop the Slide Show, press the button (1) again.
- You can also repeatedly play the Slide Show.

Related Topic

- [Playing the Slide Show repeatedly](#)



Digital Music Player
NW-E393/E394/E395

Deleting photos

To delete photos from your Walkman, use the software on your computer that you used to transfer the photos. If you used Windows Explorer to transfer the photos, use Windows Explorer to delete them. If you used the Finder on a Mac to transfer the photos, use the Finder on a Mac to delete them.

Hint

- Do not delete or rename the “PICTURE” folder or DCIM folder. Otherwise, photos may not be recognized by your Walkman.


Related Topic


- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Content Transfer](#)
- [Deleting content from your Walkman using Explorer](#)
- [Deleting content from your Walkman using the Finder](#)

Digital Music Player
NW-E393/E394/E395


Changing the photo information display setting

You can set your Walkman to display or not display photo information while playing back photos.

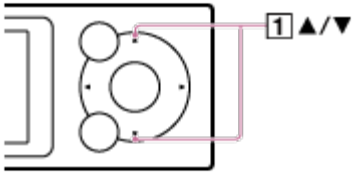


1. From the Home menu, select  [Settings].
2. Select [Photo Settings] - [Display] - desired setting.

On :


Photo information is displayed for every photo you view. It automatically disappears after 3 seconds of no user operation and reappears when you press a button ().

Off:

Photo information is not displayed. It appears when you press a button () but disappears automatically after 3 seconds of no user operation.

Related Topic


 [Viewing photos](#)



Digital Music Player
NW-E393/E394/E395

Playing the Slide Show repeatedly

You can repeatedly play the Slide Show.

1. From the Home menu, select  [Settings].
2. Select [Photo Settings] - [Slide Show Repeat] - desired setting.

Related Topic

[Browsing photos using the Slide Show function](#)


4-579-798-11(1)


Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Listening to FM radio

Listen to FM radio on your Walkman. You cannot listen to FM radio without connecting headphones as the cord of the headphones works as the antenna. Extend the cord as long as possible.

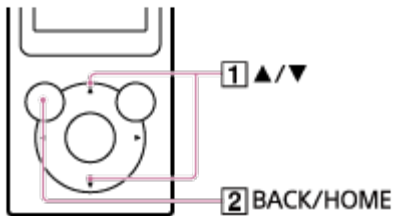

1. From the Home menu, select  [FM Radio].
2. Press the button (1) to select the desired frequency.
To turn off FM radio, press the button (2).

Note

- The sound quality settings are not applied while listening to FM radio.


Related Topic

- [Browsing the FM radio screen](#)
- [FM radio operations](#)
- [Presetting broadcast stations automatically](#)
- [Presetting broadcast stations manually](#)

Digital Music Player
NW-E393/E394/E395

Browsing the FM radio screen

The following items are displayed on the FM radio screen.

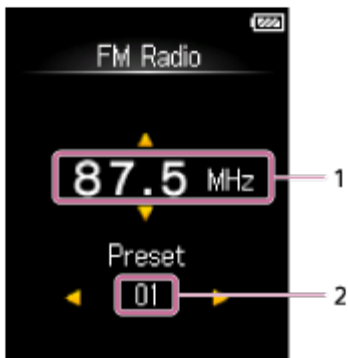

1. Frequency
2. Preset number

Related Topic


- [Listening to FM radio](#)
- [FM radio operations](#)
- [Presetting broadcast stations automatically](#)
- [Presetting broadcast stations manually](#)



Digital Music Player
NW-E393/E394/E395

FM radio operations

The following operations are available on the FM radio screen. You cannot listen to FM radio without connecting headphones as the cord of the headphones works as the antenna. Extend the cord as long as possible.

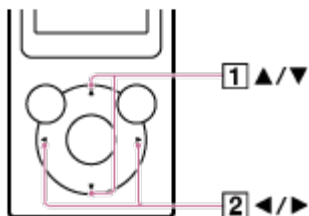

To select the previous or next frequency
Press the button (1).

To select the previous or next receivable station
Press and hold the button (1). Searching starts and stops at a receivable broadcast station.

To select the previous or next preset number
Press the button (2).

Hint

- Preset numbers can only be used to select a broadcast station if one or more broadcast stations are saved as preset. Preset the receivable broadcast stations in advance.
- If the reception sensitivity is too strong and causes many unwanted broadcast stations to be received while searching, change the scan sensitivity setting.

Related Topic

- [Browsing the FM radio screen](#)
- [Listening to FM radio](#)
- [Presetting broadcast stations automatically](#)
- [Presetting broadcast stations manually](#)
- [Changing the FM radio scan sensitivity](#)
- [Setting monaural/auto for FM radio](#)



Digital Music Player
NW-E393/E394/E395

Presetting broadcast stations automatically

You can use [Auto Preset] to automatically search for and preset broadcast stations that can be received in your area.

1. In the FM radio screen, display the option menu and select [Auto Preset] - [Yes].
Receivable broadcast stations will be preset in order of frequency (low to high).

Hint

- If the reception sensitivity is too strong and causes many unwanted broadcast stations to be received while searching, set the scan sensitivity to [Low].
- You can preset up to 30 stations.

Note

- Using [Auto Preset] clears all saved presets.

Related Topic

- [Listening to FM radio](#)
- [How to use the option menu](#)
- [Presetting broadcast stations manually](#)
- [Deleting preset broadcast stations](#)
- [Changing the FM radio scan sensitivity](#)

Digital Music Player
NW-E393/E394/E395

Presetting broadcast stations manually

You can manually preset receivable broadcast stations.

1. In the FM radio screen, select the frequency you want to save to preset.
The preset numbers are rearranged in order of frequency (low to high).
2. Display the option menu and select [Save to Preset].

Hint

- You can preset up to 30 stations.

Related Topic

- [Listening to FM radio](#)
- [How to use the option menu](#)
- [Presetting broadcast stations automatically](#)
- [Deleting preset broadcast stations](#)



Digital Music Player
NW-E393/E394/E395

Deleting preset broadcast stations

You can delete preset broadcast stations.

1. On the FM radio screen, select the preset number of the frequency you want to delete from preset.
2. Display the option menu and select [Delete from Preset].

Related Topic

- [Listening to FM radio](#)
- [How to use the option menu](#)
- [Presetting broadcast stations automatically](#)
- [Presetting broadcast stations manually](#)
- [FM radio operations](#)



Digital Music Player
NW-E393/E394/E395

Changing the FM radio scan sensitivity

Sometimes the reception sensitivity may be too strong when receiving an FM radio broadcast station, causing many unwanted broadcast stations to be received. In such cases, set the scan sensitivity to low.

1. On the FM radio screen, display the option menu and select [Scan Sensitivity] - desired setting.

Related Topic

- [Listening to FM radio](#)
- [Presetting broadcast stations automatically](#)
- [How to use the option menu](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Setting monaural/auto for FM radio

If noise occurs during FM reception, set [Mono/Auto] to [Mono]. If you set it to [Auto], stereo or monaural is selected automatically, depending on reception conditions.

1. In the FM radio screen, display the option menu and select [Mono/Auto] - desired setting.

Related Topic

- [Listening to FM radio](#)
- [FM radio operations](#)
- [How to use the option menu](#)



4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Setting the sleep timer

You can change the set time for the sleep timer.

1. From the Home menu, select  [Settings].
2. Select [Sleep Timer Settings] - desired setting.
After setting the sleep timer,  appears in the information area.

Note

- The sleep timer will not be activated in the following situations.
 - While using [Auto Preset] for the FM radio
 - If the power of your Walkman is turned off before the sleep timer is activated
 - When your Walkman is connected to a computer via USB
 - While formatting the memory of your Walkman

Related Topic


- [Presetting broadcast stations automatically](#)
- [Turning the power off](#)
- [Connecting to a computer](#)



Digital Music Player
NW-E393/E394/E395

Limiting the volume

You can use AVLS (Automatic Volume Limiter System) to limit the maximum volume. This prevents the volume from getting too high and disturbing others, causing discomfort to your ears, or preventing you from hearing sounds around you, and it allows you to listen at a more comfortable volume.


1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [AVLS (Volume Limit)] - [On].

Related Topic

- [Volume operation \(Only for countries/areas complying with European Directives\)](#)

4-579-798-11(1)


Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Setting the operation sound

You can turn the operation sounds of your Walkman on or off.

1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Beep Settings] - desired setting.

4-579-798-11(1)


Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Setting the screen off timer

You can set the time after which the screen is turned off when there are no operations.


1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Screen Off Timer] - desired setting.

Note

- The screen does not turn off in the following situations:
 - While accessing, creating or restoring databases
 - While scanning FM radio broadcast stations
 - While presetting FM radio broadcast stations automatically
 - While playing back a Slide Show
- The screen brightness is lowered while your Walkman is connected to a computer.

4-579-798-11(1)


Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Adjusting the screen brightness

You can set the display brightness to one of five levels.

1. From the Home menu, select  [Settings].
2. Select [Common Settings] - [Brightness] - desired setting.

Hint

- Regardless of the brightness setting, the brightness of the screen may be low while connecting to a computer and charging.

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Notes on handling your Walkman

Warning

- Be sure not to short-circuit the terminals of your Walkman with metallic objects.
- Do not spill water on your Walkman or allow any foreign object to enter it. This may cause fire or electric shock. If this occurs, turn off the Walkman immediately, disconnect the Walkman from your computer, and consult your nearest Sony dealer or Sony Service Center.
- Do not place your Walkman in fire.
- Do not take apart or modify your Walkman. Doing so can result in electric shock. Consult your nearest Sony dealer or Sony Service Center for exchange of rechargeable batteries, internal checks, or repair.
- Do not put any heavy object on top of your Walkman or apply a strong shock to it.
This may cause malfunction or damage.

The following descriptions are important for using your Walkman. Be sure to follow the instructions below.

- Charging time differs depending on battery usage conditions.
- If the battery life is reduced to about half of its normal life even if sufficiently charged, it has probably worn out. Please contact your nearest Sony dealer.
- Do not touch the rechargeable battery with bare hands if it is leaking. Consult your nearest Sony dealer if the battery has leaked as battery liquid may remain in your Walkman. If the liquid gets into your eyes, do not rub your eyes as this may lead to blindness. Wash out your eyes with clean water and consult a doctor.
If the liquid gets onto your body or clothes, wash it off immediately. Failure to do so may cause burns or injury. Consult a doctor if you are burned or injured by the liquid from the battery.
- Heat may build up in your Walkman while charging if it is used for an extended period of time.
- Note that condensation may form temporarily in cases such as when your Walkman is moved quickly from a low-temperature environment to a high-temperature environment, or used in a room where a heater has just been turned on. Condensation is a phenomenon where moisture in the air adheres to surfaces such as metal panels and then changes to liquid. If condensation forms in the Walkman, leave it turned off until the condensation disappears. If you use the Walkman with condensation present, a malfunction may result.
- If you use your Walkman in a cold location, images may appear with black bands around them. This is not a malfunction of the Walkman.
- If your Walkman causes interference to radio or television reception, turn the Walkman off and move it away from the radio or television.
- Mild tingling may be felt on your ears in particularly dry air conditions. This is a result of static electricity accumulated in the body, and it is not a malfunction of your Walkman.
This effect can be minimized by wearing clothes made from natural materials.
- When using a strap (not supplied), be careful to avoid catching it on objects you pass by.
Also, be careful not to swing your Walkman by the strap to avoid bumping people.

- Refrain from using your Walkman as is requested by in-flight announcements during takeoff or landing in an aircraft.
- If you see lightning or hear thunder, take off the headphones immediately and refrain from using your Walkman.
- If you experience an allergic reaction while using headphones of a Walkman model supplied with headphones, stop using it immediately and contact a doctor.
- Never use your Walkman where it will be subjected to extreme light, temperatures, humidity or vibration. For example, never leave the Walkman in a car parked in the sun or in direct sunlight. It may become discolored, distorted or damaged.



- Do not leave your Walkman in a place subject to excessive dust.
- Do not leave your Walkman on an unstable surface or in an inclined position.
- When unplugging the headphones from your Walkman, make sure to hold the headphone plug. Pulling by the headphone cord itself may damage it.
- Do not apply strong force to the surface of the display. This may cause a distortion in colors or brightness, or it may cause a malfunction of the display.
- Be sure to follow the precautions below when using your Walkman. Failure to do so may warp the casing or cause the Walkman to malfunction.

–Do not sit down with your Walkman in your back pocket.



–Do not put your Walkman in a bag with the headphones/earphones cord wrapped around it and subject the bag to strong impact.



- Do not expose your Walkman to water. The Walkman is not waterproof. Be sure to follow the precautions below.

–Be careful not to drop your Walkman into a sink or other container filled with water.

–Do not use your Walkman in humid locations or wet weather such as rain or snow.

–Do not get your Walkman wet.

If you touch your Walkman with wet hands or put the Walkman in a damp article of clothing, the Walkman may get wet, which may cause a malfunction.



- Sample data is pre-installed on your Walkman.
- Sample data is not installed in some countries/regions.
- If you delete the sample data, you cannot restore it, and we will not supply any replacement data.
- Sony is not responsible for incomplete recording/downloading or damaged data due to problems with your Walkman or computer.

Notes on storing lithium-ion rechargeable batteries

A lithium-ion rechargeable battery is built into your Walkman. When you store it for a long period of time, be sure to follow the storage instructions below.

- Leaving a charged battery unused for a long period of time causes deterioration of the battery and results in a decrease of battery capacity. The deterioration is more severe when the battery is stored with a full charge, and is accelerated by prolonged exposure to heat such as when leaving your Walkman in a car while connected to the power port. Store the Walkman at temperatures below 35 °C (95 °F). Charging or discharging the battery to approximately 50 % of capacity before storing is also recommended.
- The battery deteriorates when left in a depleted condition. Charge the battery to approximately 50 % of capacity at least once every six to twelve months to prevent deterioration.



4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Notes on headphones

Road safety

Avoid listening with your headphones in situations where hearing must not be impaired.

Preventing hearing damage

Avoid using the headphones at a high volume. Hearing experts advise against continuous, loud, and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Do not turn the volume up high all at once, especially when using headphones. Turn up the volume gradually to avoid excessive levels hurting your ears.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

About the in-ear headphones

The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds or the earbuds are suddenly removed from your ears. After use, be sure to take the earbuds off your ears gently.



Digital Music Player
NW-E393/E394/E395

Notes on the software

- Copyright laws prohibit reproducing the software or the manual accompanying it, in whole or in part, or renting the software without the permission of the copyright holder.
- In no event will Sony be liable for any financial damage or loss of profits, including claims made by third parties, arising out of the use of the supplied software.
- The supplied software cannot be used with equipment other than that to which it is designated.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- Operation of your Walkman with software other than that supplied is not covered by the warranty.
- The explanations in this manual assume that you are familiar with the basic operations of your computer.
For details on the use of your computer and operating system, please refer to the respective manuals.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Maintenance of your Walkman

- Clean your Walkman with a soft cloth, such as a cleaning cloth for eyeglasses.
- If the headphone plug is dirty, it may cause noise or sound skipping. To enjoy listening with good sound, wipe the headphone plug occasionally with a soft dry cloth.
- Should your Walkman become excessively dirty, clean it with a soft cloth slightly moistened with water or mild detergent solution, being careful not to allow water to get inside the Walkman and headphones.
- Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene as doing so may damage the surface of your Walkman.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Customer support website

If you have any questions or issues with your Walkman, or would like information on compatible items with the Walkman, visit one of the following websites.

For customers in the USA:

<http://www.sony.com/walkmansupport>

For customers in Canada:

English

<http://www.sony.ca/ElectronicsSupport/>

French

<http://www.sony.ca/ElectronicsSupport/>

For customers in Latin America:

<http://www.sony-latin.com/index.crp>

For customers in Europe:

<http://www.sony.eu/dna/wm/>

For customers in Asia/Oceania/Middle East/Africa:

English

<http://www.sony-asia.com/support>

Korean

<https://scs.sony.co.kr/scs/handler/ProductSupport>

Simplified Chinese

<http://service.sony.com.cn/KB/>

Traditional Chinese

<http://service.sony.com.tw/>

For customers who purchased the overseas models:

<http://www.sony.co.jp/overseas/support/>

Digital Music Player
NW-E393/E394/E395

Specifications

Display

Size/resolution

1.77 inch (4.5 cm), QQVGA (128 × 160 Pixels) 65,536 colors

Panel type

TFT color display with white LED-backlight

Interface

USB

Hi-Speed USB (USB 2.0 compliant)

micro USB

Headphone

Stereo mini-jack

FM radio

FM Frequency range

87.5 MHz to 108.0 MHz

Antenna

Headphone cord antenna

Output (headphones)

Frequency

Frequency response

20 Hz to 20,000 Hz (when playing data file, single signal measurement)

Power Source

Built-in Rechargeable lithium-ion Battery

USB power (from a computer via a USB connector of the player)

Charging Time

USB-based charging

Approx. 120 minutes

Operating temperature

5 °C to 35 °C (41 °F to 95 °F)

Dimensions

w/h/d, projecting parts not included

42.4 mm × 92.0 mm × 9.1 mm (1 11/16 inches × 3 5/8 inches × 3/8 inches)

w/h/d

43.2 mm × 92.3 mm × 9.6 mm (1 3/4 inches × 3 3/4 inches × 13/32 inches)

Mass

Approx. 39 g (1.4 oz)

Capacity (User available capacity)


NW-E393: 4 GB

NW-E394: 8 GB

NW-E395: 16 GB

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Battery life

The values shown below are the approximate battery life when content is played continuously at the default settings.

Music

MP3 128 kbps: Approx. 35 Hrs

AAC 256 kbps: Approx. 34 Hrs

FM Radio


Approx. 12 Hrs

Note

- Even if the player is turned off for an extended period, a small amount of battery power is still consumed.
- Battery life may vary depending on volume setting, conditions of use and ambient temperature.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Maximum recordable number of songs and time (Approx.)

The approximate times are based on the case in which you transfer or record only 4 minute songs.

Number

NW-E393 (4 GB)

MP3 128 kbps: 840 songs

AAC 256 kbps: 420 songs

NW-E394 (8 GB)

MP3 128 kbps: 1,800 songs

AAC 256 kbps: 900 songs

NW-E395 (16 GB)

MP3 128 kbps: 3,700 songs

AAC 256 kbps: 1,800 songs

Time

NW-E393 (4 GB)

MP3 128 kbps: 56 hr. 00 min.

AAC 256 kbps: 28 hr. 00 min.

NW-E394 (8 GB)

MP3 128 kbps: 120 hr. 00 min.

AAC 256 kbps: 60 hr. 00 min.

NW-E395 (16 GB)

MP3 128 kbps: 246 hr. 40 min.

AAC 256 kbps: 120 hr. 00 min.



Digital Music Player
NW-E393/E394/E395

Supported formats

Music (Music player)

Audio Formats

MP3

Media File format: MP3 (MPEG-1 Layer3) file format

File extension: .mp3

Bit rate: 32 kbps to 320 kbps (Supports variable bit rate (VBR))

Sampling frequency (*1): 32, 44.1, 48 kHz

WMA (*2)

Media File format: ASF file format

File extension: .wma

Bit rate: 32 kbps to 192 kbps (Supports variable bit rate (VBR))

Sampling frequency (*1): 44.1 kHz

Linear PCM

Media File format: Wave-Riff file format

File extension: .wav

Bit rate: 1,411 kbps

Sampling frequency (*1): 44.1 kHz

AAC (*3)

Media File format: MP4 file format

File extension: .mp4, .m4a, .3gp

Bit rate: 16 kbps to 320 kbps (Supports variable bit rate (VBR)) (*4)

Sampling frequency (*1): 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48 kHz

Photo(*5)(Photo Viewer)

Photo Formats

JPEG

Media File format: Compatible with DCF 2.0/Exif 2.21 file format

File extension: .jpg

Profile : Baseline Profile

Number of pixels: Max. 2,048 × 2,048 pixels (4,194,304 pixels)

(*1) Sampling frequency may not correspond to all encoders.

(*2) Copyright protected WMA files cannot be played back.

(*3) Copyright protected AAC-LC files cannot be played back.

(*4) Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.

(*5) Some photo files cannot be played back, depending on their file formats.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

System requirements


- Computer
 - Windows Vista® (Service Pack 2 or later)
 - Windows® 7 (Service Pack 1 or later)
 - Windows® 8
 - Windows® 8.1
 - Windows® 10
 - Mac OS® X v10.6 or later

Pre-installed OS only supported.
[Compatibility mode] is not supported.
- PC application for Windows
 - Media Go application for Windows (recommendation)
 - Internet connection
 - Hard Disk Drive/Solid State Drive: 400 MB or more of available space
- PC application for Mac
 - Content Transfer for Mac application for Mac (recommendation)
 - Internet connection
 - Hard Disk Drive/Solid State Drive: 30 MB or more of available space
- Web browser: Internet Explorer 7 or later
- Internet: Internet connection (for Gracenote® MusicID® service, podcast features, Store access, or online help)

Not supported by the following environments:

- Personally constructed computers or operating systems
- An environment that is an upgrade of the original manufacturer-installed operating system
- Multi-boot environment

We do not guarantee operation for all computers even if they meet the above System Requirements.



Digital Music Player
NW-E393/E394/E395

Contents

List of accessories and manuals supplied with your Walkman.

- Walkman (1)
- Headphones (1)
- USB cable (1)
- Startup Guide
- Instruction Manual

4-579-798-11(1)


Copyright 2016 Sony Corporation


Digital Music Player
NW-E393/E394/E395

What can I do to solve a problem?

If your Walkman does not function as expected, try the following steps to resolve the issue.

Before restarting your Walkman, disconnect the Walkman from your computer and check that no content such as music is being played back. Otherwise, the data may be damaged. You can then restart the Walkman safely.

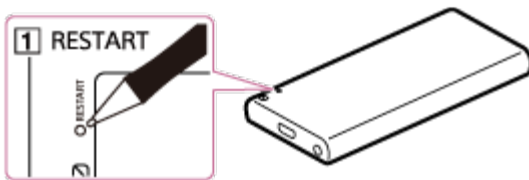

1. Check the topic on the issue in “Q&A.”
2. Connect your Walkman to your computer to charge the battery.
You may be able to resolve some issues by charging the battery.
3. Press the button () with a pen or paper clip, etc. to restart your Walkman.
4. Check information on the issue in the help of the software having problems.
5. Look up information on the issue on one of the customer support websites.
6. If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer.

Note

- Data will not be deleted, nor will any settings be changed by restarting.

Related Topic

- [Charging the battery](#)
- [Restarting your Walkman](#)
- [Customer support website](#)

Digital Music Player
NW-E393/E394/E395

Your Walkman does not operate or the power does not turn on.

- If you transfer a lot of content such as music to your Walkman at once, it will take time to build the database on the Walkman. Therefore, it will take more than 1 minute until the Walkman becomes operable again after you disconnect the Walkman from your computer.
- If the HOLD switch is set to the HOLD position, slide the switch to the opposite position.
- If your Walkman contains moisture condensation, wait a few hours to let the Walkman dry out.
- If the remaining battery power is low or insufficient, charge the battery.
- You cannot operate your Walkman while it is connected to a computer. Disconnect the Walkman from the computer.
- If your Walkman still does not operate after charging the battery, press the RESTART button with a pen or a paper clip, etc., to restart the Walkman.

Related Topic

- [Parts and controls](#)
- [Charging the battery](#)
- [Restarting your Walkman](#)




Digital Music Player
NW-E393/E394/E395

Your Walkman does not work properly.

- Your Walkman may not work properly if the USB device (e.g. computer) to which it is connected is turned on or off without disconnecting the Walkman.
Restart your Walkman by pressing the RESTART button with a pen or a paper clip, etc.

Related Topic

 [Restarting your Walkman](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Your Walkman power turns off or on automatically.

- If a malfunction occurs, your Walkman turns off and then on again automatically.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

You want your Walkman screen to stay on longer before it turns off automatically.

- You can set the screen off timer settings in [Screen Off Timer].

Related Topic

- [Setting the screen off timer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

A drink (water, coffee, etc.) was spilled on your Walkman, or the Walkman was washed in the washing machine.


- If you spill a drink on your Walkman or wash it in a washing machine, liquid may get inside the Walkman. Stop using the Walkman immediately and consult your nearest Sony dealer.

Related Topic

 [Customer support website](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

You want to back up the content such as music stored on your Walkman.


- Connect to a computer and copy the files onto the computer.
- If you have already deleted content transferred to your Walkman from Media Go, transfer the content from the Walkman to Media Go again.

Related Topic

- [Connecting to a computer](#)
- [Transferring content using Media Go](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

You want to find the product name (model name) of your Walkman.

- The model name is the alphabetical name starting with NW that is printed on the back of your Walkman. If the Walkman is inside a case, you need to remove it from the case to find the name.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

An alarm (beep) is heard and the message [Check the volume level] is displayed.

- An alarm (beep) and a warning [Check the volume level] are meant to protect your ears when you turn the volume up to a level that is harmful for your ears for the first time. You can cancel the alarm and warning by pressing any button.
- You can turn up the volume after canceling the alarm and warning.
- After the initial warning, the alarm and warning repeat every 20 cumulative hours that the volume is set to a level that is harmful for your ears. When this happens, the volume is turned down automatically.

Related Topic

- [Volume operation \(Only for countries/areas complying with European Directives\)](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

There is no sound.

- Check that the volume level is not set to zero.
- Check whether the plug is inserted firmly in the headphone jack. Sound will be impaired if the headphones are not connected properly. Insert the plug until it clicks into place.
- If the plug is dirty, wipe it clean with a soft dry cloth.
- If the problem persists after performing the remedies above, use a pen or paper clip, etc., to press the RESTART button and restart your Walkman.

Related Topic

- [Parts and controls](#)
- [Playing music](#)
- [Restarting your Walkman](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Content such as music suddenly stops during playback.

- The remaining battery power is low or the battery has run out.
- The content may not be supported on your Walkman. Select and play other content.

Related Topic

• [Supported formats](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation


Digital Music Player
NW-E393/E394/E395

Noise is generated.

- If using your Walkman near a device that emits radio waves such as a mobile phone, move the Walkman away from the device.
- The content such as music on your Walkman may be corrupted. Connect the Walkman to a Windows computer and use Media Go or Windows Explorer to delete the content in which the noise occurred from the Walkman. If you use a Mac computer, use the Finder to delete the corrupted content. After you have deleted the corrupted content, transfer the content from the computer to the Walkman again. Do not perform any other tasks on the computer while transferring content to the Walkman. Doing so may cause the content to be corrupted.
- If the plug is dirty, wipe it clean with a soft, dry cloth.

Related Topic

- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using the Finder](#)
- [Deleting content from your Walkman using Explorer](#)
- [Transferring content using Media Go](#)
- [Transferring content using Explorer](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using the Finder](#)



Digital Music Player
NW-E393/E394/E395

Volume cannot be turned up, or the volume remains low when the playback volume is turned up.

- If the HOLD switch is in the HOLD position, slide it to the opposite position.
- If the AVLS (Volume Limit) setting is activated, deactivate it.

Related Topic

- [Parts and controls](#)
- [Limiting the volume](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Sound can only be heard from one side of the headphones.

- Sound will not be output properly if the plug is not inserted correctly into the jack. Insert the headphone plug until it clicks into place.
- Wires inside the headphone cable may be broken due to unnecessary force, etc. being applied to the cable. If this occurs while using the supplied headphones with a Walkman model supplied with headphones, contact your nearest Sony dealer for repairs.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Sound is interrupted or skips.

- The sound may be interrupted or skip depending on the environment where your Walkman is used or the settings of the Walkman.

Following the procedures below may reduce the amount of skipping or interruptions.

- Set all sound quality settings to off.

Related Topic

- [Customizing sound quality settings](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

The sound effect settings do not seem to have any effect.

- Sound effect settings are not applied in the following cases.
 - While listening to FM radio

Related Topic


[Listening to FM radio](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

You cannot charge your Walkman.

- The battery cannot be charged while  is displayed because the protection function is engaged. Charge the battery within the ambient temperature range of 5 °C to 35 °C (41 °F to 95 °F).
- You need to turn the computer power on in order to charge your Walkman. Check whether the computer is in standby (sleep) or hibernation status.
- Check that the USB connection to the computer is made properly.
- There may be bad electrical contact in the connector. Disconnect your Walkman, and then reconnect it.
- Use the supplied USB cable.
- Your Walkman may not be able to connect properly to your computer when using a USB hub. Connect the Walkman directly to a USB connector on your computer.
- Check whether the operating system and operating system version installed on the computer are compatible with your Walkman.
- The battery may have deteriorated if you have not used your Walkman for more than a year. Contact your nearest Sony dealer.
- If the remedies above do not solve the problem, use a pen or paper clip, etc. to press the RESTART button and restart your Walkman, and then connect again using USB.

Related Topic

- [Charging the battery](#)
- [System requirements](#)
- [Restarting your Walkman](#)
- [Customer support website](#)

Digital Music Player
NW-E393/E394/E395

How long is the life of the built-in rechargeable battery?


- This will differ depending on the environment where your Walkman is used, but on average the built-in rechargeable battery can be charged approximately 500 times. The battery life becomes shorter and capacity is reduced as a result of the number of times it is recharged or used, and the environment in which it is used. When the usable battery life is half the usual time even when the battery is fully charged, the battery should be replaced.
- Consult your nearest Sony dealer for more details on the life of the built-in battery.

Related Topic

- [Customer support website](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

The rechargeable battery needs to be replaced.

- To replace rechargeable batteries, your Walkman needs to be taken apart professionally. Do not take apart the Walkman by yourself.
- Consult your nearest Sony dealer or Sony Service Center for replacement of rechargeable batteries.

Related Topic

[Customer support website](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

The battery life is short.

- If your Walkman is used in an environment where the temperature is below 5 °C (41 °F), the battery life becomes shorter due to characteristics of the battery. This is not a malfunction.
- Charge the battery until it is full.
- You can preserve the battery life and get more use from each charge by changing your Walkman settings and managing the power appropriately.
- Depending on the environment in which your Walkman is used, the battery may deteriorate if it is not used for over a year. Contact your nearest Sony dealer.
- If the usable battery life is half that when new even after sufficiently charging the battery, your battery may have deteriorated. Contact your nearest Sony dealer.

Related Topic

- [Charging the battery](#)
- [Extending the battery life](#)
- [Customer support website](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

How long is the standard battery duration?

- For details on the battery duration, see “Battery life.”

Related Topic

[Battery life](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

How long does it take to charge the battery?

- For details on the charging time, see “Specifications.”

Related Topic

● [Specifications](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

The computer does not recognize your Walkman.

- If the remaining battery power is low, charge the battery.
- When you use your Walkman for the first time, or if you have not used the Walkman for a long time, it may take a few minutes to be recognized by the computer. Check that the computer recognizes the Walkman after you have connected it to the computer for about 10 minutes.
- Make sure that the USB connection to the computer is made properly and securely.
- Use the supplied USB cable.
- Your Walkman may not be recognized if connected via a USB hub. Connect the Walkman directly to the USB connector on your computer.
- If the approaches listed above fail to resolve the issue, press the RESTART button with a pen or a paper clip, etc., to restart your Walkman, and then try the USB connection again.

Related Topic

- [Charging the battery](#)
- [Connecting to a computer](#)
- [Restarting your Walkman](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Even if you use "Safely Remove Hardware" on the computer, [Connected USB. The player cannot be operated.] remains displayed on your Walkman screen.

- When using Windows Vista, Windows 7, Windows 8, Windows 8.1 or Windows 10, the Walkman screen remains as [Connected USB. The player cannot be operated.]. This is not a problem provided that the "Safely Remove Hardware" operation is complete. Disconnect your Walkman from the computer.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

You cannot install software to your computer.

- If other software is running, it may interfere with the installation. Be sure to quit all other software before installing this software. Particularly, be sure to disconnect from the Internet and quit security software as it can put a heavy load on the computer.
- There may not be enough free space on the hard drive. Check the amount of free hard drive space required to install the software, and then delete any unnecessary files.
- With a Windows computer, you may not be able to install the software if your account does not have administrator privileges or if you have not logged in as a computer administrator. Log in using an account with administrator privileges or as the computer's administrator. Furthermore, if two-byte characters are used in the user name, create a new account using only one-byte characters in the user name.
- With a Windows computer, a message dialog may be hidden by the install screen, making the install process seem stopped. Press and hold the "Alt" key while pressing the "Tab" key several times. When the dialog is displayed, follow the instructions in the dialog box.

Related Topic

- [System requirements](#)
- [Installing Media Go](#)
- [Installing Content Transfer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation




Digital Music Player
NW-E393/E394/E395

The progress bar on the install screen does not proceed while installing the software.

- Wait until the installation is completed, because it is progressing properly. Installation may take 30 minutes or more depending on the computer used.

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Your Walkman is not recognized by Media Go.

- Your Walkman may not be recognized by the computer. Disconnect the Walkman from the computer, and then reconnect it.
- The software may have failed to install correctly. Use the installer to re-install the software. The imported data will remain untouched.
- If the remedies above do not solve the problem, use a pen or paper clip, etc. to press the RESTART button and restart your Walkman, and then connect again via USB.

Related Topic

- [Connecting to a computer](#)
- [Installing Media Go](#)
- [Restarting your Walkman](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Content such as music cannot be transferred from the computer to your Walkman.

- Check that the USB connection to the computer is made properly.
- Use the supplied USB cable.
- You may not be able to transfer content when using a USB hub. Connect directly to the USB connector on your computer.
- The version of the installed Media Go may not be the latest. Install the latest version via the Internet.
- There is not enough free space in your Walkman, or the number of files has exceeded the maximum number of transferable files. Delete any unnecessary content to increase free space. For details on the number of files recordable, see the following.
 - “Maximum recordable number of songs and time (Approx.)”
- Songs with a limited playing period or playing count may not be transferred due to restrictions set by copyright holders. For details on the settings of each audio file, contact the distributor.
- Some of the content on your Walkman may be damaged. Copy the content that you need onto the computer and initialize (format) the Walkman.
- If the software is not compatible with your Walkman, install compatible software and use the compatible software to transfer content.
- You may be attempting to transfer corrupted content. Delete the content that cannot be transferred from the computer, and import this content to the computer again. Do not perform any other tasks on the computer when transferring content to your computer. Doing so may cause the content to be corrupted.
- You may be attempting to transfer a file that is not in playable format. See “Supported formats.”
- Transferring may be stopped due to noise such as static electricity accumulated in the computer. This happens to protect data. Disconnect your Walkman, and then reconnect it.

Related Topic

- [Connecting to a computer](#)
- [Installing Media Go](#)
- [Maximum recordable number of songs and time \(Approx.\)](#)
- [Formatting memory](#)
- [Supported formats](#)

Digital Music Player
NW-E393/E394/E395

You cannot play content such as music transferred to your Walkman.


- If the remaining battery power is low or insufficient, charge the battery. If your Walkman still does not operate after charging the battery, press the RESTART button with a pen or a paper clip, etc. to restart the Walkman.
- The data hierarchy levels of the content such as music transferred by drag-and-drop may not be correct. Place them in the appropriate folder and hierarchy.
- Transferred files are not in a playable format. See “Supported formats” for details on playable formats.
- When you transfer audio MP4 files by drag-and-drop, place them in the “MUSIC” folder of your Walkman.
- The transferred content may be damaged. When you transfer content, make sure that no other tasks are running on your computer until transferring is completed. Otherwise, the content may be damaged. Delete the unplayable content from your Walkman and transfer it again. If the Walkman is still unable to play the content, format the built-in flash memory of the Walkman using the function of the Walkman and then transfer the content again.
- If you change the file names or location of the content such as music that was transferred from your computer to your Walkman, the content may not be recognized by the Walkman. Return it to the correct name and location.
- If you have initialized (formatted) the built-in flash memory of your Walkman using Windows Explorer, initialize (format) it again using the Walkman. If you have initialized (formatted) the Walkman using the Mac Finder, initialize (format) it again using the Walkman.

Related Topic

- [Charging the battery](#)
- [Restarting your Walkman](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)
- [Supported formats](#)
- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Explorer](#)
- [Deleting content from your Walkman using the Finder](#)
- [Formatting memory](#)

Digital Music Player
NW-E393/E394/E395

Songs are not played back in the expected order.

- If songs are being played back using shuffle, cancel shuffle to return to normal playback.
- When tracks are transferred from the computer using drag-and-drop, the track order may be different from the album track order. Create a playlist using software on your computer and transfer the playlist to your Walkman. For details on playlists, refer to the help of the software you are using.
- If you want to play songs in an album repeatedly, play the song by selecting  [Music] - [Album] from the Home menu, then display the option menu and select [Play Mode] - [Repeat].

Related Topic

- [Shuffle playback](#)
- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)


4-579-798-11(1)

Copyright 2016 Sony Corporation




Digital Music Player
NW-E393/E394/E395

Playback progresses to the next album when repeat playback is set.

- If you want to play songs in an album repeatedly, play the song by selecting  [Music] - [Album] from the Home menu, then display the option menu and select [Play Mode] - [Repeat].

4-579-798-11(1)

Copyright 2016 Sony Corporation




Digital Music Player
NW-E393/E394/E395

Songs are only played within a limited range such as within one album.

- If you want to play all the songs on your Walkman, select a song from  [Music] - [All Songs].

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Songs are not displayed in the order they were transferred in.


- Songs are not displayed in the order they were transferred in. To transfer songs in a specific order, create a playlist using software on your computer and transfer the playlist to your Walkman. For details on playlists, refer to the help of the software you are using.

Related Topic

- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

The content such as music is displayed repeatedly.

- Content is displayed repeatedly when you transfer content using 2 or more software programs, for example when you transferred content using Media Go and then transferred the same content using software other than Media Go.
- When you import a compilation album using Media Go, it may be imported as multiple albums. If this happens, edit the data using Media Go so that they are put together as an album, and then transfer it to your Walkman again. For details on how to edit, refer to the help of Media Go.

Related Topic

- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Thumbnails such as cover art are not displayed.

- Register the cover art in Media Go or iTunes. Cover art may not be displayed for songs transferred from Windows Explorer or the Mac Finder.
- If photos do not have thumbnails that comply with Exif file format, the thumbnails cannot be displayed.
- To attach cover art to a song that has already been transferred to your Walkman, delete the music content from the Walkman, add the cover art to the content on your computer, and then transfer the content to the Walkman again.

Related Topic

- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Transferring content using Explorer](#)
- [Transferring content using the Finder](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

[□] is displayed in the screen.


- Some types of characters and symbols may not be displayed correctly on your Walkman in the following cases:
 - A language that is not supported by your Walkman is used in the text.
 - User-defined characters or special symbols are used in the text.
- Replace the characters of the content that has been transferred to your Walkman using software with displayable characters in the software and transfer the content to the Walkman again.

Related Topic

- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

[Unknown] is displayed for the album name or artist name.

- Information such as the album or artist name is not contained in the data. You can add an album or artist name to content such as music transferred using software and transfer the content to your Walkman again.
- Information such as the song title, album or artist name cannot be added to WAV files due to the file specifications.

Related Topic

- [Transferring content using Media Go](#)
- [Transferring content using Content Transfer](#)
- [Supported formats](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

You cannot delete content such as music using the Walkman functions.

- You cannot delete the sample data installed at the factory on your Walkman using the Walkman functions. You also cannot delete content transferred using software such as Media Go or iTunes by using the function on the Walkman. Delete them using the software that you used to transfer them.
- You cannot delete content transferred using Windows Explorer by using the function on your Walkman. Delete the content using Windows Explorer.
- You cannot delete content transferred using the Finder by using the function on the Walkman. Delete the content using the Finder.

Related Topic

- [Deleting content from your Walkman using Media Go](#)
- [Deleting content from your Walkman using Content Transfer](#)
- [Deleting content from your Walkman using Explorer](#)
- [Deleting content from your Walkman using the Finder](#)

Digital Music Player
NW-E393/E394/E395

You cannot hear FM radio broadcasts.

- The headphone cord functions as an antenna. FM broadcasts cannot be received when the headphones are not connected.
- The received station may not be fully tuned in. Fully tune in to a station for the best reception.

Related Topic

- [Listening to FM radio](#)
- [FM radio operations](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

There is a lot of noise in an FM radio broadcast and the sound quality is poor.

- The FM signal may be weak inside a building or vehicle. Listen to the FM broadcast near a window if the signal is weak inside a building or vehicle.
- The headphone cord functions as an antenna. Extend the headphone cord as far as possible.
- When [Mono/Auto] is set to [Auto], the reception sensitivity is set automatically according to the reception status. Set [Mono/Auto] to [Mono].

Related Topic

- [Setting monaural/auto for FM radio](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation



Digital Music Player
NW-E393/E394/E395

Your Walkman gets warm.

- Depending on the way you use your Walkman, the Walkman may become warm while the battery is being charged or the Walkman is performing intensive data processing. This is not a malfunction.

4-579-798-11(1)

Copyright 2016 Sony Corporation

Digital Music Player
NW-E393/E394/E395

Message list

[System software update failed.] is displayed.

The update of the system software failed to be completed.

Follow the instructions displayed on your computer to retry updating the system software.

[Check the volume level] is displayed.

- An alarm (beep) and a warning [Check the volume level] are used to protect your ears when you turn the volume up to a level that is harmful to your ears for the first time. You can cancel the alarm and warning by pressing any button.
- You can turn up the volume after canceling the alarm and warning.
- After the initial warning, the alarm and warning repeat for every 20 cumulative hours that the volume is set to a level that is harmful for your ears. When this happens, the volume is turned down automatically.

Related Topic

- [Updating the system software of your Walkman](#)
- [Volume operation \(Only for countries/areas complying with European Directives\)](#)

4-579-798-11(1)

Copyright 2016 Sony Corporation