



# *Quick Reference Guide*

Original Air Fryer Toaster Oven  
C0130-A0

COSORI

# Tips from the Chef



## Toasting

Your toaster oven can fit up to 6 slices of bread. If your bread isn't evenly toasted, try toasting only 4 slices at a time.



## Cleaning the Crumb Tray

Clean the crumb tray at the bottom after using. Accumulated grease and crumbs can overheat and even catch fire.



## Unplug

Your toaster oven is a powerful appliance. To save energy, unplug it when you're done cooking.



## Accessorize

You can step up your baking by investing in cupcake pans, bread pans, ceramic souffle cups, and anything you'd use for a full-size oven.



## More Isn't Always Better

Don't let your oven get cramped. Putting too much food in the oven can cause uneven cooking. If food touches the heating elements, it will burn.



## Wrapping Up

Line the trays or racks with foil, parchment paper, or baking paper to protect the enamel on the trays, to catch grease, and to provide easy cleanup. Wrap food in foil for easier baking.

**WARNING:** Use extreme caution when using foil or paper. Fit foil as securely as possible. Paper must be secured by placing food on top of it. Foil or paper must never touch the heating elements to avoid fire hazard.



## Always Use Mitts

Be careful not to burn your skin. Every part of the oven, including the outside surface, is hot during and after cooking. Make sure to wear gloves or mitts when handling trays or other accessories.



## Thawing Meat

Wait for meat to reach room temperature before you cook it. This allows the inside and outside of the meat to cook evenly.



## Using the Fan

The convection fan circulates hot air in the oven for faster and more even cooking. Use the high fan speed for crispier results. For example, if you're roasting a large chicken, use the high fan speed to dry out the skin faster for a crispier roast.



## Keep the Oven Door Closed

Avoid opening the oven door for more than 2–3 seconds to check on your food. The oven temperature will drop significantly, and your food may be undercooked.

# SHORTCUT SHEET

---


Please check the manual for complete details on operating your Cosori Air Fryer Toaster Oven

## TOAST, BAGEL

1. Turn **FUNCTION** knob to select cooking function
2. **Optional:** Turn **TIME/TEMP** knob to select Darkness Level
3. Place food in oven
4. Press **START/CANCEL**
5. Oven will beep & display will blink when finished

## PIZZA, BAKE, ROAST, AIR FRY, BROIL, COOKIES

1. Turn **FUNCTION** knob to select cooking function
2. **Optional:** Turn **TIME/TEMP** knob to set time
3. **Optional:** Press and turn **TIME/TEMP** knob to set temperature
4. Press **START/CANCEL** to preheat
5. Oven will beep & display will blink when done preheating
6. Place food in oven
7. Press **START/CANCEL** again
8. Oven will beep & display will blink when finished

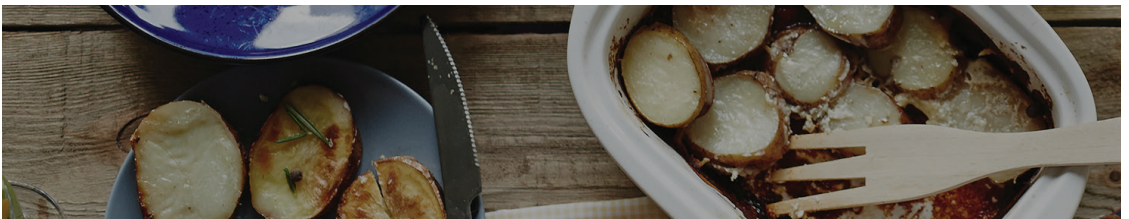

## ROTISSERIE, DEHYDRATE, FERMENT, WARM

1. Turn **FUNCTION** knob to select cooking function
2. **Optional:** Turn **TIME/TEMP** knob to set time
3. **Optional:** Press and turn **TIME/TEMP** knob to set temperature
4. Place food in oven
5. Press **START/CANCEL**
6. Oven will beep & display will blink when finished




## FUNCTION TIPS

- TOAST can also manually preheat the oven or defrost foods.
- BAGEL toasts more on the top than the bottom. The inside (cut side) of the bagel should face upwards for best results.
- ROTISSERIE requires the food tray in the low rack position to collect drippings.



# CONTROLS QUICK REFERENCE CHART

- You may adjust the time and temperature anytime during cooking (except while preheating).
- Time and temperature are automatic for the Toast / Bagel functions.

<b>Adjusting Time</b>	Turn <b>TIME/TEMP</b> knob.
	If you're adjusting temperature, press <b>TIME/TEMP</b> knob to switch to time.
	Adjusts by +/- 1 minute below 60 minutes, +/- 5 minutes for 1–2 hours, +/- 10 minutes for 2–3 hours, and +/- 15 minutes above 3 hours.
	Dehydrate / Ferment: Adjusts by +/- 30 minutes.
<b>Adjusting Temperature</b>	Press <b>TIME/TEMP</b> knob once. Then, turn <b>TIME/TEMP</b> knob.
	Adjusts by +/- 5°F.
<b>Controlling Light</b>	Press  <b>°C/°F</b> .
	Light will turn on automatically with 1 minute of cook time left.
<b>Switching Temperature Units</b>	Press and hold  <b>°C/°F</b> to switch between Fahrenheit / Celsius.
<b>Controlling Fan</b>	Press  to cycle through fan speeds: normal, high, and off.
	Fan can be used for all functions except Toast or Bagel. Speed cannot be changed with Air Fry and Dehydrate.

# Thank you for your purchase!

(We hope you love your new air fryer toaster oven as much as we do.)



*join*

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://facebook.com/groups/cosoricooks)



*explore*

our recipe gallery  
[www.cosori.com/recipes](http://www.cosori.com/recipes)



*enjoy*

weekly, featured recipes  
*made exclusively by our in-house chefs*



## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-Free:** (888) 402-1684

M-F, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

# Happy cooking!



**Questions or Concerns?**

support@cosori.com | (888) 402-1684  
Mon–Fri, 9:00 am–5:00 pm PST/PDT

JJ0619CC\_Q1\_0619CO130-AO