
LLDP762-K16128 Remote Led Sign By U-disk Program Message Manual


1. Please open the CD and install the English version software **LED Center** in your computer.Insert your U-disk to your computer USB port.

2. Click **Setup – Hardware** or **Hardware,** the password: **168**

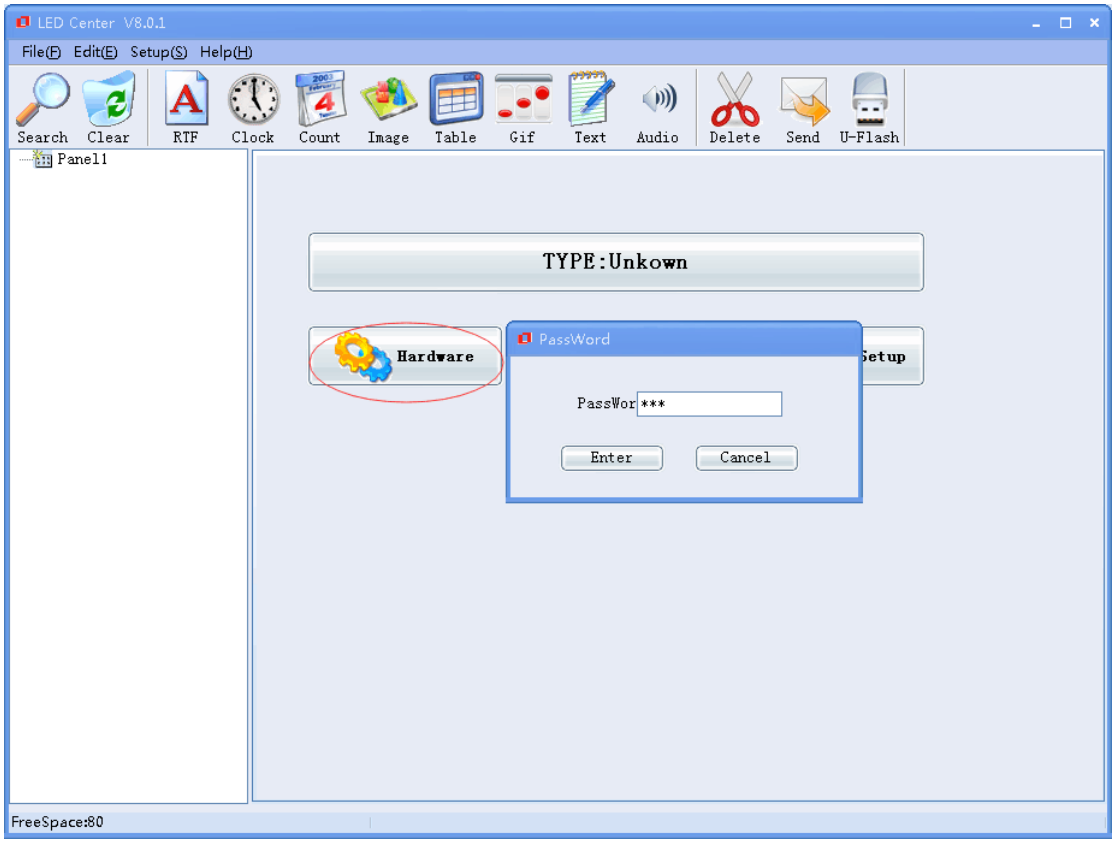


3. Set the panel parameters according to below (refer below photo and the sticker on the led sign backside): Click **Send and then "确定"**


Height: 16
Width: 128
Data Pola: Low
OE Pola: High
Color: Monochrome
Scan: 1/16
16.0: No warp, 1 data= 16 row.(16-P16)

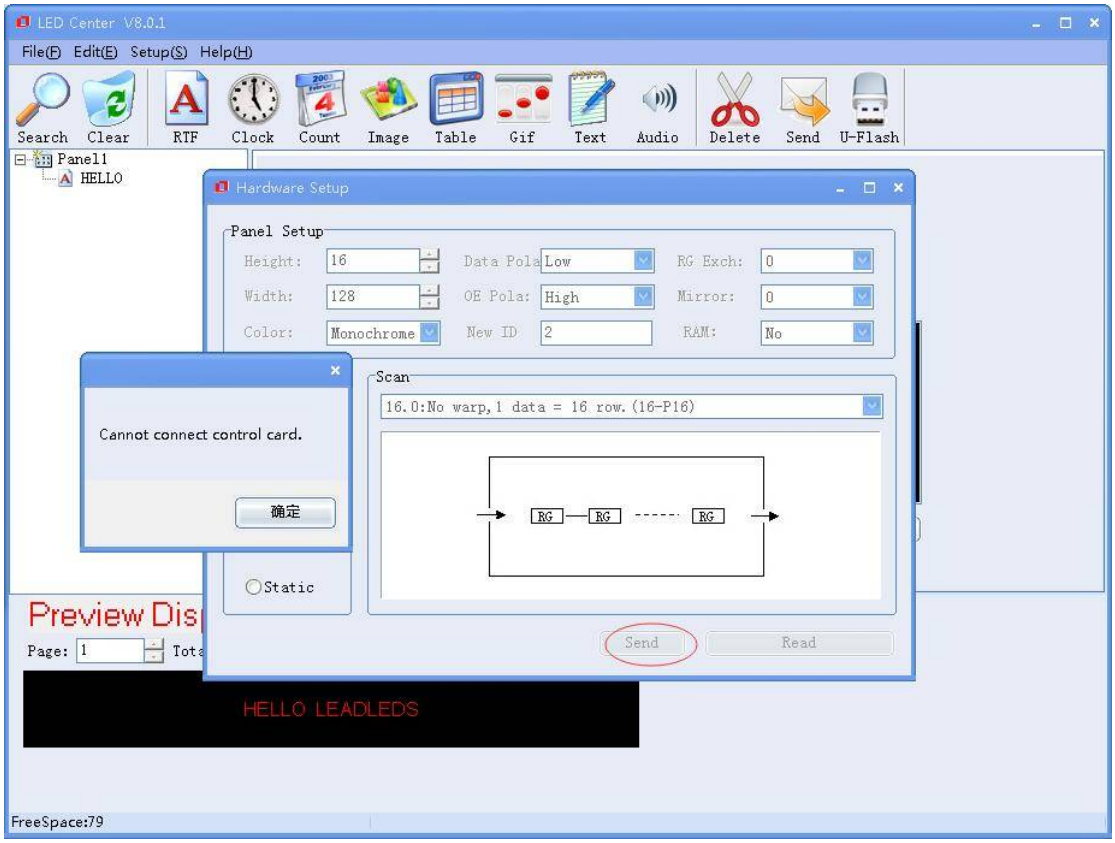


4. Click “**RTF**” to program the message.

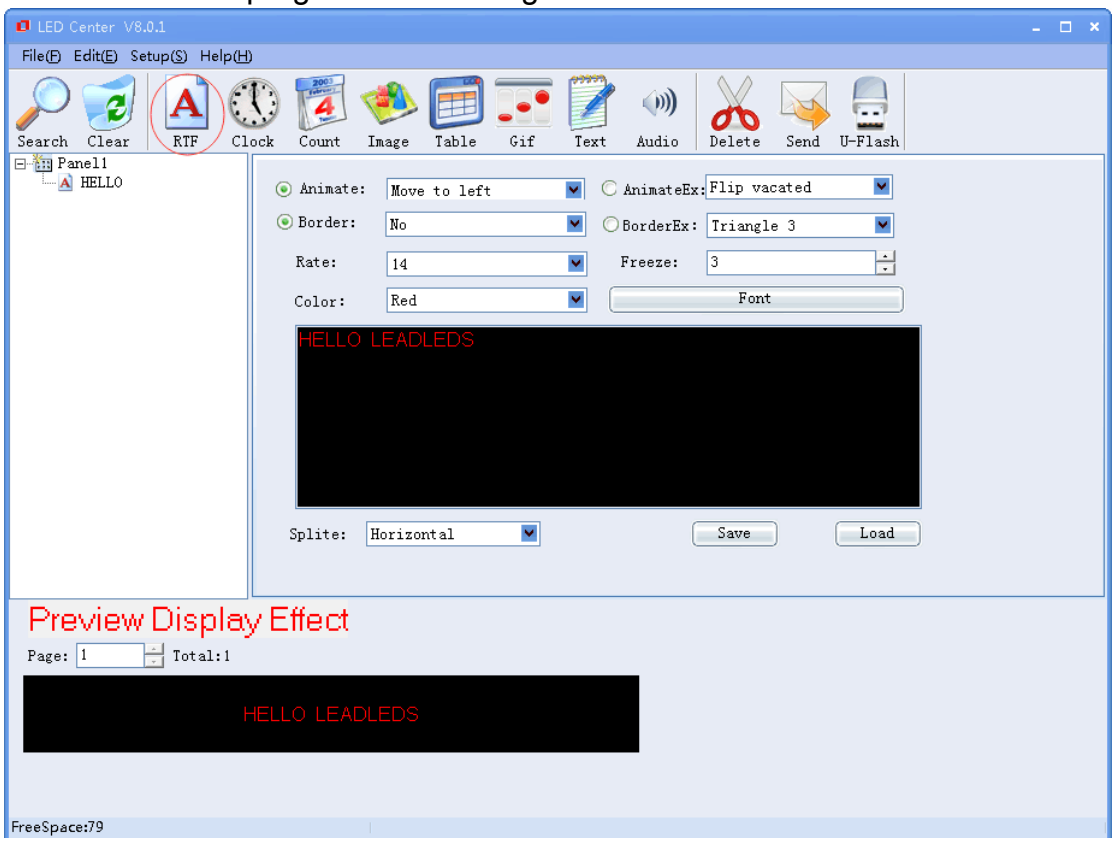


5. After finished program, click **U-Flash** this icon to save the message to your U-disk.

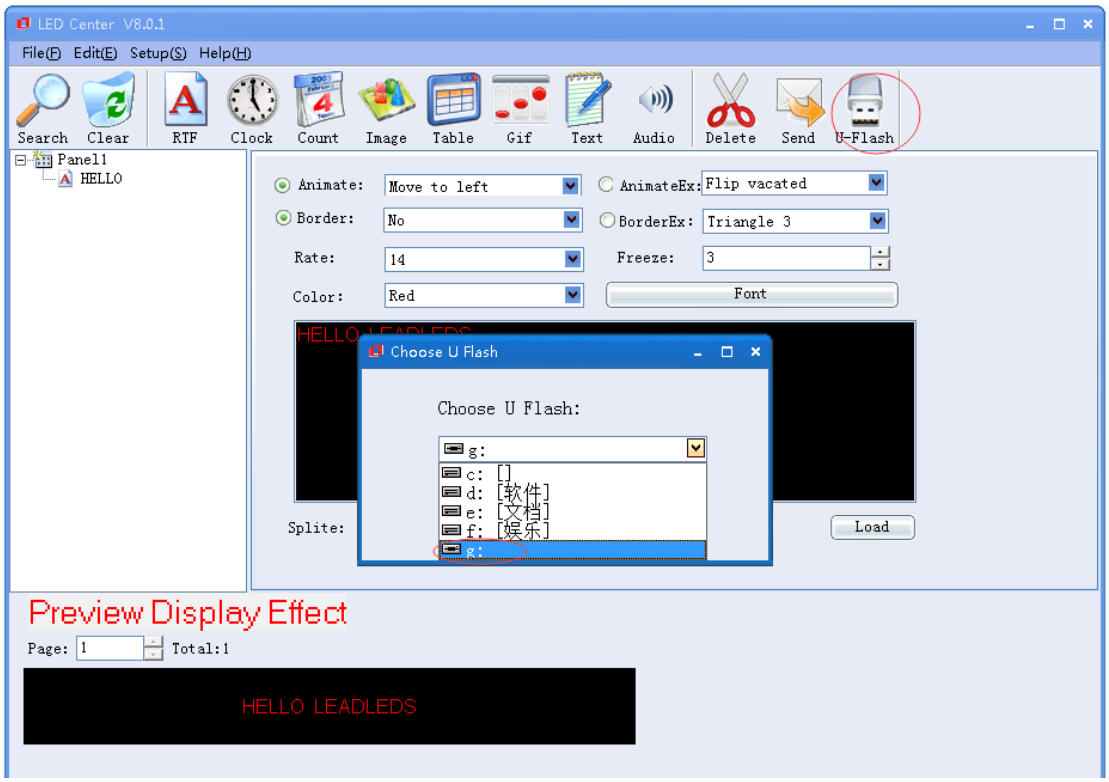

6. Choose your U- disk to save the message, click "**Enter**"

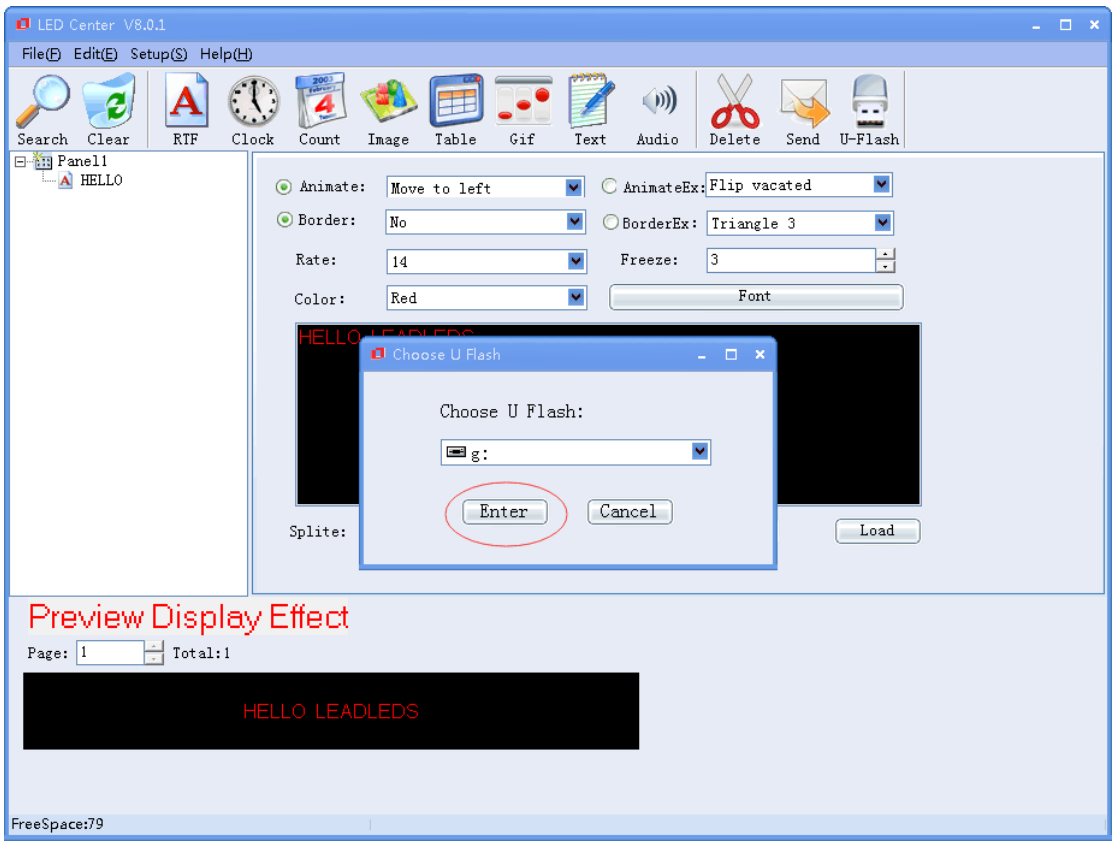

7. Click “**OK**”

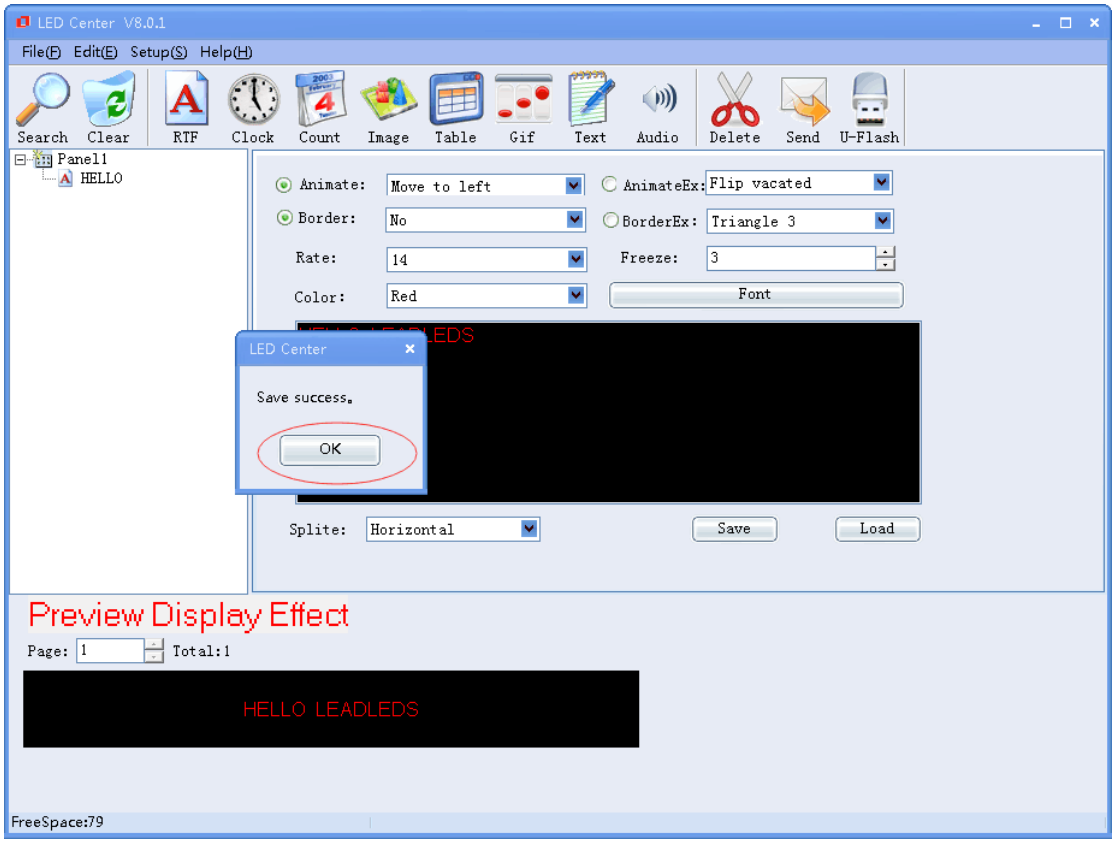

8. Now move the U- disk from your computer and insert it to the led sign USB port, it’ll read the message automatically, after you see“读取成功, 请拔卡”, It’s meaning the message have successful loading into the led sign. Move the U-disk from the led sign. See what it is, that’s just you programmed message!

----------**Thank you for use LEADLEDS products**----------

If have any technical question, please send your question to: jingzhi5685@leadleds.com