

Styling Tips For Maximum Volume and Body

- Start by sectioning the hair. Be sure to comb through hair so it's detangled.
- To turn the appliance on, select the correct heat setting for your hair type.
- Place the appliance into the hair, close to the roots and brush through the section.
- Move the brush through the hair towards the ends, and as you reach the end of the section, start to rotate the brush away from your head by pressing and holding the appropriate rotate button.
- As you do this, resist the rotation of the brush by pulling the brush downwards. Tension created through the section of hair will help to smooth hair faster.

IMPORTANT! It may take several attempts to perfect this technique. If the brush spins too quickly, simply release the rotation button and remove from the hair.

- For added root lift, hold the brush in place at the root for a few seconds.
- For even more volume, allow the brush to rotate, winding the entire

Rotation Settings
There are two rotation speed settings. To make the brush head rotate, press the buttons marked << and >>, these will make the brush head rotate clockwise and counterclockwise. The rotation can be used on the low and high settings. When the appliance is used on the cool setting, the brush head will not rotate. For best results, use the rotating brush feature to create styles with gorgeous volume and shine.

Protective Cover
After every use, always ensure the protective shield is placed over the brush head. This protects the bristles and stops them from getting distorted.

INSTRUCTIONS FOR USE

If you have long or thick hair, you may find it quicker and easier to use a hairdryer first to dry your hair and remove the excess moisture. For added volume, turn your head upside down as you dry.

Once the hair is 80% dry, you should start to create your style using the InfinitiPro by Conair® Spin Air Brush.

True Ionic Technology
Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution contribute to a buildup of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough.


Consequently, hair may have a dull appearance. Also high levels of static charge cause hair to become flyaway and difficult to style. The ion generator produces a stream of negative ions that act to neutralize the static charge, smoothing the cuticle for shiny, smooth and manageable hair, so you can achieve your desired style easily.

Ceramic Technology
The rotating barrel delivers even ceramic heat, eliminating damaging hot spots for beautiful frizz-free shine.

3 Heat/speed Settings
Low Setting: This position combines ideal air flow and temperature setting for shaping finer, damaged or treated hair.

High Setting: Combines ideal airflow with higher temperature, especially recommended for pre-drying and also for styling thick hair.


The Cool Setting: Using the cool setting at the end sets the style for a long-lasting effect. The rotation/spin function is not needed for cool setting so that style can easily be set.

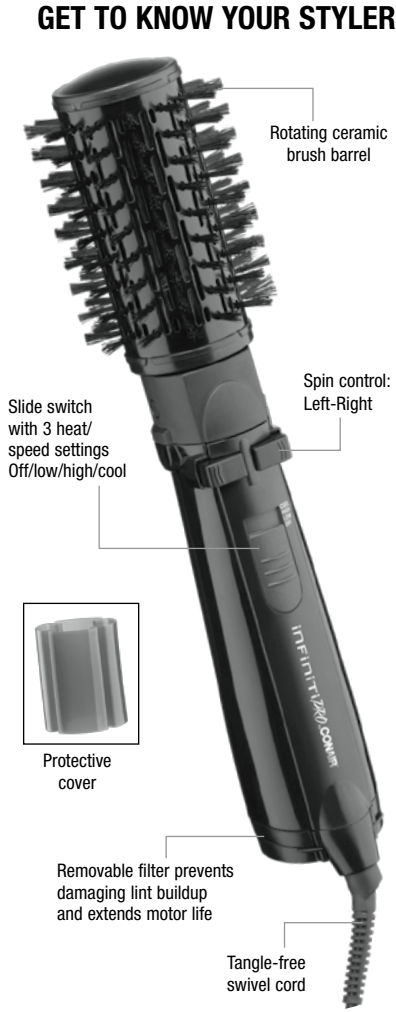

PRUEBE EL CORTACIRCUITO DE SEGURIDAD ANTES DE CADA USO

Este aparato está dotado de un cortacircuito de seguridad llamado ALCI (Appliance Leakage Circuit Interrupter), que apaga el aparato inmediatamente si este caeera al agua. Haga la prueba siguiente para asegurarse de que el sistema de detección de agua funcione correctamente:

- Enchufe el aparato y apriete el botón de prueba (véase el gráfico más abajo).
- El aparato dejará de funcionar. Se oirá un clic y el botón de reinicio saltará.
- Para reajustarlo, desconecte el aparato. Oprima el botón de reajuste y vuelva a conectar el cable.

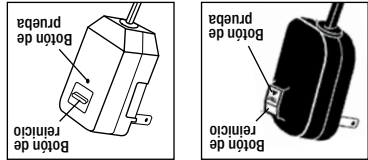

- Si el aparato caeera al agua, es muy importante que la del circuito. Esto podría provocar un incendio eléctrico.
- El aparato se vuelve muy caliente durante el uso. Permita que enfrie antes de usarlo.
- No coloque el aparato en ninguna superficie durante el uso. Permita que enfrie antes de usarlo.
- No dirija el aire caliente hacia los ojos u otras áreas sensibles al calor.
- Si el aparato caeera al agua, desconecte inmediatamente. No toque el agua.

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:
1. Nunca deje el aparato desatendido durante el uso. Mantenga su cabello alejado de las aberturas de aire.
2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. No opere este aparato si el cordón o la clavija están sueltos, dañados, después de haberse calentado o si estuvieron dañados. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.
5. Mantenga el cable alejado de superficies calientes. No jale, retuerza ni enrollé el cable alrededor del aparato, incluso para almacenarlo. El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente. Mantenga las aberturas libres de pelusas, cabellos y elementos similares. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.

FAMILIARÍCESE CON SU CEPILLO DE AIRE



CARACTERÍSTICAS

- 500 vatios
- Acondicionamiento iónico, para mayor brillo
- Cuerpo de cerámica de 2 pulgadas (5 cm) de diámetro) con cerdas antistáticas suaves
- 2 ajustes de temperatura, más aire frío total
- Función giratoria opcional
- Cepillo multidireccional
- Filtro articulado fácil de limpiar
- Cubierta protectora
- Cable profesional

CONSEJOS PARA OBTENER MÁXIMO VOLUMEN Y CUERPO

- Divida el cabello en secciones para obtener máximo volumen y cuerpo
- Encienda el aparato y elija el nivel de temperatura deseado, según su tipo de cabello.
- Coloque el cepillo debajo una sección de cabello, cerca del cuero cabelludo, y bájeilo lentamente hacia las puntas.
- Al llegar a las puntas, haga girar el cepillo hacia dentro, optimiendo el botón adecuado.
- Creé tensión, jalando ligeramente el cepillo hacia abajo. Esto ayudará a alisar el cabello más rápidamente. requiera práctica. Si el cepillo gira demasiado rápido, simplemente atíjelo y manténgalo en posición durante varios segundos.
- Para obtener aun más volumen, haga girar el cepillo en posición durante varios segundos.

INSTRUCCIONES DE USO

2. Velocidades/3 ajustes de temperatura (LOW): Perfecto para el cabello fino, dañado o tratado.
3. Alto (HIGH): Perfecto para pressecar el cabello y peinar el cabello grueso.
4. Aire frío (COOL): Ideal para fijar el peinado, para estilos que duren más tiempo. Nota: la función rotativa no funcionara con este ajuste.
5. Creé tensión, jalando ligeramente el cepillo de aire giratorio InfinitiPro forma con su cabello este seco al 80%, pongalo en posición para secarlo. Mantenga el cepillo alejado de la sección de cabello, cerca del cuero cabelludo, y bájeilo lentamente hacia las puntas.

SAVE THESE INSTRUCTIONS

Muchos factores ambientales modernos, incluso la aire acondicionado, las fibras artificiales y el cepillar o secar el cabello con un secador de aire acondicionado, electrizan el cabello. Hasta áspera y que el cabello pierda su brillo. Mitos negativos que neutralizan la carga positiva de la cerámica suavizan la cutícula y dejando el cabello sedoso y docil, para que sea más fácil peinarlo.

El cuerpo de cerámica del cepillo asegura una distribución uniforme del calor, lo que evita los daños causados por éste y ofrece resultados hermosos, brillantes y sin frizz.

Control de la función rotativa (Izquierda-Derecha)

Control de la velocidad/temperatura (apagado/bajo/alto/frío)

Cuerpo de cerámica de giratorio

OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard hot air stylers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT – 500 WATT OPERATING GUIDE

Use of this hot air styler on the same circuit or fuse with other electrical products or appliances may trip the circuit. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE.

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

- Plug in the appliance and press test button on plug (see appropriate diagram).
- The appliance will stop working. There will be an audible click and reset button will pop out.
- To reset ALCI with a reset button, unit should be unplugged. Then push reset button in and reinsert plug into outlet.
- If ALCI is not functioning properly, return appliance to service center.
- It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

Super Styling Guide
Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

The InfinitiPro by Conair® 2-in. Spin Air Brush is an innovative, revolutionary hot air styler that has effectively eliminated the need for a hair brush or a dryer and brought salon quality results to your home.

The InfinitiPro by Conair® Spin Air Brush is perfect for adding gorgeous volume and shine to styles. The large ceramic barrel gives fullness and body as you style, while the soft bristles create ultimate shine and smoothness.

Function Rotativa Tecnología Iónica Verdadera

El cuerpo del cepillo puede girar en ambas direcciones. Simplemente oprima el botón de secado, haciendo que la cutícula se vuelva más suave y que el cabello gire con un secador de aire acondicionado, electrizan el cabello. Hasta áspera y que el cabello pierda su brillo. Mitos negativos que neutralizan la carga positiva de la cerámica suavizan la cutícula y dejando el cabello sedoso y docil, para que sea más fácil peinarlo.

El cuerpo de cerámica del cepillo asegura una distribución uniforme del calor, lo que evita los daños causados por éste y ofrece resultados hermosos, brillantes y sin frizz.

Control de la función rotativa (Izquierda-Derecha)

Control de la velocidad/temperatura (apagado/bajo/alto/frío)

Cuerpo de cerámica de giratorio

Cubierta protectora
Cubra el cepillo con la cubierta protectora después de cada uso. La cubierta protectora protege las cerdas, manteniendo su forma original.


Tecnología cerámica
El cuerpo de cerámica del cepillo asegura una sección de cabello, cerca del cuero cabelludo, y bájeilo lentamente hacia las puntas.

3. Coloque el cepillo debajo una sección de cabello, cerca del cuero cabelludo, y bájeilo lentamente hacia las puntas.

4. Al llegar a las puntas, haga girar el cepillo hacia dentro, optimiendo el botón adecuado.

5. Creé tensión, jalando ligeramente el cepillo hacia abajo. Esto ayudará a alisar el cabello más rápidamente. requiera práctica. Si el cepillo gira demasiado rápido, simplemente atíjelo y manténgalo en posición durante varios segundos.

7. Para obtener aun más volumen, haga girar el cepillo en posición durante varios segundos.

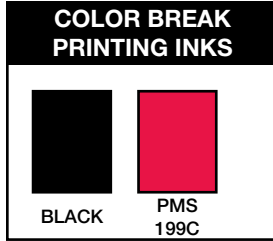

envolviendo el cablelo alrededor del cuerpo. Afije el botón para activar la función rotativa y mantenga el cepillo en posición durante unos segundos. Utilice el aire fro para fijar el peinado. 8. Para liberar el cablelo, haga girar el cepillo en la otra dirección. 9. Repita cuantas veces sea necesario. 10. Para dar menos volumen al cablelo, utilice la misma técnica, pero sin la función rotativa. 11. Apague y desconecte el aparato después del uso. 12. Permita que enfríe antes de guardarlo. 13. Cubra el cepillo con la cubierta protectora para proteger las cerdas.


Consejos útiles

• Para dar definición a las capas y poner peinados en forma, siga el paso 4 con cada sección de cablelo. • Para agregar volumen a la raíz y cuerpo a la parte superior del cablelo, siga los pasos 3 a 6, estirando el cablelo hacia arriba.

• También puede usar el cepillo para doblar las puntas hacia dentro/fuera y dar forma a los flequillos.

LIMPIEZA Y MANTENIMIENTO

- Desconecte el aparato y permita que enfríe completamente antes de limpiarlo.
- Limpie el cuerpo del aparato con un paño suave, para evitar que el motor sobrecaliente. Esto prolongará la vida útil del motor.
- Limpie el filtro regularmente, usando un cepillo suave, para evitar que el motor sobrecaliente. Esto prolongará la vida útil del motor.
- Limpie el cuerpo del aparato con un paño suave, para evitar que el motor sobrecaliente. Esto prolongará la vida útil del motor.

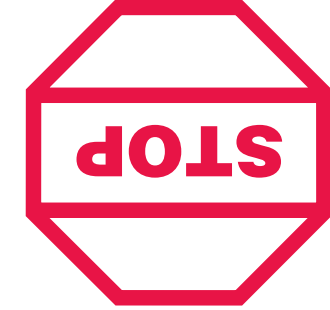

Este mensaje sobre los...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

IMPORTANTE
No sumerja este aparato en el agua u otro líquido. **¡DEBE USAR EL APARATO EN EL CUARTO DE BAÑO, INSTALE UN GFCI* AHORA!** Su electricista le puede ayudar a decidir cuál sistema escoger – un sistema amovible que se conecta a la toma de corriente o un sistema permanente que el instalador. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con GFCI. La electricidad del aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese de que las ventilaciones de aire estén limpias.

¡Un GFCI puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere... ¡instale uno ahora mismo! Un GFCI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad. GFCI ofrece más protección. Este podrá dañar la junta flexible que lo conecta al interruptor de circuito regular no esté apagado. Un fusible o un NUNCA jale, retuerza ni doble mucho el cable. Inspeccione el cable con frecuencia para asegurarse de que no esté dañado. Déje de usar el aparato inmediatamente si el cable parece dañado o si el aparato deja de funcionar o funcionara de manera intermitente.



INSTRUCCIONES DE MANTENIMIENTO
Su aparato requiere poco mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpi. Cuando sea necesario limpiarlo, desconecte el aparato y asegúrese de que el polvo y las hebras de las aberturas de aire estén limpias. El aparato se recalentará si las aberturas de aire estuvieran bloqueadas u obstruidas. Si esto ocurriera, un sistema de seguridad apagará el aparato o cortará la temperatura automáticamente para evitar daños al aparato o heridas. Si esto sucediera, desconecte el aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese de que las ventilaciones de aire estén limpias.

PRECAUCIÓN
NUNCA jale, retuerza ni doble mucho el cable. Inspeccione el cable con frecuencia para asegurarse de que no esté dañado. Déje de usar el aparato inmediatamente si el cable parece dañado o si el aparato deja de funcionar o funcionara de manera intermitente.

ALMACENAJE – IMPORTANTE
Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.** Permita que el cable esté suelta y recta.

TRY OUR OTHER INFINITI PRO BY CONAIR™ PRODUCTS



Dryer Model 259



Straightener Models CS31, CS32 and CS33



Curling Iron Models CD106, CD107, CD108, and CD109

LIMITED THREE-YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$7.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 3 years from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. **IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

USER MAINTENANCE

Your hot air styler is virtually maintenance free. No lubrication is needed. For proper operating performance, the hot air styler must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the hot air styler should be wiped clean with a cloth only. **Blocked or clogged air intake vents will cause the hot air styler to overheat.** If overheating occurs, an automatic safety device will shut the hot air styler or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the hot air styler to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the hot air styler. Damage will occur at the high flex point of entry into the hot air styler, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or hot air styler is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE – IMPORTANT
When not in use, your hot air styler should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around hot air styler. Allow the cord to hang or lie loose and straight at the point of entry into the hot air styler.

IMPORTANT

Never immerse this product in water or any other liquid.

IF YOU MUST USE YOUR HOT AIR STYLER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hot air styler falls in water while it's plugged in, the electric shock can kill you... **even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!

*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

PRUEBE OTROS PRODUCTOS INFINITI PRO BY CONAIR™



Secador (modelo 259)



Planchas alisadoras (modelos CS31, CS32 y CS33)



Tenacillas (modelos CD106, CD107, CD108 y CD109)

10NP17934 IB-10425

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para más información sobre los productos Conair® o Infiniti by Conair®, llame al 1-800-3-CONAIR o visite nos en www.conair.com/infiniti

©2011 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307



INFINITI PRO BY CONAIR™
Cepillo Giratorio de 2 pulgadas (5 cm) de diámetro

Manual de instrucciones Modelo BC178

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Da cuerpo y brillo mientras seca.

section of hair around the barrel. Release the rotate button and then leave the brush in the hair for a few seconds. Use cool style setting to set style.

8. To release the section, press and hold the opposite rotation button to unwind the hair section.

9. Repeat as necessary.

10. For less volume, you can follow the same steps and use without the spin function.

11. After use, switch off and unplug the appliance.

12. Allow to cool before storing away.

13. Place protective shield over brush head to protect the bristles.

Helpful Hints and Tips

- To define layers and give shape to styles, follow step 4 and repeat through section.
- To get root volume and body through the top section of hair, follow steps 3 to 6 but using an upward motion.
- You can create flips or tuck hair under. Also perfect for shaping bangs.

CLEANING & MAINTENANCE

- Unplug the appliance and let cool completely before cleaning it.
- Use a damp cloth then clean carefully. Make sure the appliance is completely dry before using again.
- The rear filter should be cleaned using a soft brush on a regular basis to help prevent buildup and overheating. This will also prolong the motor life.



This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!