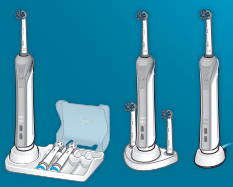
Oral-B
PRO
powered by BRAUN

500-3000





Charger Type 3757
Handle Type 3756

문의사항이 있으시면 소비자상담실로
연락주시기 바랍니다.

소비자 상담실
(KR) 080-920-6000(수신자 부담)

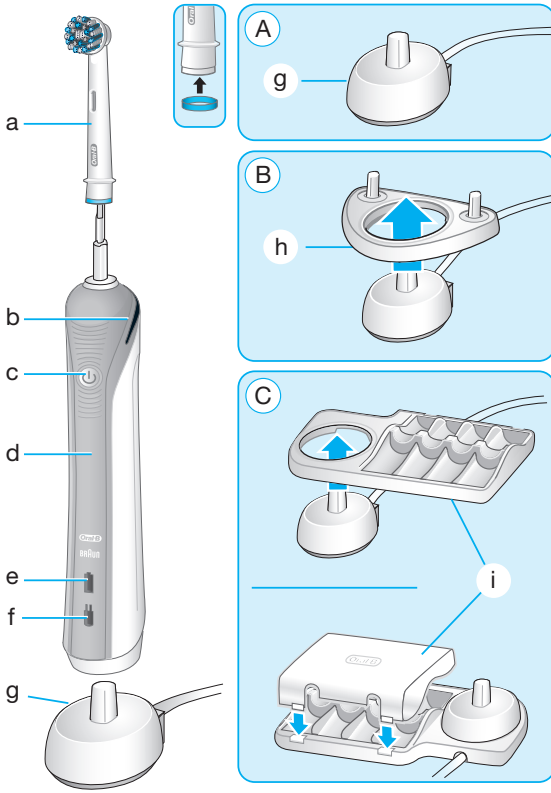
If you should require further assistance, please call our Consumer Service line.

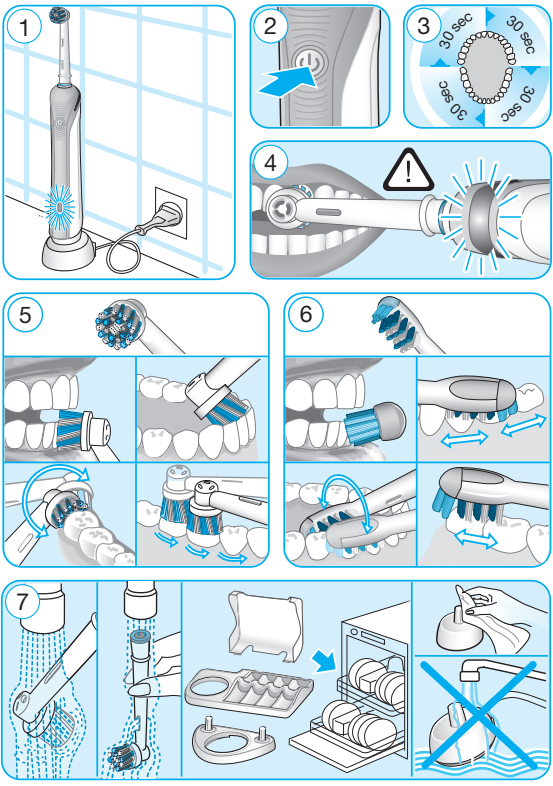
Internet:
www.oralb.com
www.oral-b.co.kr
www.braun.com
www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

Charger type 3757
Handle type 3756

97454211/VIII-15
Korea/GB


a
b
c
d
e
f
g
A
g
B
h
C
i


1
2
3
30 sec
30 sec
30 sec
30 sec
4
5
6
7

한국어

오랄-비를 구입해주셔서 감사합니다. 이 전동칫솔은 여러분과 여러분의 가족이 독특한 칫솔질을 경험할 수 있도록 심혈을 기울여 설계되었으며, 안전하고 효과적인 제품입니다.

이 제품을 사용하시기 전에 설명서를 잘 읽어보시고, 읽으신 후에도 추후 참조를 위해 잘 보관해 주시기 바랍니다.

중요사항

- 정기적으로 전기 코드의 손상 여부를 확인하십시오.전기 코드가 손상되었을 경우, 동부대우전자서비스 센터에 가져가십시오. 손상되거나 작동하지 않는 장치는 다시는 사용하지 마십시오. 제품의 어떤 부분도 변경하거나 조작하지 마십시오. 이는 화재, 감전, 혹은 부상을 초래할 수 있습니다.
- 본 제품은 3세 이하의 어린이가 사용하도록 제작되지 않았습니다. 3세에서 14세 어린이 혹은 육체적, 정신적, 지각상의 장애를 겪고 있거나 혹은 사전 지식이나 경험이 부족한 어린이 혹은 성인의 경우, 기구의 안전한 사용을 위해 보호자의 감독과 지도가 필요하며 발생 가능한 위험에 대해 인지를 하고 제품을 사용하도록 합니다.
- 어린이가 세척하거나 관리하지 않도록 합니다.
- 어린이가 가지고 놀지 않도록 지도가 필요합니다.
- 본 제품은 본 설명서에 명시된 목적에만 사용하십시오. 제조자의 추천이 없는 부착물은 사용하지 마십시오.
- 3개월마다 혹은 칫솔모가 닳았을 경우, 칫솔모를 교체해주십시오.

경고

- 제품이 바닥에 떨어졌을 경우, 눈에 보이는 손상이 없더라도 다음 사용 이전에 칫솔모를 교체하십시오.
- 충전기가 떨어지기 쉽거나 욕조 또는 세면대에 쉽게 빠질 수 있는 장소에 보관하지 마십시오.물에 빠뜨린 충전기를 꺼내려고 하지 마십시오. 즉시 충전기의 코드를 빼십시오.
- 배터리 폐기를 위해 배터리를 꺼내는 경우를 제외하고는 제품을 분해하지 마십시오.배터리 폐기를 위해 배터리를 꺼내는 경우, 양극(+)과 음극(–)에 의한 누전이 일어나지 않도록 주의하십시오
- 플러그를 뺄 때, 항상 전기 코드가 아닌 파워플러그를 잡고 빼십시오. 젖은 손으로 파워플러그를 잡지 마십시오. 감전될 우려가 있습니다.
- 구강 관련 질환으로 치료받고 있는 경우, 사용 전 전문의와 상의하시기 바랍니다.
- 본 제품은 개인위생용 기구입니다.다수의 환자를 대상으로 한 치과 시술이나 기관에서 공동 사용은 적합하지 않습니다.
- 3개월마다 혹은 칫솔모가 손상 마모된 경우 즉시 교체해주십시오.

각부의 명칭

a 칫솔모
b 압력 센서등(모델에 따라 다름)
c On/Off 작동 스위치(모드 선택 가능)
d 전동칫솔 핸들
e 충전 표시등
f 저충전 표시등
g 충전기
h 칫솔모 꽂이(모델에 따라 다름)
i 칫솔모 보관함(모델에 따라 다름)

세부사항

전압 사양은 충전 장치의 하단을 참조하세요.

전원 연결 및 충전

이 전동칫솔의 손잡이는 생활방수기능이 있어 전기적으로 안전하고 욕실에서 사용할 수 있도록 설계되었습니다.

- 충전기(g) 또는 조립된 충전장치(그림B/C 참조)를 꽂고 전동칫솔 핸들(d)를 충전기에 꽂으십시오.

- 전동칫솔이 충전되는 동안 초록색 충전 표시등(e)이 깜빡입니다. 충전이 완료되면 초록색 충전 표시등이 꺼집니다. 완전히 충전되기까지는 최대 22시간까지 걸릴 수 있으며, 완전 충전된 전동칫솔은 최대 일주일간 사용하실 수 있습니다 (하루 두 번, 2분 사용 시)(그림 1 참조).
참고:완전히 방전된 후 충전할 경우, 초록색 충전표시등이 바로 깜빡이지 않을 수 있습니다. 최대 10분에서 15분 정도 걸릴 수 있습니다.
- 충전지 용량이 부족한 경우, 전원을 켜거나 끌 때 붉은 충전 표시등(f)이 깜빡입니다.
- 매일 사용하시는 경우, 전동칫솔 핸들을 전원이 연결된 충전 장치에 놓아두시면 언제나 완전 충전된 상태에서 사용하실 수 있습니다. 과충전의 우려는 없습니다.
- 충전지의 용량을 최대화하기 위해서, 약 6개월마다 충전기의 전원을 뽑은 상태에서 정상적으로 사용하여 완전 방전을 한 후 재충전해 주십시오.

전동칫솔 사용

칫솔질 방법

칫솔모를 물에 적신 후 치약을 묻히십시오. 치약이 튀는 것을 방지하기 위하여 입안에 칫솔모를 넣으신 후 전원을 켜십시오(그림 2 참조). 오랄비 회전진동 칫솔모를 사용할 때에는 치아에서 치아로 칫솔모를 천천히 이동하고, 다음 치아로 이동하기 전에 칫솔모를 몇 초간 치아에 머무르게 하십시오(그림 5 참조).
오랄비《트라이존》칫솔모를 사용할 때에는 잇몸선에 비스듬히 갖다 댑니다. 가볍게 힘을 주어 일반 칫솔을 사용하실 때처럼 앞에서 뒤로 칫솔질합니다(그림 6 참조). 칫솔모의 종류와 관계없이 바깥쪽, 안쪽, 저작 면의 순서로 닦으십시오. 구강 내 4개 구역을 모두 고르게 닦으십시오. 너무 세게 누르거나 문지르지 마시고, 칫솔모가 움직이도록 두십시오. 치과의나 치위생사에게올바른 칫솔질에 대한 조언을 구하셔도 좋습니다.

칫솔질 모드 선택(모델에 따라 다름)

1-모드	2-모드	3-모드	4-모드	칫솔질 모드(핸들타입 3756)
✓	✓	✓	✓	세정-입안 세정을 위한 일상적인 기본 모드
		✓	✓	부드러운 세정-민감한 부분을 부드럽지만 꼼꼼하게 세정
			✓	미백-일상적으로 혹은 때때로 사용 가능한 미백 기능
	✓	✓	✓	잇몸관리-부드러운 잇몸마사지

칫솔질 모드 전환 방법:
전동칫솔은 on/off작동 스위치를 누르면《세정》모드에서 자동으로 시작됩니다. 다른 모드로 변경하시려면, 연속적으로 on/off작동 버튼을 눌러주세요. 예를 들어,《부드러운 세정》모드에서 전동칫솔의 전원을 끄려면, 모터가 멈출 때까지 길게 on/off작동 버튼을 눌러주세요.

칫솔모

오랄-비 전동칫솔에 호환 가능한 다양한 기능의 칫솔모를 제공합니다. 오랄-비 회전 진동 칫솔모가 치아 사이사이의 정밀 세정을 가능하게 합니다.

오랄-비 크로스액션 칫솔모

오랄-비의 가장 최신 기술의 칫솔모. 정밀 세정을 위해 기울어진 칫솔모. 플라그를 들어내듯 닦아냅니다.

오랄-비 플로스액션 칫솔모



마이크로 펄스 칫솔모로 치아 닿기 힘든 곳까지 부드럽게 숨어있는 플라그를 제거합니다.

오랄-비 프리시즌 클린 칫솔모



곡선 칫솔모로 치아를 감싸고 치아 사이 깊은 곳까지 닦아줍니다.

오랄-비 센서티브 칫솔모



오랄-비 센서티브 칫솔모는 치아와 잇몸에 더욱 부드러운 칫솔모 구조를 제공합니다.

오랄-비 프로화이트 칫솔모



오랄-비 프로화이트 칫솔모는 치과의사로부터 영감을 얻은 광택 컵으로 커피, 차 혹은 흡연으로 말미암은 치아 표면의 얼룩을 제거합니다. 12세 이하의 어린이에게는 오랄-비 프로화이트 칫솔모의 사용을 권장하지 않습니다.

오랄-비의 쓸어내듯 닦아주는《트라이존》칫솔모는 모든 타입의 칫솔질에 적합합니다.

오랄-비 트라이존 칫솔모



트리플 존 클리닝 액션으로 치아 사이사이까지 플라그를 제거합니다.

오랄-비의 INDICATOR® 칫솔모는 칫솔 교체시기를 알려줍니다. 하루 2분씩 2회의 꼼꼼한 칫솔질을 할 경우, 푸른색의 인디케이터는 약 3개월 이내에 반정도 사라집니다. 이때가 칫솔모를 교체할 시기입니다. 칫솔질할 때 치아와 잇몸에 과도한 압력이 가해지면, 칫솔 교체시기 이전에 칫솔모가 벌어집니다.

오랄-비《플로스액션》이나 오랄-비《프로화이트》칫솔모는 치아교정기 착용시에 사용하지 않는 것이 좋습니다. 교정기 주변을 세심하게 닦아줄 수 있도록 디자인된 오랄-비《교정용 칫솔모》를 권장합니다.

압력 센서 기능

과도한 압력으로부터 치아와 잇몸을 보호하기 위해 전동칫솔에 압력 센서가 내장되어 있습니다. 과도한 압력이 가해지면 붉은 압력 센서등(b)에 불이 표시되어 적정 압력을 유지하도록 도와줍니다(그림 4 참조)(모델에 따라 다름). 압력 센서 기능이 작동되면 그 느낌이 다르며 소음 또한 줄어듦을 느낄 수 있습니다. 정기적으로 압력 센서가 제대로 작동되고 있는지 확인하기 위해 전동칫솔 사용 중 가볍게 칫솔모를 눌러 주십시오.

프로페셔널 타이머

30초마다 짧은 진동이 울려 칫솔 이동시기를 알려주고 구강내 4구역 모두 양치질 할 수 있도록 도와줍니다(그림 3 참조). 치과 전문의가 권장하는 칫솔질 시간인 2분이 경과하면 긴 진동이 울립니다. 칫솔질 도중 잠깐 전원이 꺼지더라도 타이머가 실제 칫솔질 시간을 기억합니다. 전원이 꺼진 후 30초가 경과하면 타이머는 초기화됩니다.

제품을 처음 사용하는 며칠 동안은 잇몸에서 약간의 피가 날 수도 있습니다. 보통은 며칠이 지나면 출혈이 더 이상 발생하지 않습니다. 그러나 2주 이상 출혈이 지속될 경우에는 치과 전문의와 상담하십시오. 오랄-비는 치아와 잇몸이 민감한 고객께는 《부드러운 세정》 모드 사용을 권장합니다(모델에 따라 다름).

칫솔모 교체 관련 품질보증

오랄-비 정품이 아닌 교체용 칫솔모를 사용하였을 경우에는 품질보증대상에서 제외됩니다.

오랄-비는 오랄-비 정품이 아닌 교체용 칫솔모의 사용을 권장하지 않습니다.

- 오랄-비는 오랄-비 정품이 아닌 교체용 칫솔모의 품질을 보증할 수 없습니다. 따라서 오랄-비 정품이 아닌 교체용 칫솔모를 사용할 경우 최초 구매 시와 동일한 세정 성능을 보장할 수 없습니다.
- 오랄-비 정품이 아닌 교체용 칫솔모는 장착이 잘 안 될 수 있으며, 오랄-비는 이를 보장할 수 없습니다.
- 오랄-비는 오랄-비 정품이 아닌 교체용 칫솔모를 오랄-비 전동칫솔 핸들에 장기간 사용할 경우 제품에 미치는 영향에 대해 알 수 없습니다.

정품 교체용 칫솔모는 오랄-비의 로고를 가지고 있으며 오랄-비의 품질 기준에 적합합니다. 오랄-비는 다른 브랜드명으로 교체용 칫솔모나 핸들 부속품을 판매하지 않습니다.

세척 권장사항

칫솔질 후, 전동칫솔 전원을 켠 상태에서 흐르는 물에 수 초 동안 칫솔모를 헹구십시오.
전원을 끄고, 칫솔모를 분리합니다. 칫솔모와 칫솔핸들을 흐르는 물에 씻어 건조 시킨 후 재조립합니다. 충전기를 식기세척기나 물에 절대 넣지 마십시오. 충전기는 젖은 헝겊으로만 닦아주십시오.
칫솔모 보관함과 보호커버는 식기세척기에서 세척이 가능합니다 (그림 7 참조).

본 사용설명서는 사전예고 없이 변경될 수 있습니다.

Class	Notification
B급 기기 (가정용 방송통신기자재)	이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

환경 관련 안내

본 제품은 배터리와 재활용 가능한 전자쓰레기를 포함하고 있습니다. 환경보호를 위해 생활 쓰레기로 배출하지 마시고, 지정된 재활용품 수거 장소나 폐기 장소에 버리십시오.



품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다. 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다. 보증기간 내에라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함등은 무상수리 또는 교환이 적용되지 않습니다.
동부대우전자서비스가 아닌 다른 곳에서 수리하였거나 오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증대상에서 제외됩니다. 그리고 본 제품의 구매일자가 판매점에 의해 혹은 구매시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다.(구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.)

이 보증은 귀하가 가질 수 있는 다른 법적권리에 아무런 영향을 미치지 않습니다.

본 제품은 소비자분쟁해결기준에 따라 교환 또는 보상 받으실 수 있습니다.

제조일자 읽는 방법

제조일자는 충전기와 전동칫솔 핸들의 바닥에 네 자릿수로 표시되어 있으며, 첫 두 자릿수는 생산된 연도의 마지막 두 자릿수를 의미하며, 나머지 두 자릿수는 생산된 월을 나타냅니다.
예시 : '1209' – 2012년 9월에 생산되었음.

애프터 서비스
동부대우전자서비스 : 1588-1588
가까운 동부대우전자서비스에서 A/S를 받으실 수 있습니다.

오랄-비 제품 : 전국 유명 백화점 및 전자상가에서
구입할 수 있습니다.
www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명			모 델 명		
구 입 일			보증기간		구입일로부터 1년
고 객			판 매 점		

한국 피앤지 판매 (유)
서울시 강남구 테헤란로 203,16층
전화:080-920-6000(수신자부담)

English

Your **Oral-B®** toothbrush has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective.

IMPORTANT

- Periodically check the cord for damage. If cord is damaged, take the charging unit to an Oral-B Service Centre. A damaged or non-functioning unit should no longer be used. Do not modify or repair the product. This may cause fire, electric shock or injury.
- This product is not intended for use by children under age three. Children from 3 to 14 years, persons with reduced physical, sensory or mental capabilities, or persons with lack of experience or knowledge of the product can use the toothbrush, but should have supervision and/or instruction concerning use of the appliance in a safe way, and understand the hazards involved.
- Cleaning and maintenance should not be performed by children.
- Children should not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.

WARNING

- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place the charger in water, liquid or store it where it can fall or be pulled into a tub or sink. Do not reach for it if it has fallen into water. Unplug immediately.
- Do not disassemble the product except when disposing of the battery. When taking out the battery for disposal of the unit, use caution not to short the positive (+) and negative (–) terminals.
- When unplugging, always hold the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and not intended for use on multiple patients in a dental practice or institution.
- Replace brush (head) every 3 months or sooner if brush head becomes worn.

Description

a Brush head
b Pressure sensor light (depending on model)
c On/off button (mode selection)
d Handle
e Charge indicator light
f Low charge indicator light
g Basic charger

h Brush head holder (depending on model)
i Brush head compartment with protective cover (depending on model)

Specifications
For voltage specifications please refer to the bottom of the charging unit.

Connecting and charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the basic charger (g) or the assembled charging unit (picture B/C) into an electrical outlet and place the toothbrush handle (d) on the charging unit.
- The green charge indicator light (e) flashes while the handle is being charged. Once it is fully charged, the light turns off. A full charge can take up to 22 hours and enables up to seven days of regular brushing (twice a day, 2 minutes) (picture 1).
  Note: After deep discharge, the green light might not flash immediately; it can take up to 10–15 minutes.
- If the rechargeable battery is low the red low charge indicator light (f) is flashing for some seconds when turning your toothbrush on/off.
- For everyday use, the toothbrush handle can be stored on the charging unit to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using your toothbrush

Brushing techniques
Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (picture 2). When brushing your teeth with one of the Oral-B **oscillating-rotating brush heads** guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface (picture 5). When using the Oral-B **«TriZone» brush head** place the toothbrush bristles against the teeth at a slight angle towards the gumline. Apply light pressure and start brushing in back and forth motions, just like you would do with a manual toothbrush (picture 6).
With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally. Do not press too hard, simply let the brush do all the work.
You may also consult your dentist or dental hygienist about the right technique for you.

Brushing modes (depending on model)

Model 500-700	Model 800	Model 1000	Model 2000	Model 3000	**Brushing modes** (with handle type number 3756)
✓	✓	✓	✓	✓	**Daily Clean** – Standard for daily mouth cleaning
	✓		✓	✓	**Sensitive** – Gentle, yet thorough cleaning for sensitive areas
				✓	Whitening – Exceptional polishing for occasional or everyday use
		✓	✓	✓	**Gum Care** – Gentle massage of gums

How to switch between modes:
Your toothbrush automatically starts in the «Daily Clean» mode. To switch to the other modes, successively press the on/off button. If you wish to turn off your toothbrush

from the «Sensitive» mode e.g., push and hold down the on/off button until the motor stops.

Brush heads



Oral-B CrossAction brush head
Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.



Oral-B FlossAction brush head
features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.



Oral-B Precision Clean brush head
provides effective and gentle cleaning action for both teeth and gums. The brush head cups each tooth with longer and denser bristles and reach deep between teeth at the same time.



Oral-B Sensitive brush head
features an extra soft bristle structure that is gentle on teeth and gums.



Oral-B 3D White brush head
features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.

Our **sweeping TriZone brush head** can be used with all common brushing techniques.



Oral-B TriZone brush head
features triple zone cleaning action for outstanding plaque removal, even in between teeth.

Oral-B brush heads feature light blue INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway approximately within 3 months, indicating the need to replace your brush head. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums.

We do not recommend using the Oral-B «FlossAction» or Oral-B «3DWhite» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

Pressure Sensor
Helping protect your teeth and gums from hard brushing, your toothbrush has a pressure control feature installed. If too much pressure is applied, the red pressure sensor light (b) will light up, reminding you to reduce pressure (picture 4) (depending on model). In addition the movement of the brush head will continue but its pulsation will stop and you will also hear a different sound while brushing. Periodically check the operation of the pressure sensor by pressing lightly on the brush head during use.

Professional Timer
A short stuttering sound at 30-second intervals reminds you to brush equally all four quadrants of your mouth (picture

3). A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time. The elapsed brushing time is memorised even when the handle is briefly switched off during brushing. When pausing longer than 30 seconds the timer resets.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» mode (depending on model).

Cleaning recommendations

After brushing, rinse your brush head carefully under running water for some seconds with the handle switched on. Switch off the handle and remove the brush head. Clean both parts separately under running water then wipe them dry before reassembling the toothbrush. Disassemble charging unit before cleaning. Never place the charger in dishwasher or water; it should be cleaned with a damp cloth only. Brush head holder, brush head compartment and protective cover are dishwasher-safe (picture 7).

Subject to change without notice.

Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Guarantee

We grant 1 year limited guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Service Centre.

This guarantee in no way affects your rights under statutory law.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.
Oral-B does not recommend the use of non Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.

- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

Manufacturing date code:

To determine the year and month of manufacture, refer to the 4-digit production code located on the type plate of charger and handle. First two digits of the production code refer to the year of manufacture. Next two digits refer to the month of manufacture. Example: «1209» – means the product was manufactured in September of 2012.