


FRONT
OF FRAME

SIDE
OF FRAME

STEP 1:
SCREW LEG BOLT
INTO T-NUT BRACKET
ON BOTTOM CORNER
OF FRAME

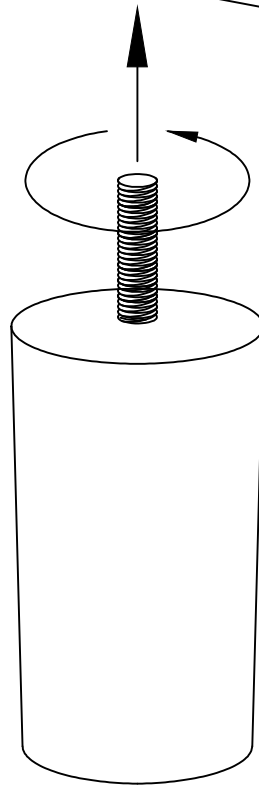

3" ROUND
PLASTIC LEG