

# 900-Series Universal - Fitting

## 1. Wiper blade



## 2. Lift the cap




## 3. Hook around the adaptor inside the blade



# 900-Series Universal : Fitting

## 4. Latch the hook until you hear a click

Make sure hook is  
clicked into place  
**securely**

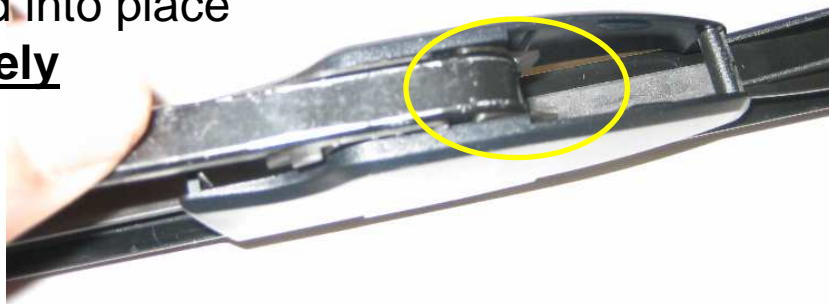

## 5. Put the cap down => Fitting is Complete



Cap should drop down without  
resistance (hook is not secure  
if cap touches hook).

If adaptor is not pre-installed (loose in  
package), install it prior to Step 1.



ADAPTOR



CLICK ADAPTOR  
AROUND AXLE