


9506 SETTEE

ASSEMBLY INSTRUCTIONS FOR 9506 SERIES

COMPONENTS & HARDWARE

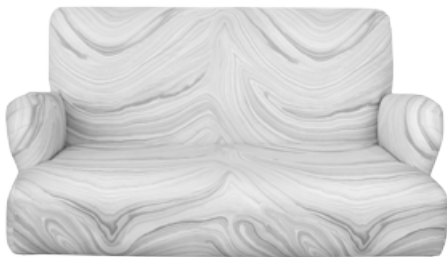

(1) settee body*



(4) wooden legs*
remove plastic caps



(8) 1¼ in. washers
for leveling legs

*images might vary from actual product

STEP 1

*Turn settee on side and
screw in legs.*

*If the settee is not level, remove the shortest
leg and place (1) 1¼" washer on the leg bolt.
Screw the leg back on. Repeat if necessary.*

