



1. Unboxing Your Assembled Printrbot Simple

Written By: Printrbot Support

Step 1 — 1. Unboxing Your Assembled Printrbot Simple



- Congratulations on receiving your new Printrbot Simple!
- Please visit <http://printrbot.com/simple/> for videos, downloads, and other helpful info.
- In your box, find the following:
 - Assembled Printrbot Simple
 - Sample of filament
 - Laptop power supply
 - Micro USB cable and test bag with wood wrenches (x2) & auto-leveling spacer.
- *If you ordered a Simple with a heated bed, [click here](#) for unboxing instructions*

Step 2




- After opening the box, pull your Simple out with the packaging handles. Then, remove the rest of the packaging.

Step 3



- Pick your Simple up by grabbing the smooth rods.
- After removing the foam support and packing plastic, clip the zip tie from the back of the bot.
- You can also remove the M3 screw and washer.

Step 4

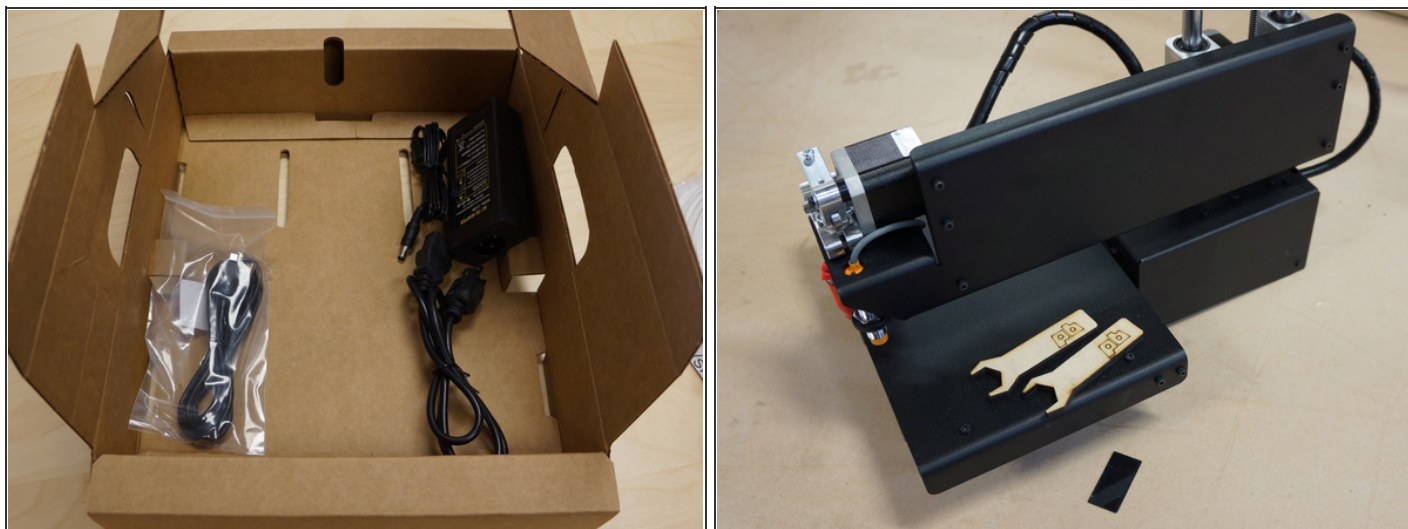

- Find the wood wrenches (x2), auto-leveling spacer, laptop power supply and micro USB cable.
- Missing something? Let us know at Printrbot.com/Support.
- NEXT STEPS:
 - Go to <http://software.ultimaker.com/> for a free download of Cura, the software that you will need to communicate with your Printrbot.
 - See [3. Getting Started with Cura](#).
 - Check out Microsoft's guide to 3D printing. It's a great resource for getting started: <http://channel9.msdn.com/Series/3D-Print...>

This document was last generated on 2015-02-06 06:57:56 AM.