



OC SUN SHADE INSTALLATION AND FOLDING INSTRUCTIONS

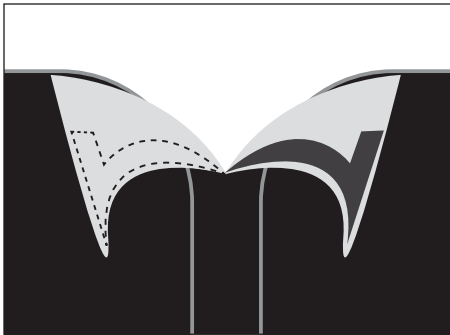


Installing your OC Sun Shade


1 Remove the OC Sun Shade (herein OCSS) from the packaging. Unfold your OCSS and keep the Velcro® center area at the top.

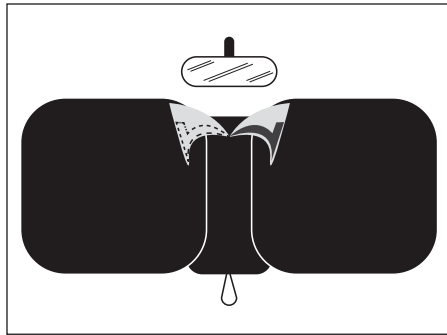


2 Slide the bottom of the OCSS in toward the bottom of your windshield. Note: Silver Side should face OUT (black on the inside) to reflect heat & UV away from your car.

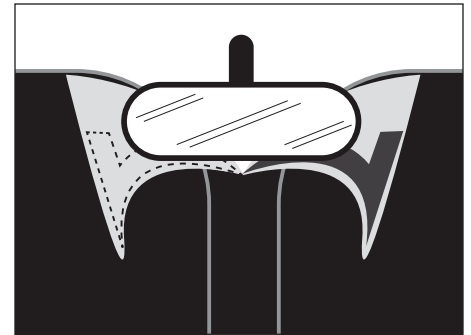


3 Separate the Velcro® and spread the two sides around your rearview mirror area. Reconnect the Velcro® to help keep out sunlight around your rearview mirror area.

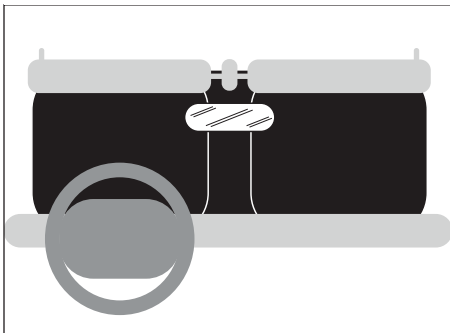

4 Fold down both sun visors to help keep your OCSS up and keep out sunlight at the top of your windshield.

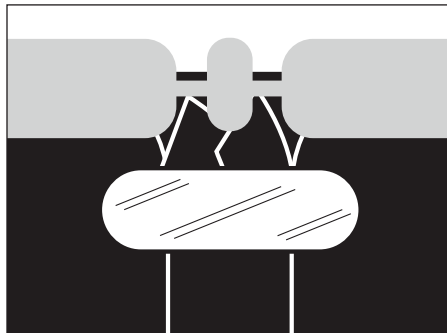


5 Adjust the center fabric area and sides of the round sections of the OCSS as needed.

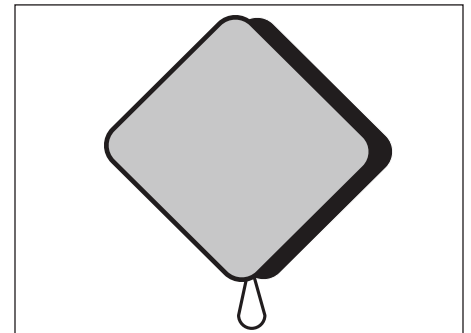

Folding your OC Sun Shade

6 Fold your OCSS in half with the two black sides facing each other. Position the elastic at 6 o'clock position. Place your hands at the 3 and 9 o'clock positions

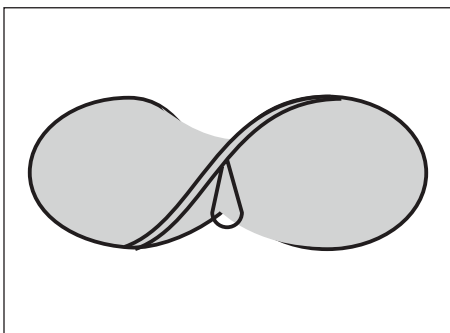

7 Twist the sun shade and fold in half. Then use the elastic to pull over the sun shade to keep it tight and compact

