



# ASSEMBLY INSTRUCTION

Dear customer,  
Thank you for choosing our product. Please read this manual carefully before assembling or using the product to avoid damage caused by improper use. If the product is passed on to third parties, this manual has to be passed on along with the product.

## Installation Option I

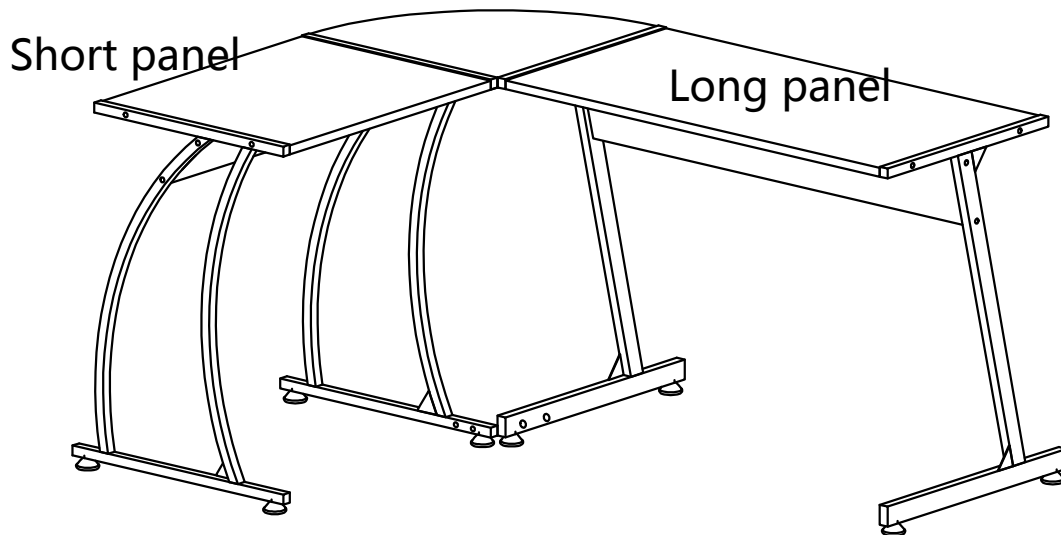


## Installation Option II

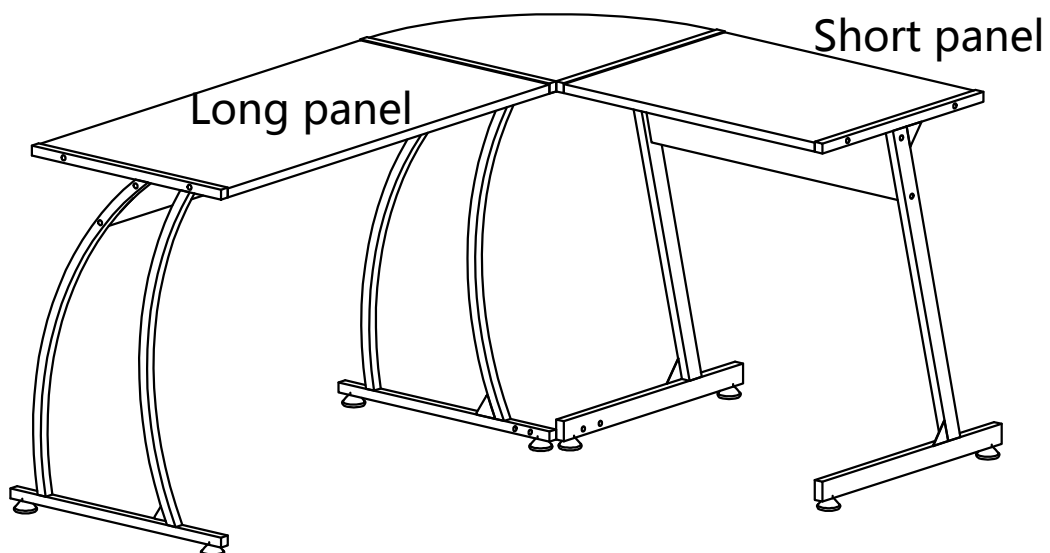


# ASSEMBLY INSTRUCTION

Installation time: **00:30**

Participant: 



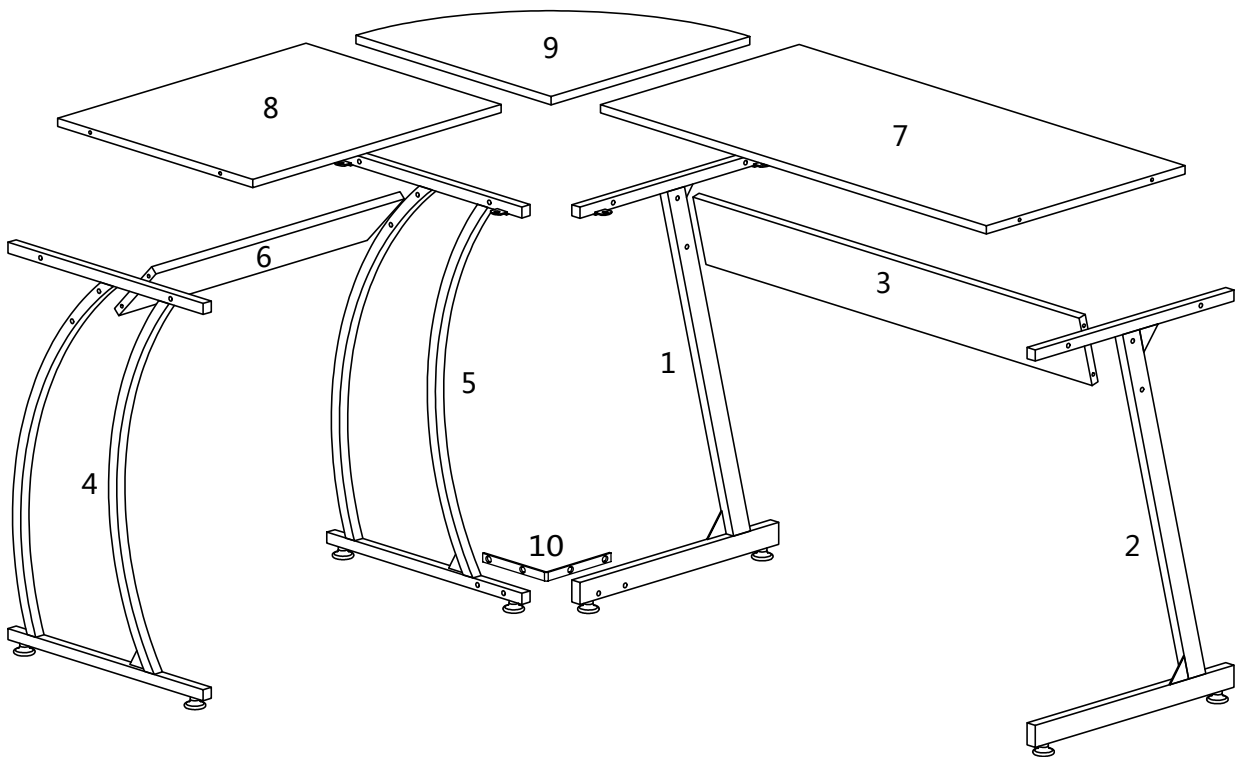




Required installation tools: 









## Installation Option I

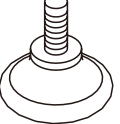

### Hardware accessories:

### Spare:

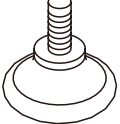
<p><b>A</b></p>  <p>ST5x50mm 16Pcs</p>	<p><b>B</b></p>  <p>M6x12mm 4Pcs</p>
<p><b>C</b></p>  <p>ST4x12mm 4Pcs</p>	<p><b>D</b></p>  <p>4Pcs</p>
<p><b>E</b></p>  <p>8Pcs</p>	<p><b>F</b></p>  <p>M6x20mm 4Pcs</p>
<p><b>G</b></p>  <p>M6x15mm 4Pcs</p>	

<p><b>A1</b></p>  <p>ST5x50mm 1Pc</p>	<p><b>B1</b></p>  <p>M6x12mm 1Pc</p>
<p><b>C1</b></p>  <p>ST4x12mm 1Pc</p>	<p><b>D1</b></p>  <p>1Pc</p>
<p><b>E1</b></p>  <p>1Pc</p>	<p><b>F1</b></p>  <p>M6x20mm 1Pc</p>
<p><b>G1</b></p>  <p>M6x15mm 1Pc</p>	<p><b>H</b></p>  <p>2Pcs</p>



# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 1

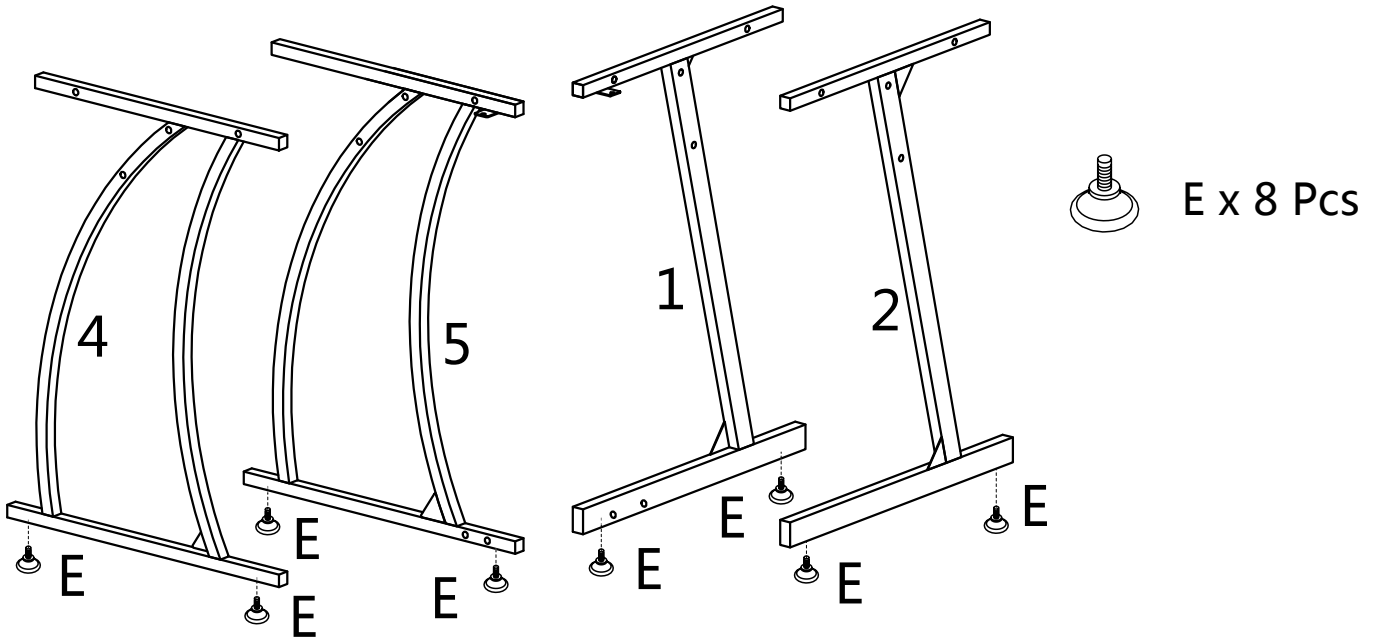


## STEP 2

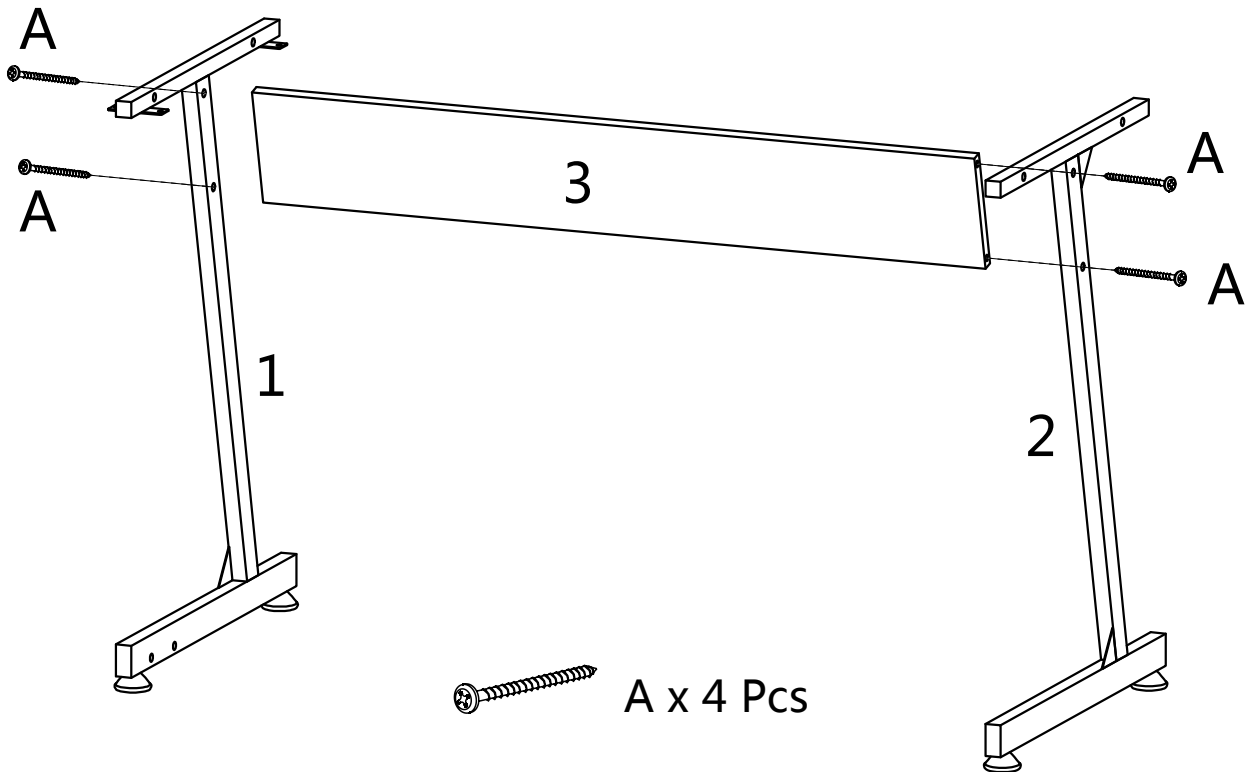


# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 3

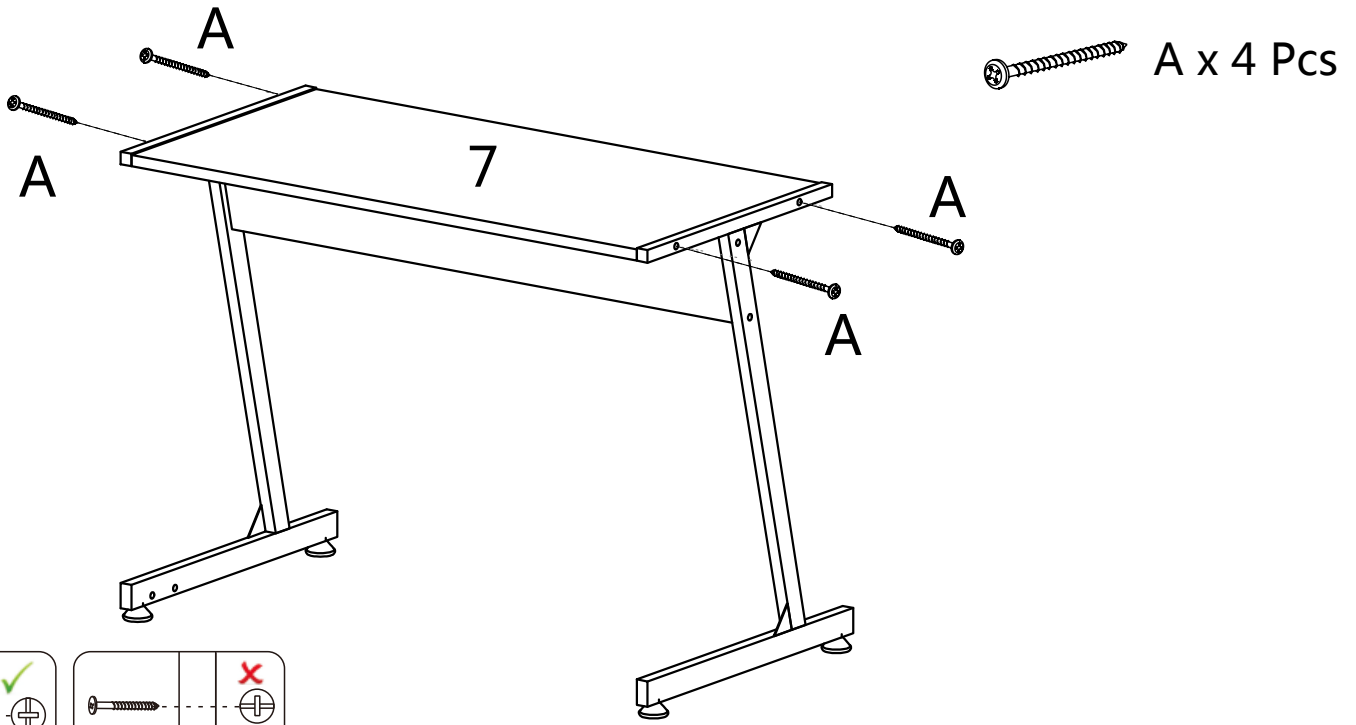


## STEP 4

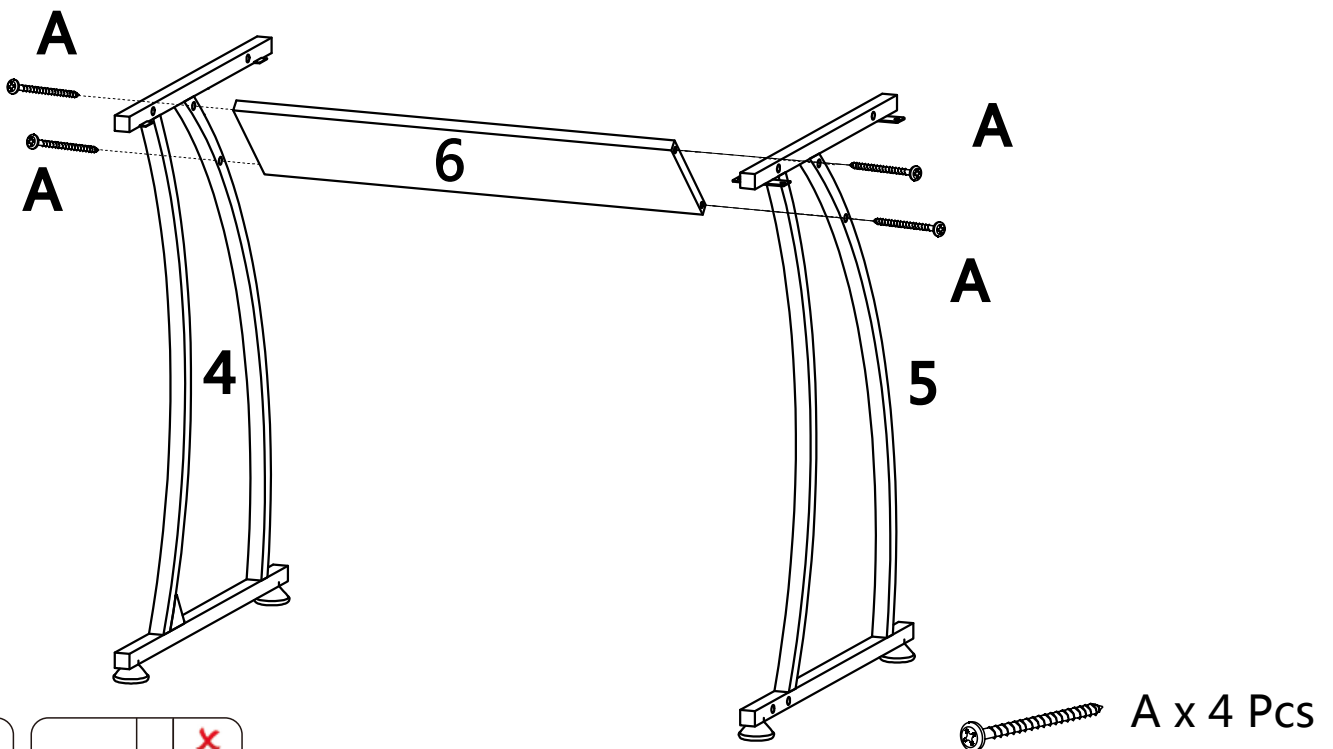


# ASSEMBLY INSTRUCTION

Start assembling furniture


## STEP 5

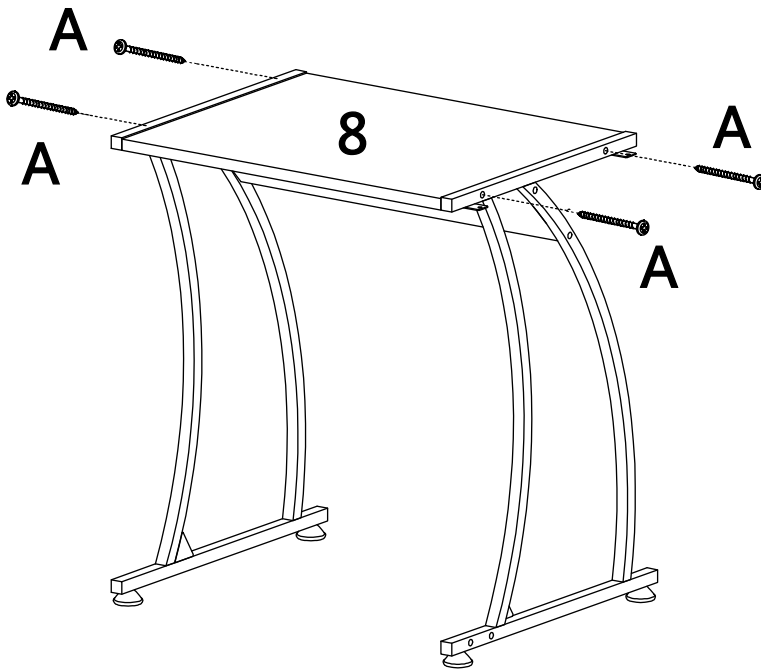


 A x 4 Pcs



## STEP 6

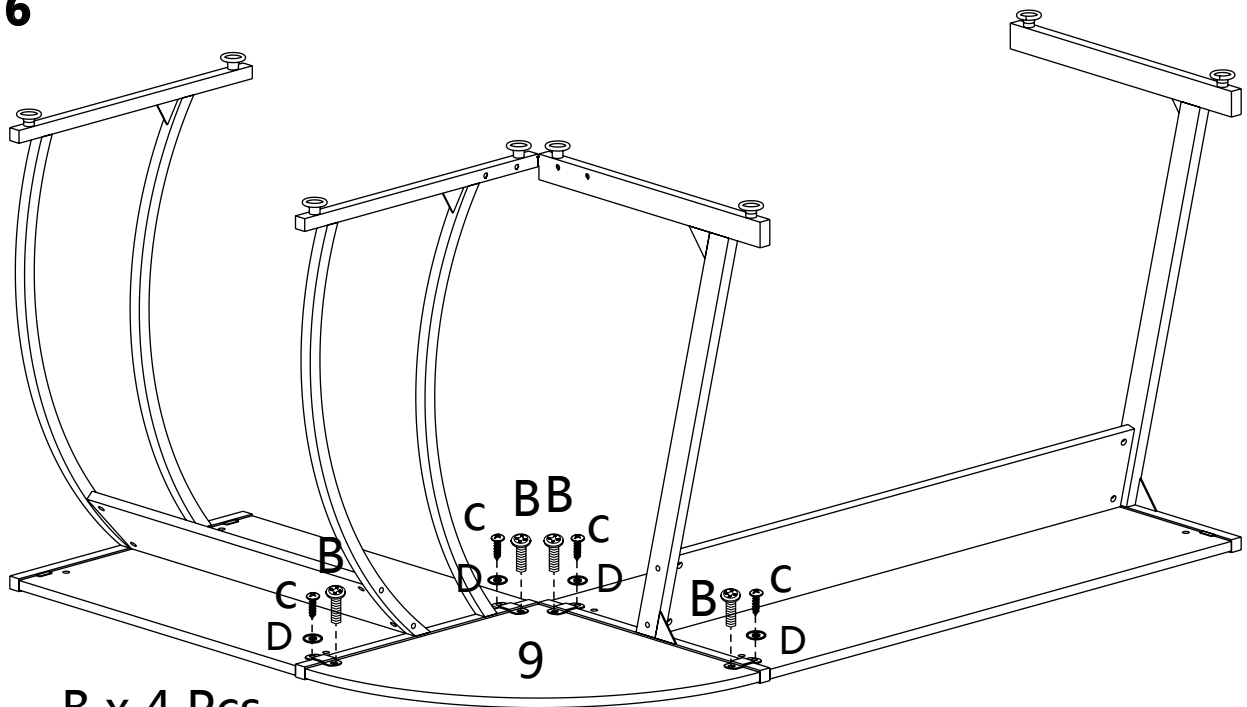

 B x 4 Pcs

 C x 4 Pcs



 D x 4 Pcs

\*To prevent board scraping ,please put it on the carpet before assembling.


# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 7

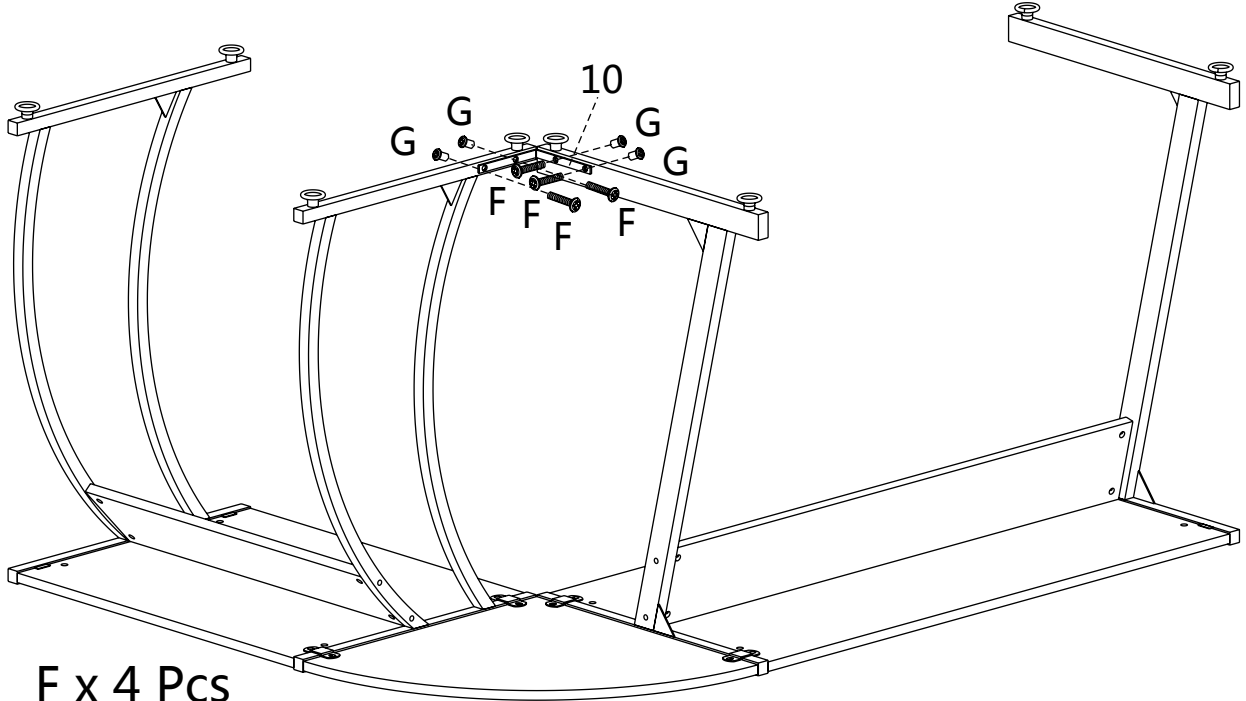


F x 4 Pcs



G x 4 Pcs


## STEP 8

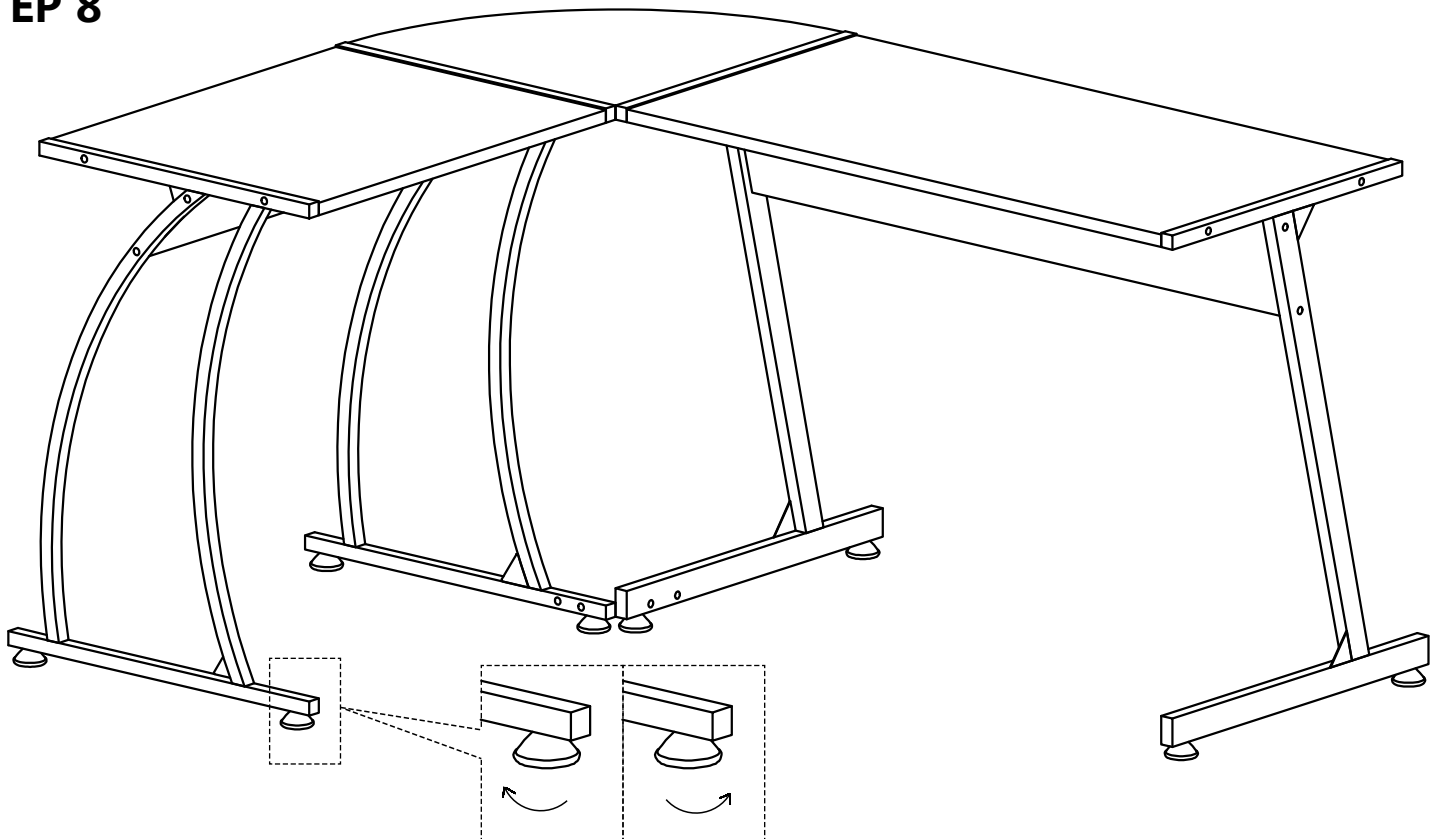

FASTEN/LOOSE THE PAD  
TO MAKE IT EVEN IF NEEDED


# ASSEMBLY INSTRUCTION

Installation time: **00:30**





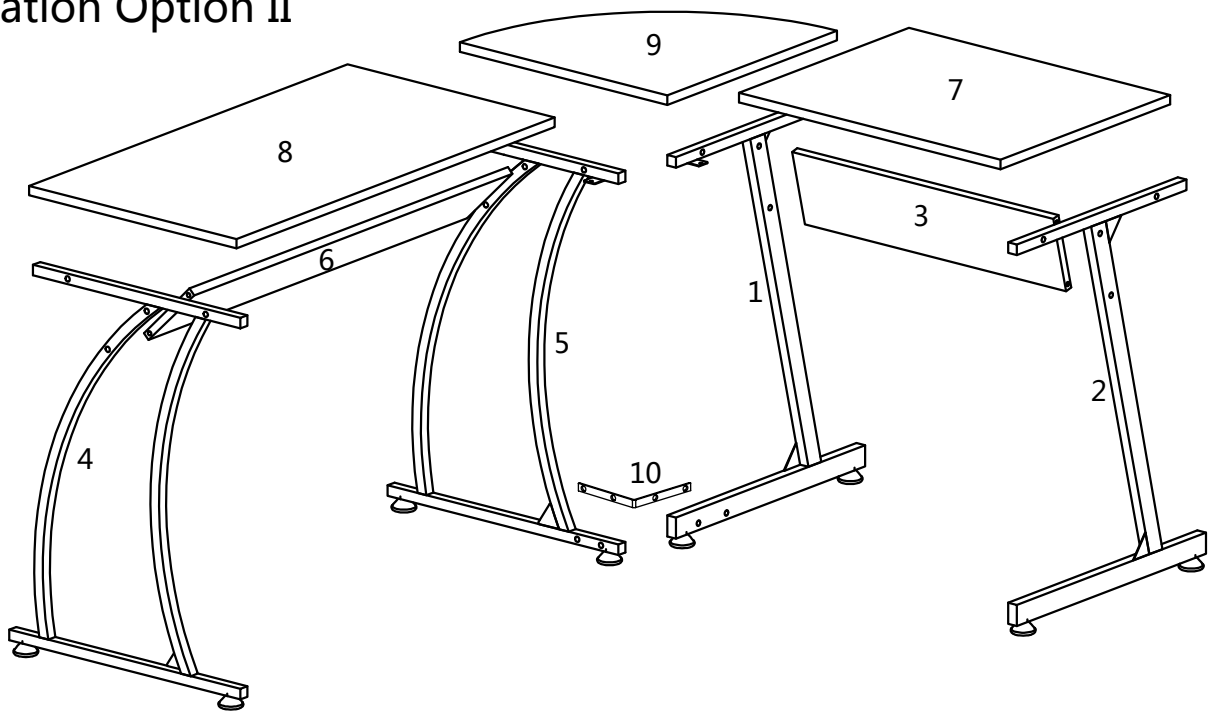


Participant: 

Required installation tools: 









## Installation Option II



### Hardware accessories:

<p><b>A</b></p>  <p>ST5x50mm 16Pcs</p>	<p><b>B</b></p>  <p>M6x12mm 4Pcs</p>
<p><b>C</b></p>  <p>ST4x12mm 4Pcs</p>	<p><b>D</b></p>  <p>4Pcs</p>
<p><b>E</b></p>  <p>8Pcs</p>	<p><b>F</b></p>  <p>M6x20mm 4Pcs</p>
<p><b>G</b></p>  <p>M6x15mm 4Pcs</p>	


### Spare:

<p><b>A1</b></p>  <p>ST5x50mm 1Pc</p>	<p><b>B1</b></p>  <p>M6x12mm 1Pc</p>
<p><b>C1</b></p>  <p>ST4x12mm 1Pc</p>	<p><b>D1</b></p>  <p>1Pc</p>
<p><b>E1</b></p>  <p>1Pc</p>	<p><b>F1</b></p>  <p>M6x20mm 1Pc</p>
<p><b>G1</b></p>  <p>M6x15mm 1Pc</p>	<p><b>H</b></p>  <p>2Pcs</p>



# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 1

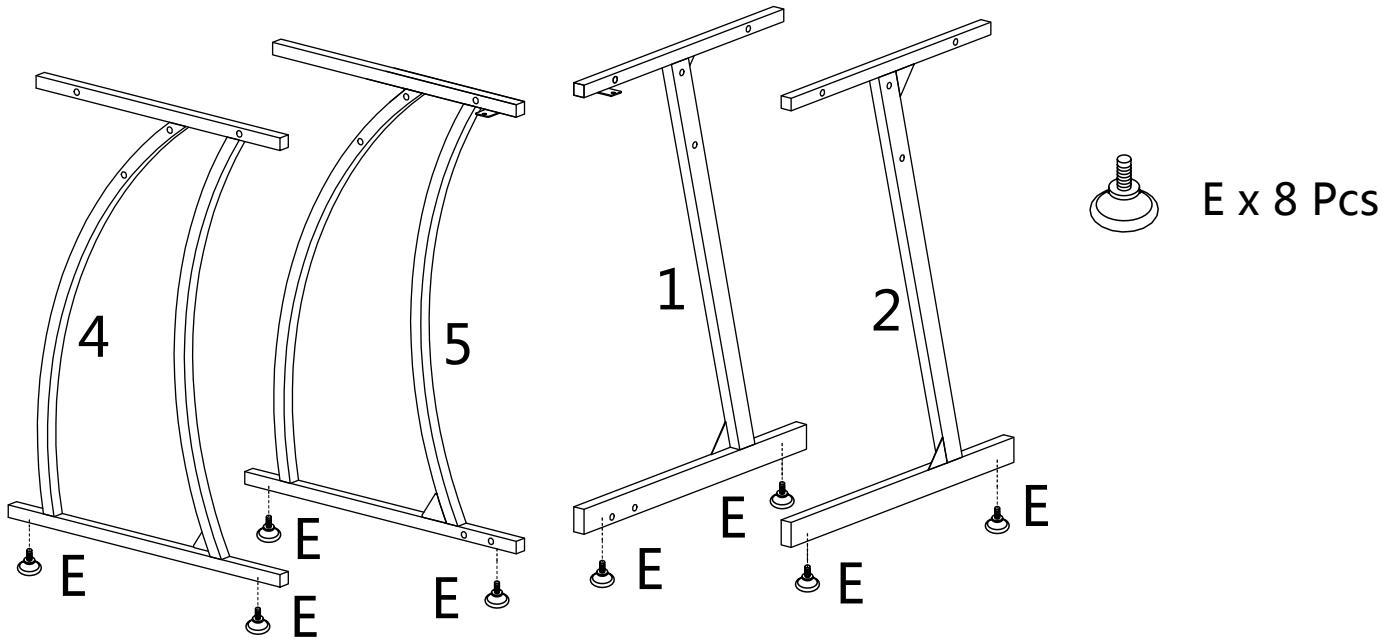



## STEP 2

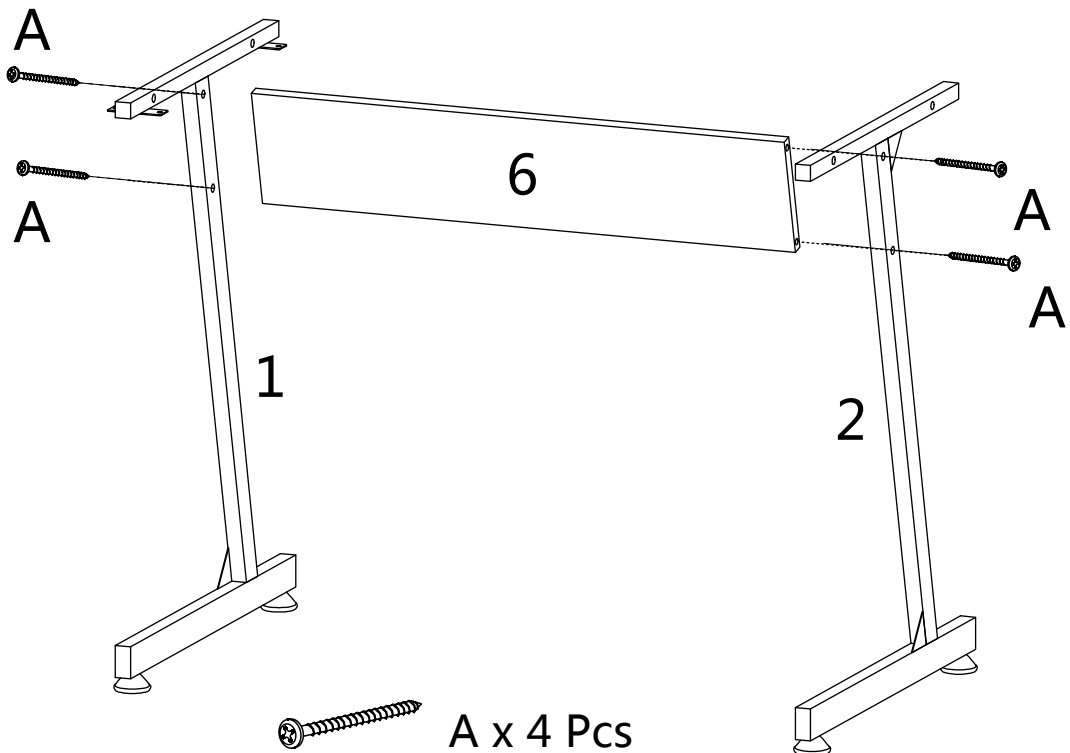



# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 3

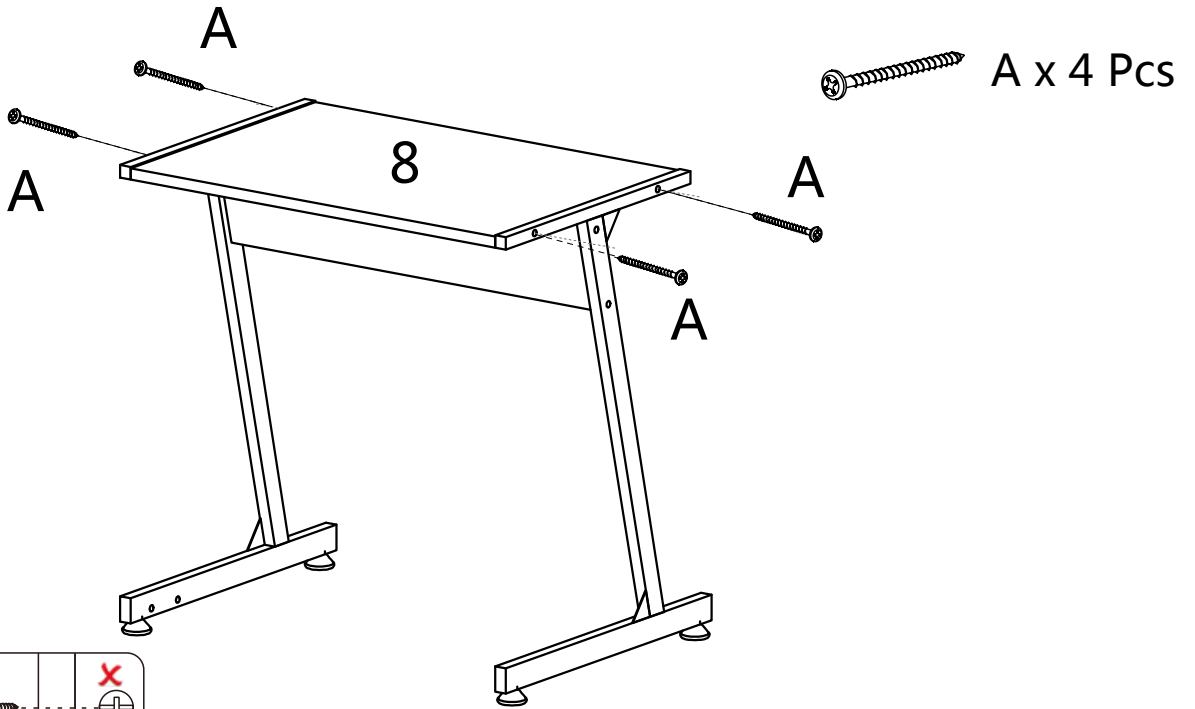


## STEP 4

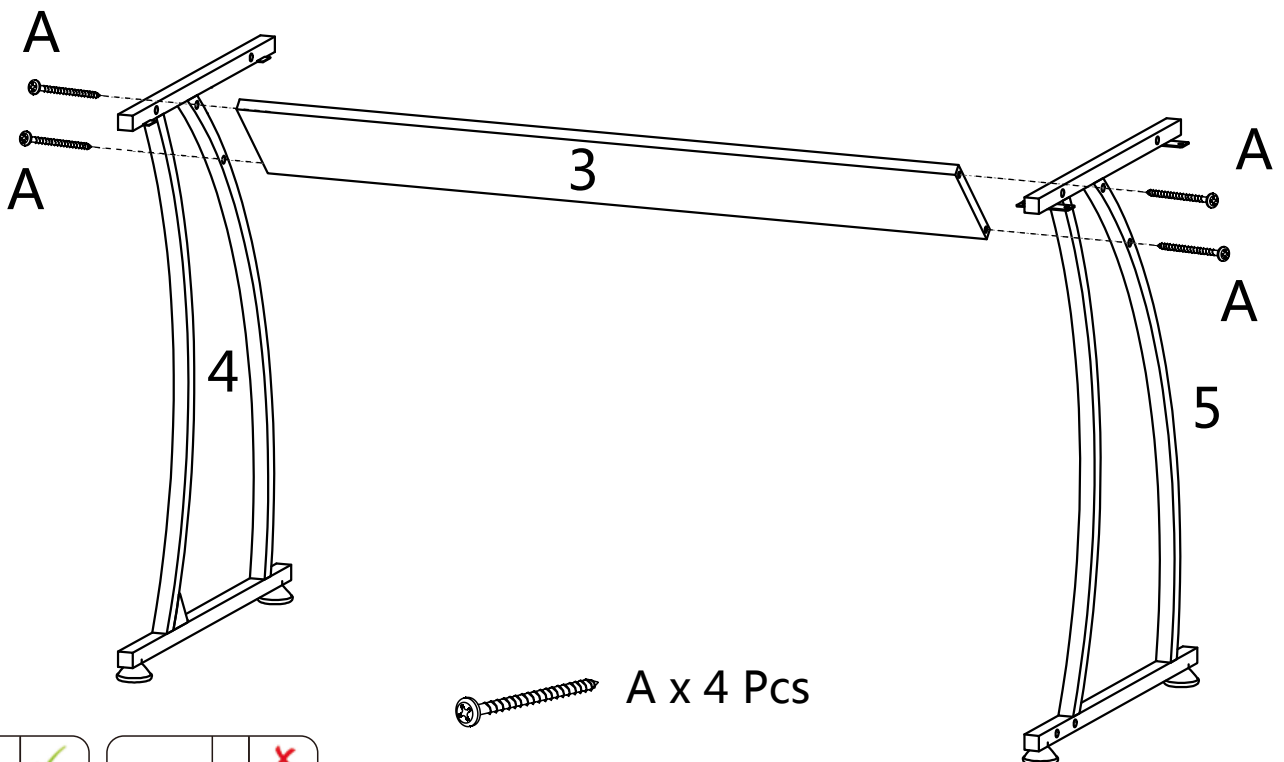


# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 5

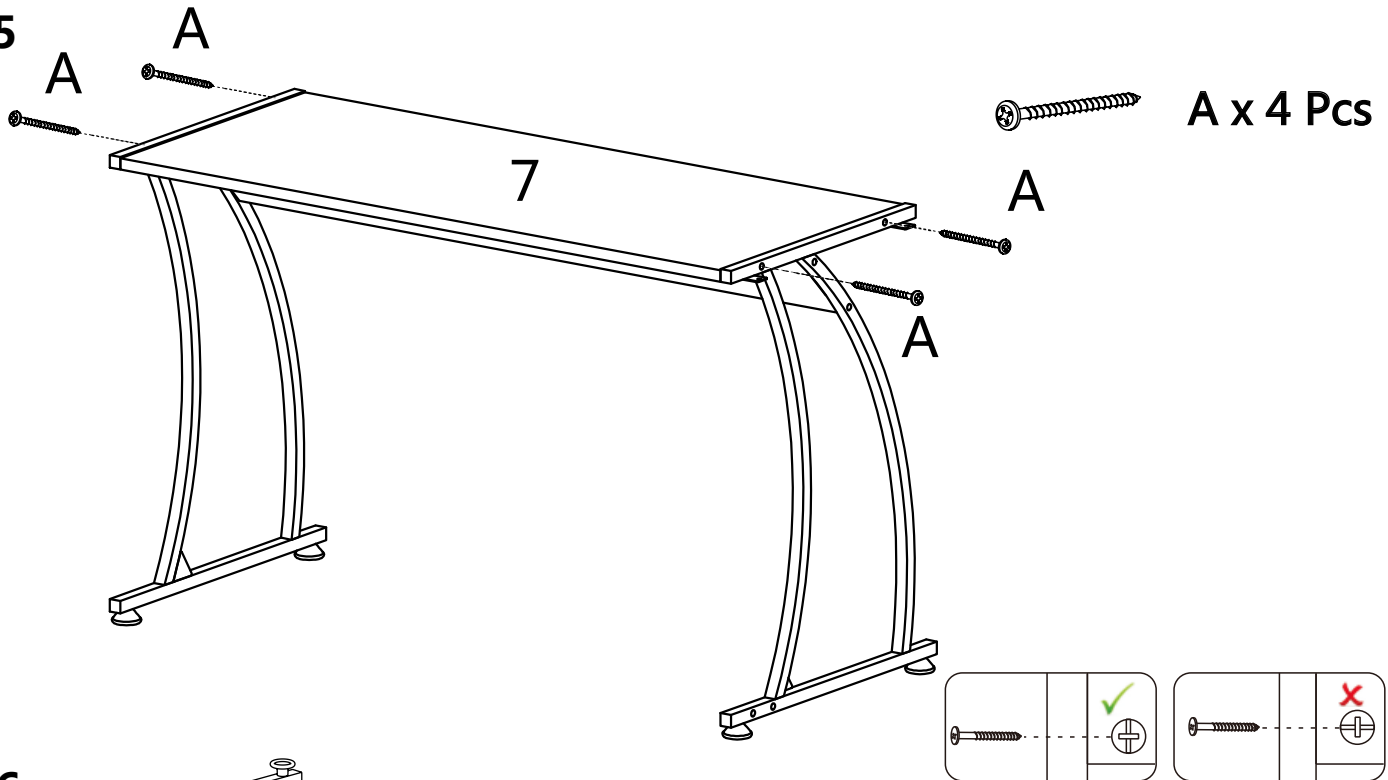

## STEP 6


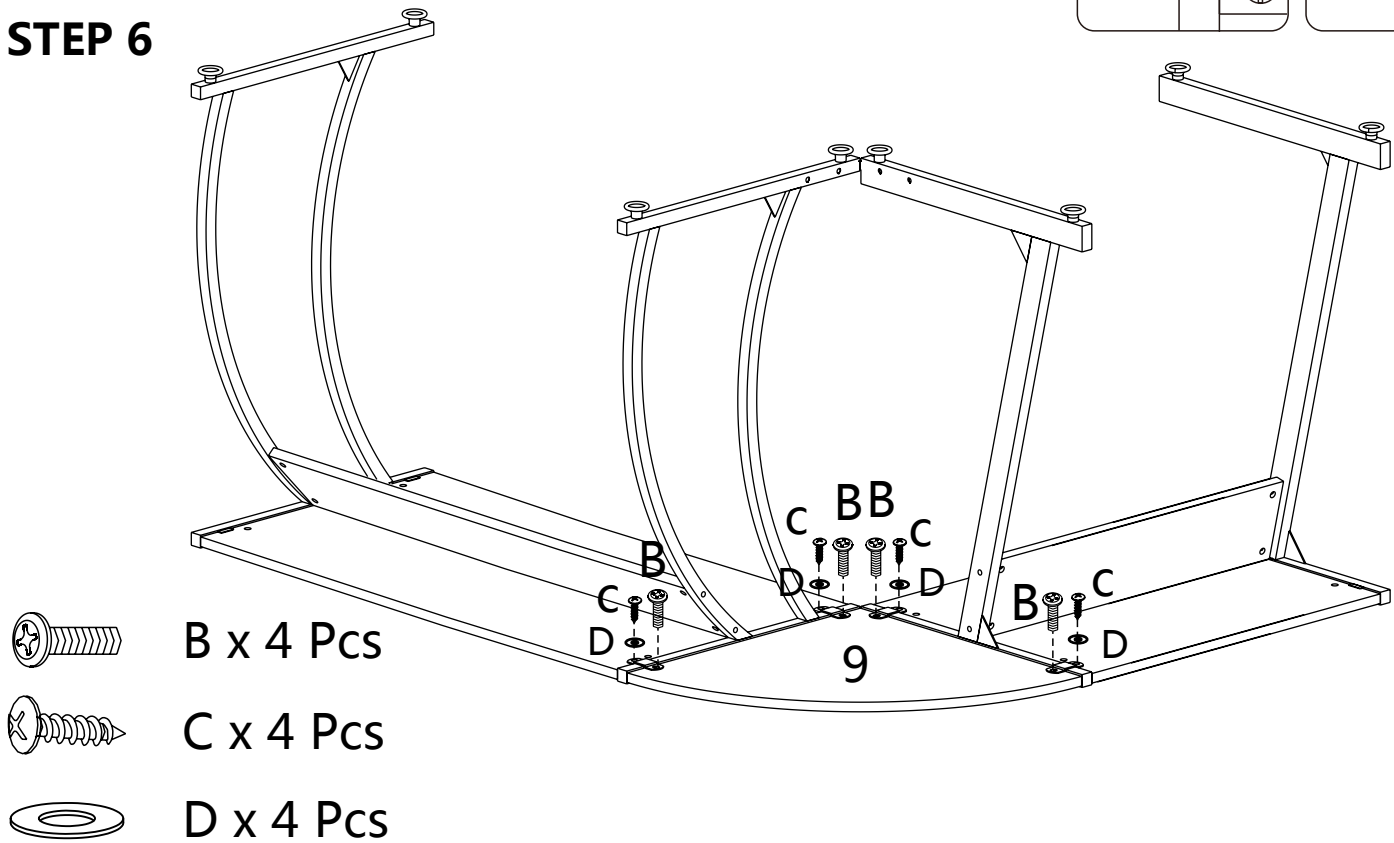


\*To prevent board scraping, please put it on the carpet before assembling.


# ASSEMBLY INSTRUCTION

Start assembling furniture

## STEP 7


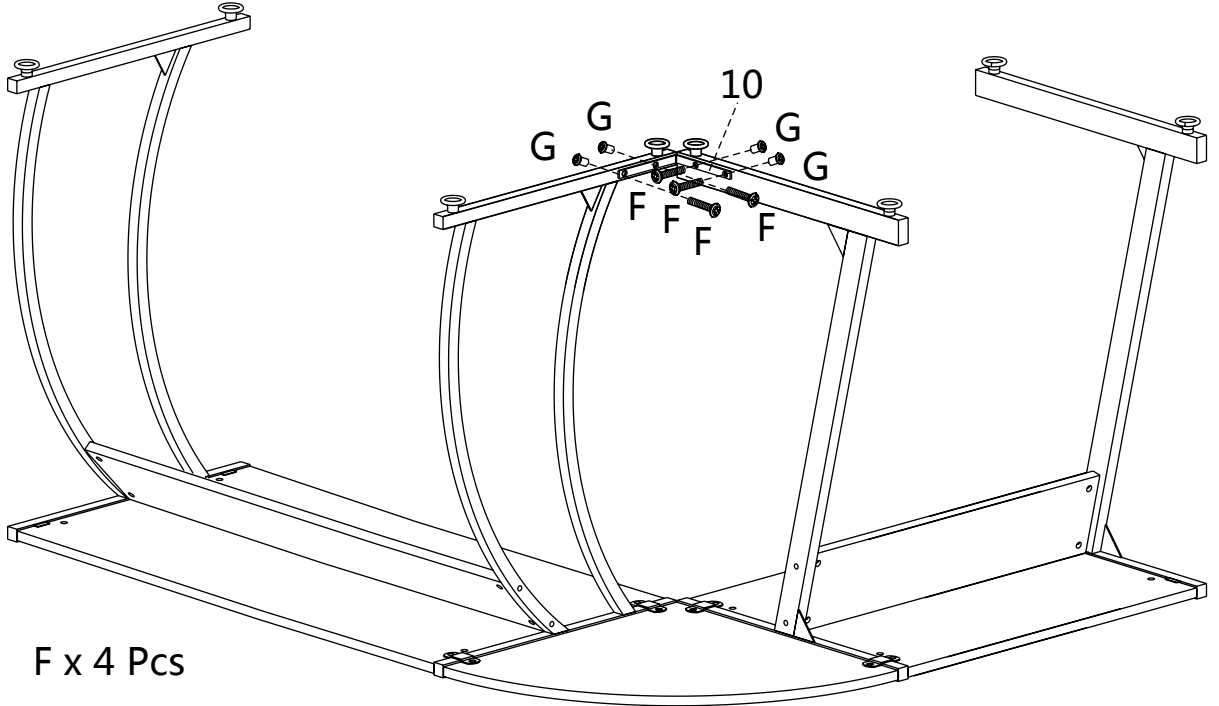


F x 4 Pcs



G x 4 Pcs

## STEP 8

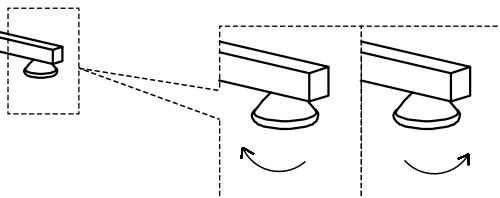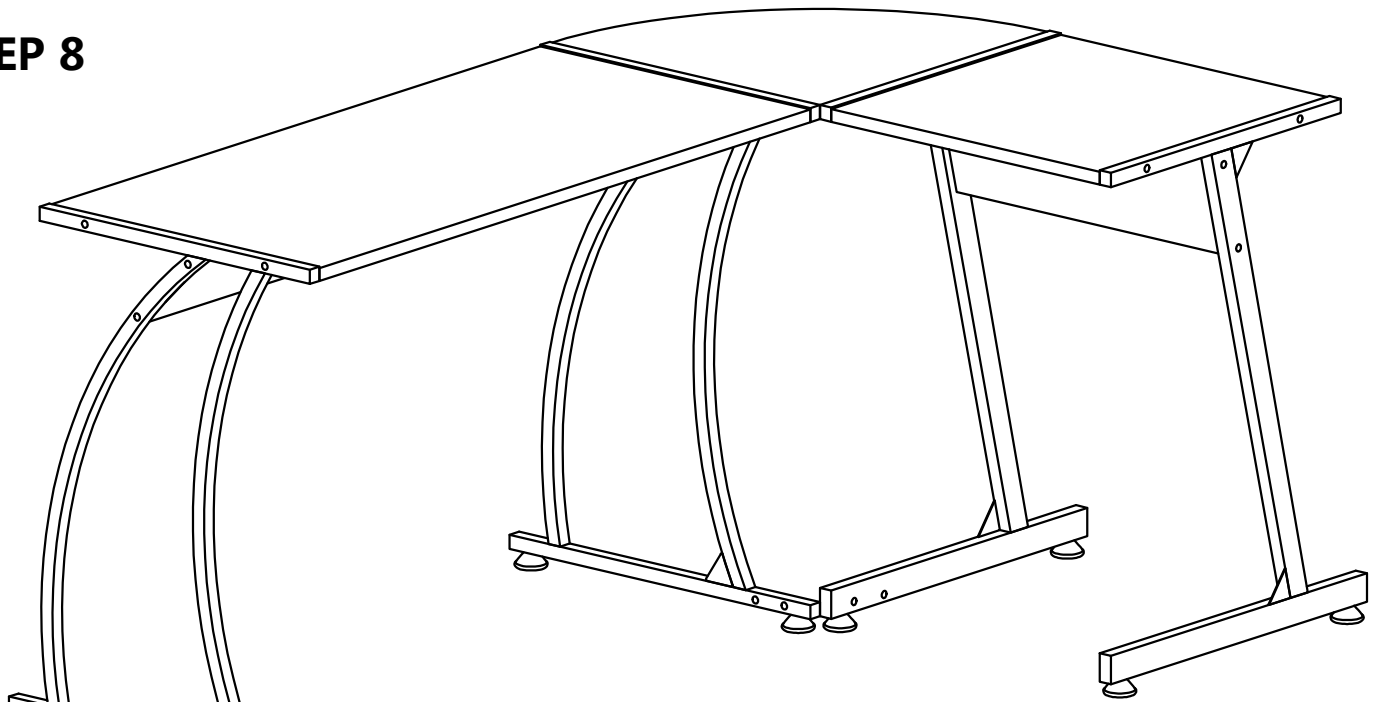

FASTEN/LOOSE THE PAD  
TO MAKE IT EVEN IF NEEDED