

40V 20" CDLS 3-N-1 MOWER


Replacing the C -clamp on mower handles

Applies to both CM2040 & CM2045

The Parts needed

- Handle and Shaft
- Quick Clamp
- Adjusting Gear
- Plastic washer

Washer

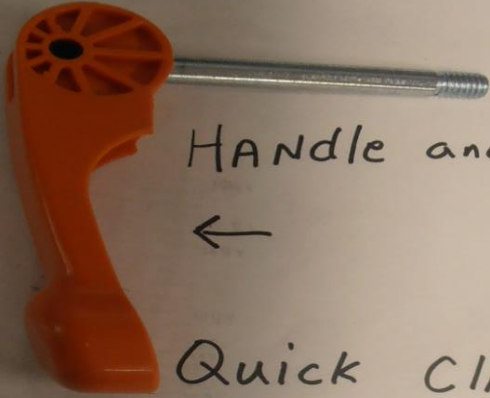


Handle and Shaft



Quick Clamp




Adjusting Gear

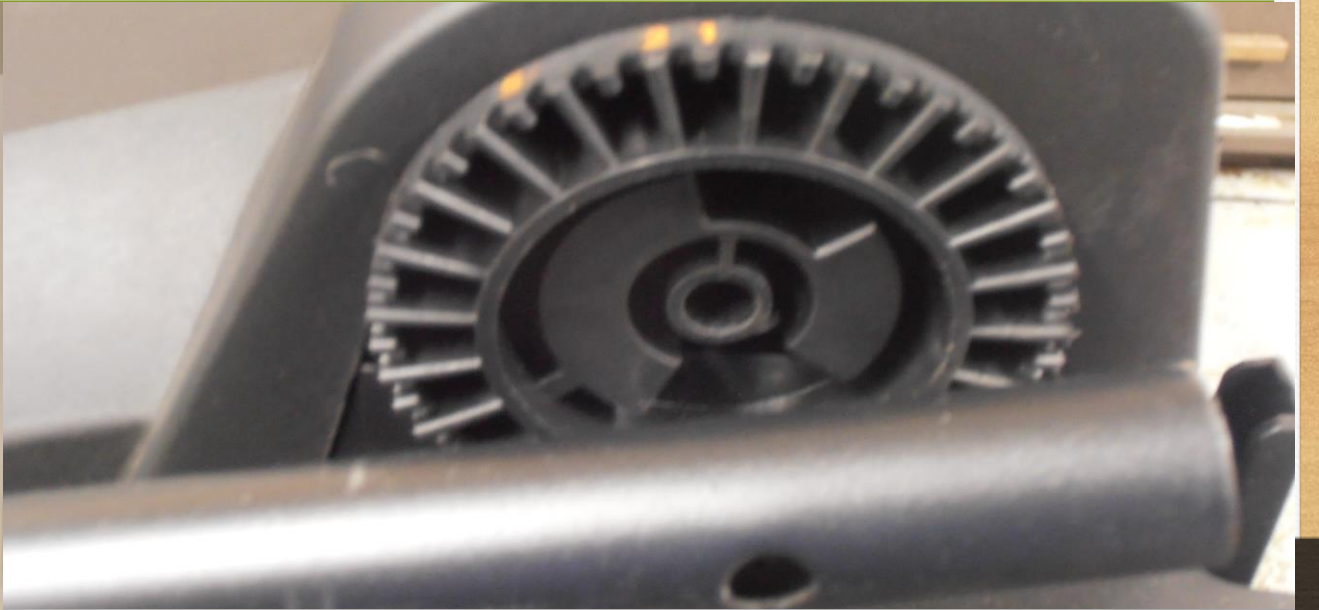

Assembly

- Slide Adjusting Gear on handle
- Place Quick clamp on the shaft, flat side facing away from clamp
- Place Washer on the shaft, flat side against Quick clamp
- Align Shaft through Mower handle, Adjusting Gear in to rear mount
- Rotate assembled C clamp clockwise until threads start to close the gap.
- Adjust the alignment of Gears by slightly lifting the mower handle

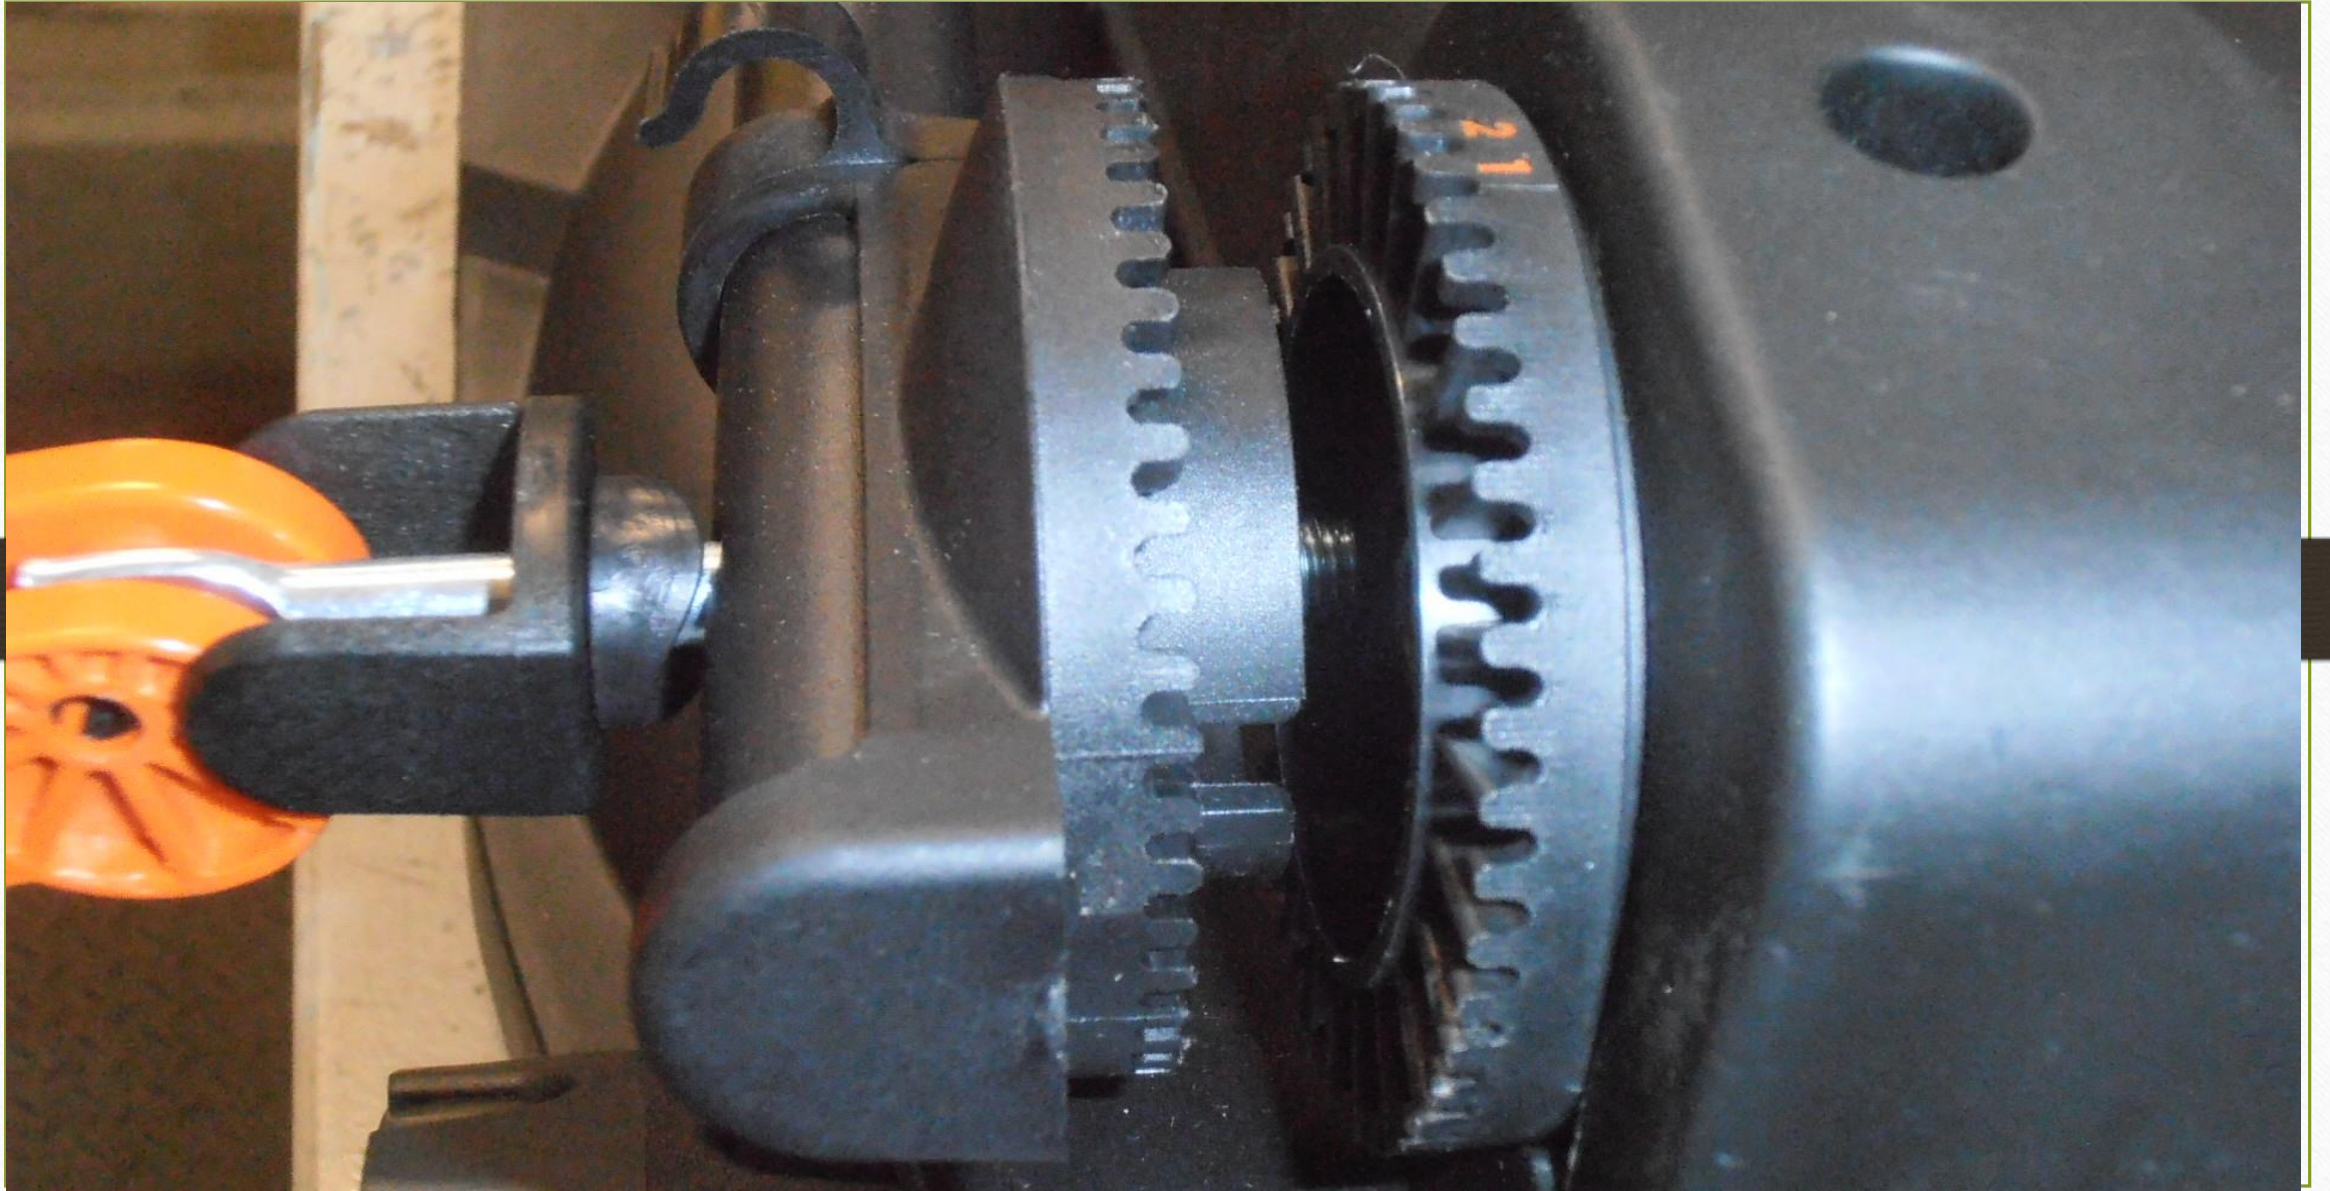

Assembly (Cont.)

- while turning the C clamp, Press Adjusting Gear into Gear molded on rear of mower.
- Leave enough space between gears to lock C clamp. (Approximately $\frac{1}{4}$ ")

Assembled C clamp in locked position

