



**Microsoft**

# Getting Started

Microsoft® Pointing Devices  
with **Bluetooth™** Wireless Technology

 **Bluetooth™**

[www.microsoft.com/mouse](http://www.microsoft.com/mouse)



## Health Warning

Use of a keyboard or pointing device may be linked to serious injuries or disorders.

When using a computer, as with many activities, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. However, if you experience symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, **DO NOT IGNORE THESE WARNING SIGNS. PROMPTLY SEE A QUALIFIED HEALTH PROFESSIONAL**, even if symptoms occur when you are not working at your computer. Symptoms such as these can be associated with painful and sometimes permanently disabling injuries or disorders of the nerves, muscles, tendons, or other parts of the body. These musculoskeletal disorders (MSDs) include carpal tunnel syndrome, tendonitis, tenosynovitis, and other conditions.

While researchers are not yet able to answer many questions about MSDs, there is general agreement that many factors may be linked to their occurrence, including: medical and physical conditions, stress and how one copes with it, overall health, and how a person positions and uses his or her body during work and other activities (including use of a keyboard or pointing device). Some studies suggest that the amount of time a person uses a keyboard may also be a factor. Some guidelines that may help you work more comfortably with your computer and possibly reduce your risk of experiencing an MSD can be found in the "Healthy Computing Guide" topic of the User's Guide, provided with the software program on your CD-ROM. If you do not have the CD-ROM for this product, you can access the "Healthy Computing Guide" from <http://www.microsoft.com/hardware/>, or (in the United States only) call 1-800-360-7561 to request a CD-ROM at no charge. If you have questions about how your own lifestyle, activities, or medical or physical condition may be related to MSDs, see a qualified health professional.

---

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Microsoft Corporation grants the purchaser of this product the right to reproduce one (1) copy of the enclosed "Getting Started" printed guide for each Hardware Device you purchased in the package.

©1999–2002 Microsoft Corporation. All rights reserved.

Microsoft, IntelliMouse, Natural, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

# Welcome!

Congratulations on your purchase of a Microsoft® pointing device with Bluetooth™ wireless technology.

1

## Run the Setup Wizard First

The Setup Wizard installs the required software and helps you set up your Bluetooth devices.



### Important

- You must leave your current pointing device connected to complete Setup.
- Make sure you run the installation CD-ROM that has the same software language as your operating system.

### About Your Rights and Obligations

The software with this product is licensed, not sold. You must either agree to the license contract in the software Setup screens or promptly return the entire product for a refund, excluding the return costs. After you install the software, you may consult the license and the Limited Warranty for the product at any time by looking in the "Legal Information" section of the software User's Guide. You may also print a copy for your records.

### To run the Setup Wizard

- 1 Insert the software installation CD-ROM into the computer's CD-ROM drive. If the Setup screen does not automatically appear, do the following:
  - Click the **Start** button, and then click **Run**.
  - Type `[drive]:setup`. For example, if your CD-ROM drive is drive E, type `e:setup`
- 2 Follow the Setup Wizard instructions on the screen. Depending on the Bluetooth software components your system requires, you may be prompted to restart your computer during software installation.

3 After IntelliPoint software is installed and the computer is restarted (if necessary), the Setup Wizard will automatically continue to help you set up your Wireless Transceiver and pointing device.

 **Note** After you install IntelliPoint software, a Quick Start Guide opens automatically to describe the pointing device features.

## **2 Read the User's Guide**

The User's Guide is your complete product manual and it is installed with IntelliPoint software. It contains important product information in a searchable format, including:

- Microsoft pointing device and IntelliPoint software feature descriptions and instructions
- Troubleshooting topics and Product Support Services information
- End-User License Agreement (EULA), Limited Warranty, and regulatory information

### **To open the User's Guide**

- Click **Start** button, point to **Programs** or **All Programs**, click **Microsoft Mouse**, and then click the **Help** button.

## **3 Customize the Pointing Device Settings (Optional)**

IntelliPoint software lets you reassign any button to a different command or change your pointing device settings, such as how fast the pointer moves.


### **To start IntelliPoint software**

- Click the **Start** button, point to **Programs** or **All Programs**, and then click **Microsoft Mouse**.

 **Important** Before using this product, read about the potential for radio interference in the topic titled "Radio and TV interference regulations" in the User's Guide installed with the software.

## Connecting the Wireless Transceiver

The Microsoft Wireless Transceiver for Bluetooth must be connected to an available Universal Serial Bus (USB) port on your computer. For desktop computers, it is recommended that you use the Wireless Transceiver base stand. A notebook USB cable is included for notebook computers.

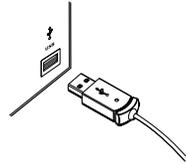

**Important** You must install the software first, as specified in Step 1, before connecting your hardware devices.

### To connect the Wireless Transceiver using the desktop USB cable

- 1 Gently insert the Wireless Transceiver into the base stand.
- 2 With your computer turned on, plug the rectangular USB connector attached to the base stand into your computer's rectangular USB port.

### To connect the Wireless Transceiver using the notebook USB cable

- 1 Gently connect the notebook USB cable to the Wireless Transceiver.
- 2 With your computer turned on, plug the rectangular USB connector into your computer's rectangular USB port.

## Inserting the Batteries

Whenever you insert batteries in your pointing device, always make sure both of them are new. Alkaline batteries are recommended, and two alkaline batteries are included in the package.

- 1 Turn the pointing device upside down, and then remove the battery compartment cover.
- 2 Insert the batteries, making sure to properly orient the positive (+) and negative (-) ends as specified by the battery compartment labels.
- 3 Close the battery compartment cover.

 **Important** Before boarding any aircraft, remove the batteries from the wireless pointing device. The wireless pointing device can emit radio frequency (RF) energy, similar to a cellular telephone, whenever batteries are installed and the mouse is activated either by touch or button press.

### Troubleshooting

For optimum performance, position the Wireless Transceiver as far away as possible from any items that might cause interference. Items that might cause interference include: microwave ovens, wireless networking devices, and certain types of cordless phones.

The pointing device may work up to 30 feet (9.1 m) away from the Wireless Transceiver. This distance varies depending on the positioning of the Wireless Transceiver and wireless pointing device, nearby items causing interference, and other factors.

If your devices are not working properly, make sure to check the following:

- The Setup Wizard was run as specified in Step 1.
- New batteries are inserted and positioned correctly for each device.
- The Wireless Transceiver is properly connected to the USB port.

If you are still having problems, refer to the User's Guide installed with the software for additional troubleshooting information.

## Getting Help

If you have a question about your Microsoft pointing device, try the following:

- View the User's Guide installed with IntelliPoint software, which contains product information and troubleshooting tips.
- Look in Readme.txt on the IntelliPoint CD-ROM for late-breaking product information.
- Go to the Microsoft Mouse Web site at:  
<http://www.microsoft.com/mouse/>  
for additional product information and IntelliPoint software updates.
- See the "Product Support Services" section of the User's Guide, or go to:  
<http://microsoft.com/support/>  
for information about how to contact Microsoft Product Support Services.

## Product Information and Software Updates

For general Microsoft pointing device product information and IntelliPoint software updates, go to the Microsoft Mouse Web site at:  
<http://www.microsoft.com/mouse/>

## Important Battery Information

### General Precautions

- Keep batteries out of reach of children.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Disposal Regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacturer's instructions and Local and National Disposal Regulations. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for longer than a month without being used.

### Special Precautions

The precautions below are to prevent the sudden release of electrolytes, which these prohibited actions can cause:

- Do not open, puncture, or mutilate the batteries.
- Do not heat batteries.
- Do not use a fire to dispose of batteries.

Released battery electrolyte is corrosive, can cause damage to the eyes and skin, and may be toxic if swallowed.

## Product Disposal Information

Dispose of this product in accordance with Local and National Disposal Regulations.

## United States and Canada Radio and TV Interference Regulations

This Class B digital apparatus complies with Part 15 of the U.S. Federal Communications Commission (FCC) rules, Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

Cet appareil numérique de la classe B est conforme aux normes NMB-003 et CNR-210 du Canada. « L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

L'expression « IC : » avant le numéro d'homologation/enregistrement signifie seulement que les spécifications techniques d'Industrie Canada ont été respectées.

**Note** Any changes or modifications not expressly approved by Microsoft could void the user's authority to operate this device.

No serviceable parts included. This device is rated as a commercial product for operation at +41 °F (+5 °C) to +95 °F (+35 °C).

For detailed information on U.S. and Canadian radio interference regulations, search for "regulations" in the User's Guide installed with IntelliPoint software.

#### **FCC Declaration of Conformity for RF Exposure**

The radio module has been evaluated under FCC Bulletin OET 65C and found compliant to the requirements as set forth in CFR 47 Sections 2.1091, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices.

#### **FCC Declaration of Conformity**

Tested to comply with FCC standards. For home and office use. Model: Wireless IntelliMouse Explorer for Bluetooth, Wireless Transceiver for Bluetooth, C3KMS10, C3KKB11 and C3KTR1

#### **Additional Information**

For use with UL Listed, CSA approved personal computers. Not intended for use in machinery, medical or industrial applications. For indoor use only.

N'utilisez qu'avec des composants homologués UL ou CSA. Ne pas utiliser ce dispositif dans une application industrielle ou médicale. N'utilisez qu'à l'intérieur.

**Caution** Do not use in airplane or in hazardous locations.

**Attention** Ne pas utiliser dans un avion ou en présence de vapeur explosive.

#### **RF Technical specifications**

RF output power: +4dBm (maximum)

Protocol: Bluetooth standard compliant

Frequency Range: 2.4 - 2.4835GHz

Type of Modulation: FSK

Signal Type: Frequency Hopping Spread Spectrum (FHSS)

### Information for Optical Pointing Devices Only

User-observable light is 15 microwatts in normal operation.

This product has been tested to comply with International Standard IEC 60825-1:(1993), incld.Amd.2(2001). This product uses LEDs that are inherently Class 1.

**Class 1 LED Product**

### Important note about wireless RF devices

Wireless IntelliMouse Explorer for Bluetooth and Wireless Transceiver for Bluetooth can emit radio frequency (RF) energy, much like an AM/FM radio, whenever the batteries are installed or the transceiver is connected, even if the product is not in operation. For radio interference information regarding any specific medical device or equipment, consult with the manufacturer of such product or with your physician before use. To stop interference, remove the batteries and unplug the transceiver.

Wireless IntelliMouse Explorer for Bluetooth and Wireless Transceiver for Bluetooth should not be used on any aircraft. Before boarding any aircraft, remove the batteries and unplug the transceiver from the computer to ensure that there is no RF transmission.

Microsoft Corporation; One Microsoft Way; Redmond, WA 98052-6399; U.S.A.  
(800) 426-9400 (United States)  
(800) 933-4750 (Canada)

### European Union Declaration of Conformity

We, the undersigned,

**Company:** Microsoft Corporation

**Address:** One Microsoft Way, Redmond WA 98052-6399

**Country:** U.S.A.

**Telephone Number:** +1 425-882-8080

**Fax Number:** +1 425-936-7329

**Internet Address:** <http://www.microsoft.com>

certify and declare under our sole responsibility that the following equipment:

**Product Description/Intended Use:** 2.4GHz Bluetooth low power wireless pointing device and transceiver for home and office use

**EU/EFTA member states intended for use:** EU: Austria, Belgium, Denmark, Finland, France, German, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom, EFTA: Switzerland, Iceland, Liechtenstein, Norway

**Restrictive Use:** none

**Manufacturer:** Microsoft Corporation

**Brand:** Microsoft

**Model Number:** Wireless IntelliMouse Explorer for Bluetooth, Wireless Transceiver for Bluetooth

is tested to and conforms with the essential radio test suites included in following standards:

**Standard Issue date**

EN 300 328-1 V1.2.2 (2000-07)  
ETSI EN 301 489-17 V1.1.1 (2000-09)  
EN 60950 2000  
EN 60825-1/Am2 2000

and therefore complies with the essential requirements and provisions of the Directive 1999/5/EC of the European Parliament and of the council of 9 march 1999 on Radio equipment and Telecommunications Terminal Equipment and the mutual recognition of their conformity.

The technical documentation as required b the Conformity Assessment procedure is kept at the following address:

**Company:** Microsoft European Operation Centre  
**Address:** Blackthorn Road, Sandyford Industrial Estate, Dublin 18  
**Country:** Ireland  
**Telephone Number:** +353 1 295 3826  
**Fax Number:** +353 1 295 3581





**Microsoft**

0602 Part No. X08-87648

