

OUMAX
Smart Activity and Fitness Tracker T2
User Manual

Version 1.0

Table of Contents

Getting Started

Welcome-----	2
What's included -----	2
Device overview-----	3
Mobile Devices Requirement -----	4
Charging the Battery -----	5

Installing the app-----7

Operating the app

Data recorder per day-----	9
Trend Screen -----	10
General Setting-----	11

Operating the T2

Turning the T2 on and off-----	13
Connecting the T2 to a mobile devices-----	13
Activity Trackers-----	15
Sleep Monitor -----	16
Smart Alarm-----	16
Bluetooth Remote Camera-----	17
Remind Features-----	18
Anti-Lost Mode-----	18

Help and Troubleshooting-----19

Safely Statement-----26

Trademarks-----29

Copyright-----29

Getting Started

Welcome


Congratulations on your purchase of the OUMAX T2, This user manual will help you learn the basics of using your device. Welcome to the world of OUMAX wearable technology.

What's included

Your OUMAX T2 Smart wireless activity and fitness tracker box includes:

- 1pcs OUMAX T2 fitness tracker in black
- 2pcs Replacement colored bands in pink and blue
- 1pcs User Manual
- 1pcs USB cable

Device overview

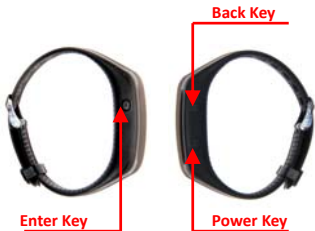

Mobile devices requirement

The OUMAX T2 can sync directly to select iOS and Android devices, compatible device models to be further expanded

For iOS devices, please:

- Check that iOS version is 7.0 or higher
- Ensure your device's Bluetooth is Bluetooth 4.0 and that it is enabled
- Ensure you've selected the proper app to download and install

For Android devices, please:

- Check that Android version is 4.3 or higher
- Ensure your device's Bluetooth is Bluetooth 4.0 and that it is enabled
- Ensure you've selected the proper app to download and install

Note: Due to the Android platform's diversity, certain devices may not be working properly if not match the above system requirement, please do check above system requirement before using it

Charging the battery

Charge the battery for 2 hours before using the T2 for the first time. A computer can be also used to charge the T2 by connecting them via the USB cable. When you see the  icon on T2 means fully charged

- When the battery power is low, the battery icon appears empty.
- If the battery is completely discharged, the T2 cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the T2.
- It will take 1-1.5 hour for fully charged for everyday use

Connecting the charger improperly may cause serious damage to the T2. Any damage caused by misuse is not covered by the warranty.

- If the T2 receives an unstable power supply while charging, the device may not function. If this happens, unplug the charger from the T2.
- While charging, the T2 may heat up. This is normal and should not affect the T2's lifespan or performance. If the battery gets hotter than usual,

unplug the charger immediately.

- To save energy, unplug the charger when not in use or turn off the device. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

About using battery

- Battery operating time is affected by device usage patterns and the condition of the battery.
- The battery is a consumable item. Battery life can be reduced when multiple applications or features are running simultaneously. Also, even if the device is not being used, battery life may be reduced.
- The battery is consumable and the useful charge will get shorter over time.
- Battery power can also be affected when you play high-definition video. The affects on battery power may vary depending on the situation.

Installing the app


You can find the Move app on the iOS app store or Google Play store by searching for **“WristbandApp”**

and select  to download it or Scan below QR code using any QR Code scanner



Operating the app

Start up

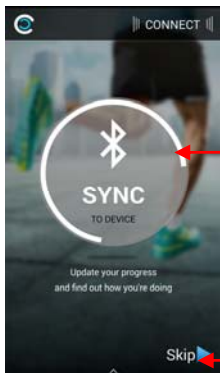

**Tab to sync
if already
connected with T2**

Skip


Tips: Please manually press sync button on your application when you want to check your activity data (T2 does not support auto sync currently)

Data record per day

See the activity and sport data for everyday use

View the previous day's data

Share with your friends

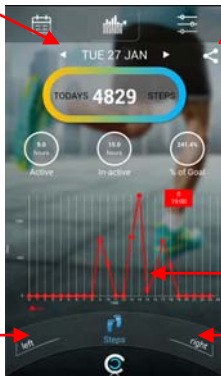

Daily history activity data

Switch calories/steps/sleep

Trend Screen

Review, compare and track your progress (and sleep cycles) by Day,Week,Month or Year

Live Report

Daily Calories

Daily Steps

Daily Trend

Daily Sleep


**Switch
for wake
and sleep**




Switch day/week/month/year

General Setting

The setting menu has 7 options to choose from,

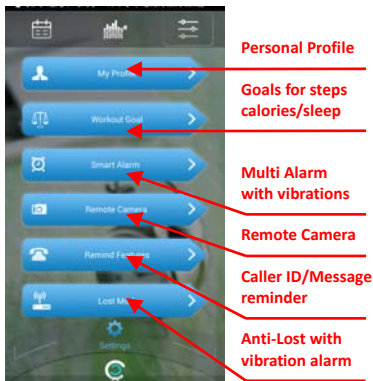

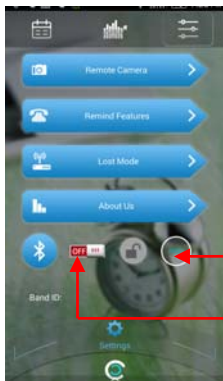

Manual Sync

**Turn on Bluetooth
on smart phone**

Operating the T2

Turning the T2 on and off

Press and hold the Power button for a few seconds to turn on the T2. To turn off the T2, press and hold the Power button.

Connecting the T2 to a mobile devices

Install App **“WristbandApp”** on your mobile devices and connect the T2 to the device via Bluetooth.

On your T2 (Please read this part before operation)

1 Press the Enter Key  to enter into the connection mode 

2 Press the Enter Key  again, if you see the icon  , it means the Bluetooth is invisible currently.

2 Long press the Enter Key  to enable T2 is visible to nearby smart devices until you see the  (The Band ID is unique for every T2 device)

On your smart devices

1 Turn on the Bluetooth function from your smart devices.

2 Open the **“WristbandApp”** and choose **“general setting”** menu

3 Scroll to the menu to bottom until you see the Bluetooth Logo and tab the Switch to ON  to turn on the Bluetooth

4 Application will try to connect the T2 automaticly,once connection is successfully setup, you will see the lock icon  in your T2 with your Band ID shown

 4 Press the , all the data from T2 will be synced automatically to your smart devices

Tips

Your T2 will connect with your app automatically by default setting, if you want to connect with other wristband, please unbind current wristband ,then you can connect wristband

Activity Trackers

1 Press the Enter Key  to enter into the connection mode 

2 Press the Power Key  to switch to the count step mode 

3 Press the Enter Key  to enter into the activity data menu 

4 Press the Power Key  to switch the data between steps  /distance  /calories  /achievement 

5 Double press the Back Key  and exit to home screen

Tips

T2 can storage your sport and activity data for passed 16 days, after that, the new data will cover the previous data, the previous data which already synced to the app will keep on your phone, you can find them whenever you want.

Sleep Monitor

Monitor how long and well you sleep, wake up you with silent wake alarm

1 Press the Enter Key  to enter into the connection mode 

2 Press the  to switch to the sleep mode 

3 Press the Enter Key  to check the sleep quality in 6 status

Bad



Poor



Normal



Good



Very Good



No record



5 Press the Back Key  and exit to home screen

Smart Alarm

1 Open the app, tap the Smart Alarm button  from general setting menu 

2 Turn on or turn off the alarm clock




3 Select the alarm time you want and setup the repeat time

4 Tab save to exit

Bluetooth Remote Camera

T2 allows you to take selfies or photo without your camera in your hand, everyone can be part of the group picture

1 Open the app,tap the Bluetooth Remote Camera



from general setting menu.

2 You will see the  show on the T2 and

Press the Enter Key  to take shot, you can find the photo in the gallery or album

3 Tab the back menu on your smart phone to exit the remote camera mode

Remind Features

T2 let you know when there are incoming calls and text messages and displays caller ID with vibration alerts

Please make sure the Bluetooth connection is ok.

- 1 Open the apps, tap the Remind feature  from general setting menu 

- 2 Turn on/off the call and message reminder function



- 3 Tap save to exit

Anti-Lost

Never lost your phone again, T2 will help you to find your favorite device back with alarm and vibration, When the T2 and your mobile device exceed the working distance, the T2 and/or your mobile device will alarm and vibration to indicate they are out of range. When your mobile phone is back within working range, it will re-connect to the T2.

- 1 Open the apps, tap the Remind feature



from general setting menu



2 Turn on/off the band reminder



or phone reminder



3 Tab back to exit

Tips

1 .The default setting of working distance between your mobile phone device and T2 is around 10-16 feet (3-5 meters) before the alarm and vibration. The range of the connection between the T2 and your mobile device will be shorter in a building with interior walls compared to an area with no obstructions.

2. If the re-connection does not happen automatically, please check and re-connect the T2 with your mobile phone.

Help and Troubleshooting

How do I wear my wristband

Your wristband is designed to be worn on your left and right hand, please kindly read the user manual before start to use and keep the wristband in the right direction to discover more fun.

What does wristband track?

With wristband you can track steps taken, distance traveled, active minutes, calories burned, and how long and how well you sleep. In addition to tracking your stats, wristband also features a clock and silent alarm. You can see from the wristband or application from your smart devices

Is the app compatible with my mobile device?

The OUMAX T2 can sync directly to select iOS and Android devices, compatible device models to be further expanded

For iOS devices, please:

- Check that iOS version is 7.0 or higher
- Ensure your device's Bluetooth is Bluetooth 4.0 and that it is enabled
- Ensure you've selected the proper app to

download and install

For Android devices, please:

- Check that Android version is 4.3 or higher
- Ensure your device's Bluetooth is Bluetooth 4.0 and that it is enabled
- Ensure you've selected the proper app to download and install

Note: Due to the Android platform's diversity, certain devices may not be working properly if not match the above system requirement, please do check above system requirement before using it

How does wristband track my sleep?

The motion sensor on your wristband analyzes your movement patterns to determine whether you're asleep, restless, or awake. We use this data to calculate your sleep efficiency.

What is a silent alarm?

The silent alarm uses vibration to gently awake or alert you at the time specified.

How does wristband track my steps?

wristband trackers use a 3-axis accelerometer to understand your motions. By analyzing acceleration data, our trackers provide detailed information about frequency, duration, intensity, and patterns of movement to determine your steps taken, distance traveled, calories burned, and sleep quality.

How long does the battery last?

On a full charge the battery lasts 3 to 5 days. When it's time to recharge your wristband will show a low battery, and you can also choose to be notified via mobile device

Can I share my wristband data through Facebook?

wristband can share your daily or weekly averages to Facebook.

How do I restart my tracker?

Sorry to make you some trouble, but when you face some problem as below

Your tracker is not syncing

Your tracker is not responding to movement

Your tracker does not respond even when in a

charger

Your tracker has a battery charge but is not lighting up

Your tracker isn't tracking your steps

You just need to wristband to close the app in application or close the Bluetooth connection from your mobile phone, after that, you can reconnect, and then the device will be ok.

The time is incorrect on my tracker's display

The time displayed on your tracker will be synced automatically with your system time from your smart phone or tablet pc. So just connect wristband with your device, and then you will see the correct time

Tracker battery information

Your tracker's battery life will be determined by your settings and interaction with it. You can also see from the menu of my wrist band.

How do I charge my wristband

Your wristband comes equipped with a rechargeable lithium-polymer battery. With normal use, your wristband should last about 3 to 5 days before needing a charge. You can check the level of your battery from the application's menu of my wrist band or the OLED display of device

To charge your wristband, just take your device from the color band and connect with USB cable to the computer or home charger plug, the battery icon on the display will show the charging progress and device will Charging completely average 1 hour.

How can I set the time of my wristband?

Your wristband will sync the time with your smart phone automatically once connected by Bluetooth. No need to set manually.

Notices for using Bluetooth

- To avoid problems when connecting your T2 to mobile device, place the devices close to each other.
- Ensure that your T2 and the other Bluetooth device are within the Bluetooth connection range (10 m).

The distance may vary depending on the environment the devices are used in.

- Ensure that there are no obstacles between your T2 and a connected mobile device, including human bodies, walls, corners, or fences.
- Do not touch the Bluetooth antenna of a connected mobile device.
- Bluetooth uses the same frequency as some industrial, scientific, medical, and low power products and interference may occur when making connections near these types of products.
- OUMAX is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by the Bluetooth SIG, may be incompatible with your T2.

Safely Statement

This equipment has been tested to comply with safely certification in accordance with specifications of EN standard EN60950-1:2006+ETSI EN 301 489+ETSI EN 300 328

Important Safety Instructions

- . Read these instructions
- . Keep these instructions
- . Head all warnings.
- . Follow all instructions
- . Do not attempt to open the tracker, Substances contained in this product and/or its battery may damage the environment and/or human health if handled and disposed of improperly
- . Do not tamper with your Move
- . Do not use abrasive cleaners to clean your Move
- . Do not place your Move in a Dishwasher, Washing Machine or Dryer
- . Do not expose your Move to extremely high or low temperatures
- . Do not use your Move in a sauna or steam room
- . Do not leave your Move in direct sunlight for an extended period of time
- . Do not leave your Move near open flames

- . Do not dispose of your Move in a fire, The battery could explode
- . Do not attempt to disassemble your Move; it does not contain serviceable components
- . Never allow children or pets to play with the Move: the small components may be a choking hazard!

Built-in Battery Precautions

- .Do not attempt to replace your Move's battery, it's built-in and not changeable
- .Charge your Move using certificated computer, Power hub or Power supply
- .Charge the battery in accordance with the instructions supplied with this guide
- .Use only the charger cable that shipped with your product to charge the batter

Disposal and Recycling Information

The symbol on the product or it's packaging signifies that this product has to be disposed separately from ordinary house wastes at its end of life, Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centers so as to help conserve natural resources. Each country in the European Union should have its collection centers for electrical and electronic equipment recycling, For information about your recycling drop off point, please contact your local electrical and electronic equipment waste management authority of the retailer where you bought the product.

.Do not disposes of the Move with household waste

.Battery are not be disposed of in municipal waste stream and require separate collection

.Disposal of the packaging and your Move should be done in accordance with local regulations.



Li-ion

Trademarks

- OUMAX and the OUMAX logo are registered trademarks of OUMAX Technology Co.,Ltd.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.

Copyright

Copyright © 2015 OUMAX Technology Co.,Ltd.

This guide is protected under international copyright laws.

No part of this guide may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of OUMAX Technology Co.,Ltd.