

Thank you for choosing this versatile and high quality Whip-It cream whipper. With this universal kitchen tool you can create a multitude of light desserts, cremes and sweet and sour mousses as well as sauces.

Before using this whipper please read the following instructions carefully. This appliance is perfect for the convenient preparation of whipped cream, cremes, mousses and sauces.

Instructions for use:

1. When using your whipper for the first time, or if you have not used it for a while, rinse the bottle first with warm water, then with cold water before filling it with cream.
2. Fill in well-chilled fresh cream or other ingredients depending on the recipe. Do not fill the Whip-It whipper with more than the permissible quantity indicated on the bottle (0,5 litre or 1 litre, depending on the model). When preparing recipes, please dissolve solids first in order to avoid the formation of clods.
3. Place the gasket inside the head and screw head on to bottle evenly and firmly. The head is in place correctly when no thread is visible. Do not cross-thread!
4. Insert Whip-It cream charger (N20) into the charger holder. For guaranteed quality, use Whip-It cream chargers only.
5. Screw the charger holder on to the inlet valve (fig. 2) until the charger content is released with a hissing sound. Use 1 charger for each filling (2 chargers with 1 liter bottle). Shake whipper briskly four to five times (fig. 3) in a vertical direction. When using well cooled light cream or other mixtures, shake up to ten times. Unscrew the charger holder and charger! Remove and discard empty shell chargers which are recyclable as scrap metal.
6. To dispense, hold whipper vertically (decorating nozzle pointing downwards) about 1 cm above the surface. To decorate press the lever lightly (fig. 3). If whipped cream (mousse, creme) is not firm enough, shake once more. When using later, do not shake again.
7. Keep your Whip-It whipper in the refrigerator (never in the deep-freezing compartment or the freezer!).
8. Storage when filled: Remove the decorating nozzle from nozzle adapter, rinse thoroughly and put nozzle back on. After use place the Whip-It whipper in the refrigerator. The content will stay fresh for several days. (up to 14 days)
9. Cleaning and storage of the empty Whip-It whipper
 - Before opening, allow remaining pressure to escape by pressing the lever.
 - Unscrew the head and remove head seal and decorating nozzle. Hold end of valve inside the head while unscrewing nozzle adapter with the other hand.
 - Thoroughly clean each individual component with a mild detergent and a brush.
 - Allow the parts to dry and store head and bottle separately.
 - do not clean any component of the Whip-It whipper in the dishwasher!
 - Do not clean any component of the Whip-It whipper in boiling water!

Helpful Hints:

1. Before filling the whipper please cool well under cold water or in the refrigerator
2. Only use soluble ingredients. Insoluble substance such as seed, pulp, etc. prevent the closure of the delivery valve or might impair the proper functioning of the Whip-It whipper.
3. For sweetening, it is best to use powder sugar or liquid sweeteners. Granulated sugar or salt should first be dissolved in water or milk. Use powdered or liquid spices only.

4. Overshaking will make pure heavy cream too stiff, therefore, please shake only 4-5 times. do not shake everytime before dispensing. Please shake recipes consisting of mixtures of cream and other liquids well and more frequently.
5. When dispensing always hold the whipper upside down (decorating nozzle pointing downwards) otherwise pressure will escape and some cream will remain inside the whipper.
6. For best result, serve immediately upon dispensing.
7. For long time storage, please keep head and bottle separately.

Safety Measurements:


1. The whipper as well as the chargers are pressure vessels which require increased attention and care.
2. Attention: Use only Whip-It original spare parts! Never combine parts with other Whip-It products or other manufactures' products.
3. Do not attempt to make any modifications to the whipper yourself.
4. Any attempt to repair the whipper yourself or any improper manipulation of the whipper will terminate all guarantees and liabilities.
5. Never use the whipper if damaged. Always send Whip-It cream whipper, which fell on the floor in for a safety check.
6. For repairs always return complete unit (head and bottle).
7. For spare parts, please contact your dealer or Whip-It. (United Brands)
8. Please keep instruction booklet.
9. Only use original Whip-It chargers.
10. Keep Whip-It whipper and chargers out of the reach of children.
11. Whip-It whippers can only be used for whipping liquids for the preparation of cream, mousses, sauces, cremes, etc.
12. All Whip-It parts can be assembled easily; therefore, never use force.
13. For safety reasons do not bend over the whipper while charging.
14. In case of improper filling of the whipper with solid ingredients which might cause clogging of the valve, please do the following: under no circumstances attempt to unscrew the head! Place the whipper on the countertop and wait until content has settled on the bottom. Then cover head with a thick cloth and press lever several times until the gas has escaped completely. If you still cannot unscrew head - please send in for repair.
15. Only open the Whip-It whipper when the pressure has completely escaped. Press the lever until the hissing sound stops.
16. Do not expose the Whip-It whipper to heat (stove, sun, oven, microwave etc.).
17. Do not put the Whip-It whipper in the freezing compartment or the freezer.
18. When cleaning only remove those parts as shown in fig. 1.
19. Do not use any sharp objects or abrasive materials when cleaning the bottle.

GUARANTEE


Defective whipper (faulty materials or bad workmanship) will be repaired free of charge (freight prepaid!) within one year of date of purchase. This guarantee does not cover any liability for malfunction caused by improper use, use or damaged parts, or any consequential damage. In order to assure the proper functioning of your cream whipper only use original Whip-It parts. Read instructions carefully!

Further information: www.unitedbrands.us


Part List

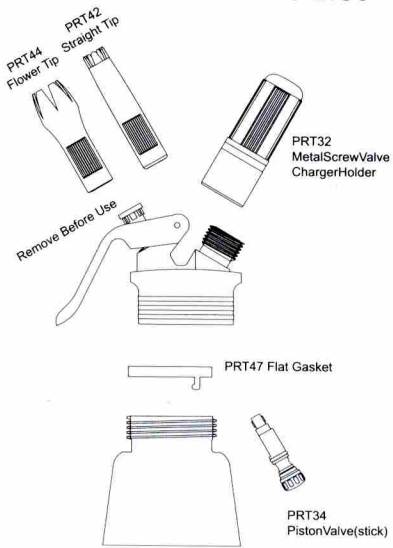

2

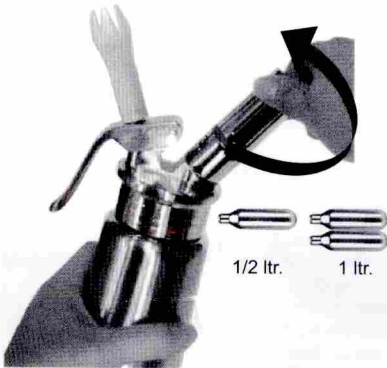

3

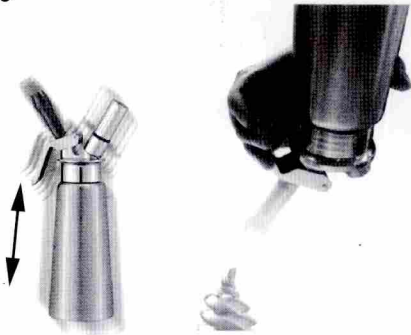

Once properly charged and mixed
DO NOT OVERSHAKE.

The Whip-It! brand whipped cream dispenser is more versatile than you might think. For recipes visit our website at:
www.unitedbrands.us

whip-it!

brand

instructions for care and use



Whip-It! brand is a registered trademark of

unitedbrands 

1.800.500.0583

www.unitedbrands.us