

# Measuring Wheel Setting Selection

Find your formula type below and set the measuring wheel to the corresponding number.

Formula Brand/Type	Setting #
<b>Similac®</b>	
Advance® Stage 1	5
Advance® Stage 2	4
Advance® Organic	7
Alimentum®	5
Go & Grow®	7
Go & Grow® Soy	5
NeoSure®	9
Soy	6
Sensitive® for fussiness & gas	7
Sensitive® for Spit-up	6
Supplementation	5
Total Comfort™	5
PM 60/40 Low Iron	7
Abbott Elecare® infant	7
<b>Gerber®</b>	
Good Start® Gentle	5
Good Start® Gentle for Supplementing	5
Good Start® Nourish	9
Good Start® Protect	5
Good Start® Soy	7
Good Start® Soothe	7
Graduates® Gentle	6
Graduates® Protect	6
Graduates® Soothe	9
Graduates® Soy	7
<b>Enfamil™</b>	
A.R.®	5
EnfaCare®	7
Gentlease®	5
Nutrimigen™	9
Pregestimil™	4
Premium Infant	4
Premium Newborn	3
Prosobee®	5
Reguline™	4
For Supplementing	5
Enfagrow® Gentlease® toddler	7
Enfagrow® Premium older toddler	8
Enfagrow® Soy toddler	7

Formula Brand/Type	Setting #
<b>Earth's Best Organic®</b>	
Infant	7
Sensitivity®	7
Soy	7
<b>Baby's Only Organic®</b>	
Dairy	6
Dairy DHA & ARA	7
Soy	6
LactoRelief™	6

**Store Brand Formula**

For the following store brands, use the insert indicated for the type of formula in the chart below.

365™, America's Choice™, BabiesRUs®, Baby basics®, Bear Essentials, Berkley & Jensen® Baby, Bright Beginnings® Comforts™, CVS®, Giant®, Giant Eagle Baby, H-E-B Baby™, Home 360°™ Baby, Kirkland Signature™, Kuddles®, Little Ones™, Meijer™, Mom to Mom™, Mother's Choice, Parent's Choice™, President's Choice®, Rite Aid®, Simply Right™, Top Care®, Up & Up®, Vermont Organics™, Wegmans, Walgreens Well Beginnings™

Formula Brand/Type	Setting #
Advantage	6
Added Rice	9
Gentle	6
Infant with Iron	5
Newborn	6
Organic Milk Based	8
Organic Soy Based	7
Premium	6
Sensitivity	8
Soy	10
Tender	8
Toddler & Older infant	8

**Occasional clumping may occur due to the nature and composition of powdered formula. Always check for clumps and shake or stir the bottle if necessary.**

# Formula Pro®

## Instructions for set-up, use and cleaning



**⚠ FAILURE TO SET UP THE FORMULA PRO® CORRECTLY WILL RESULT IN IMPROPER FORMULA DISPENSING.**

**READ THE INSTRUCTION MANUAL and CAREFULLY follow the step-by-step directions for cleaning, set up and use.**

# Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces.
3. To protect against electric shock and injury to persons do not immerse cord, plug, water tank or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before inserting or removing parts, and before cleaning the appliance.
6. Do not operate this appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. Do not attempt to use the machine without water in the water tank.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. Make sure machine is turned off before unplugging.
16. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
17. Before serving make sure formula mixture is at safe temperature for baby.
18. Avoid contact with moving parts. Never remove powder container, powder container lid, funnel or water tank while machine is in operation.
19. Do not disassemble.

## Warning:

For infants less than 6 months old, always use bottled water suitable for infant formula preparation. Tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby. Only prepare one bottle at a time, feed immediately and follow all instructions carefully. Do not keep leftover formula mix. Always hold baby while feeding. Leaving baby unattended may cause choking.

## TECHNICAL DATA

Supply voltage: 120V ~ 60Hz

Model: FRP0045


Current: 2.5A

Heater Power: 250W


Motor Power: 20W

## Save these instructions

# Formula Pro® Controls & Indicator Lights

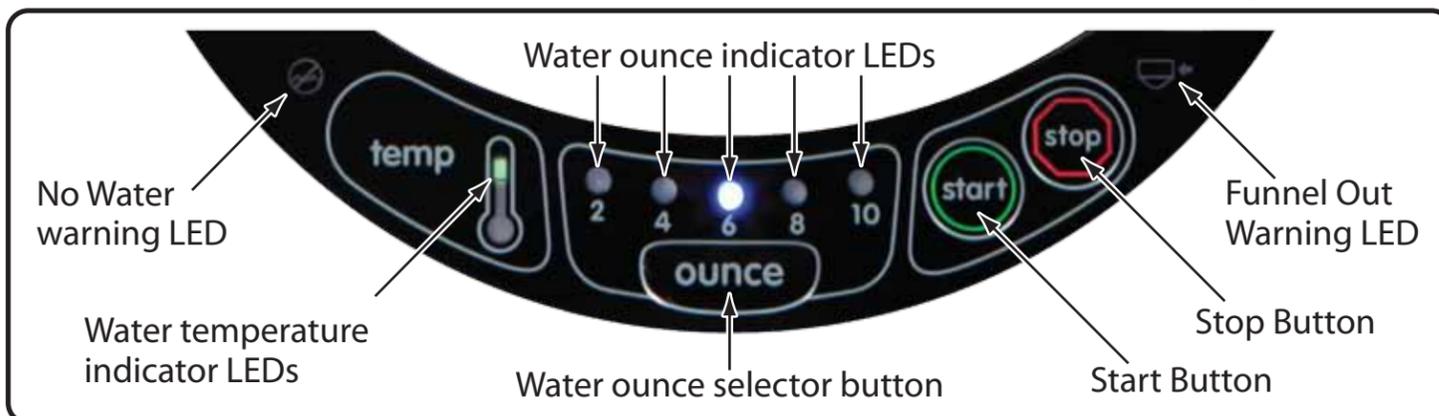


# Formula Pro® Components

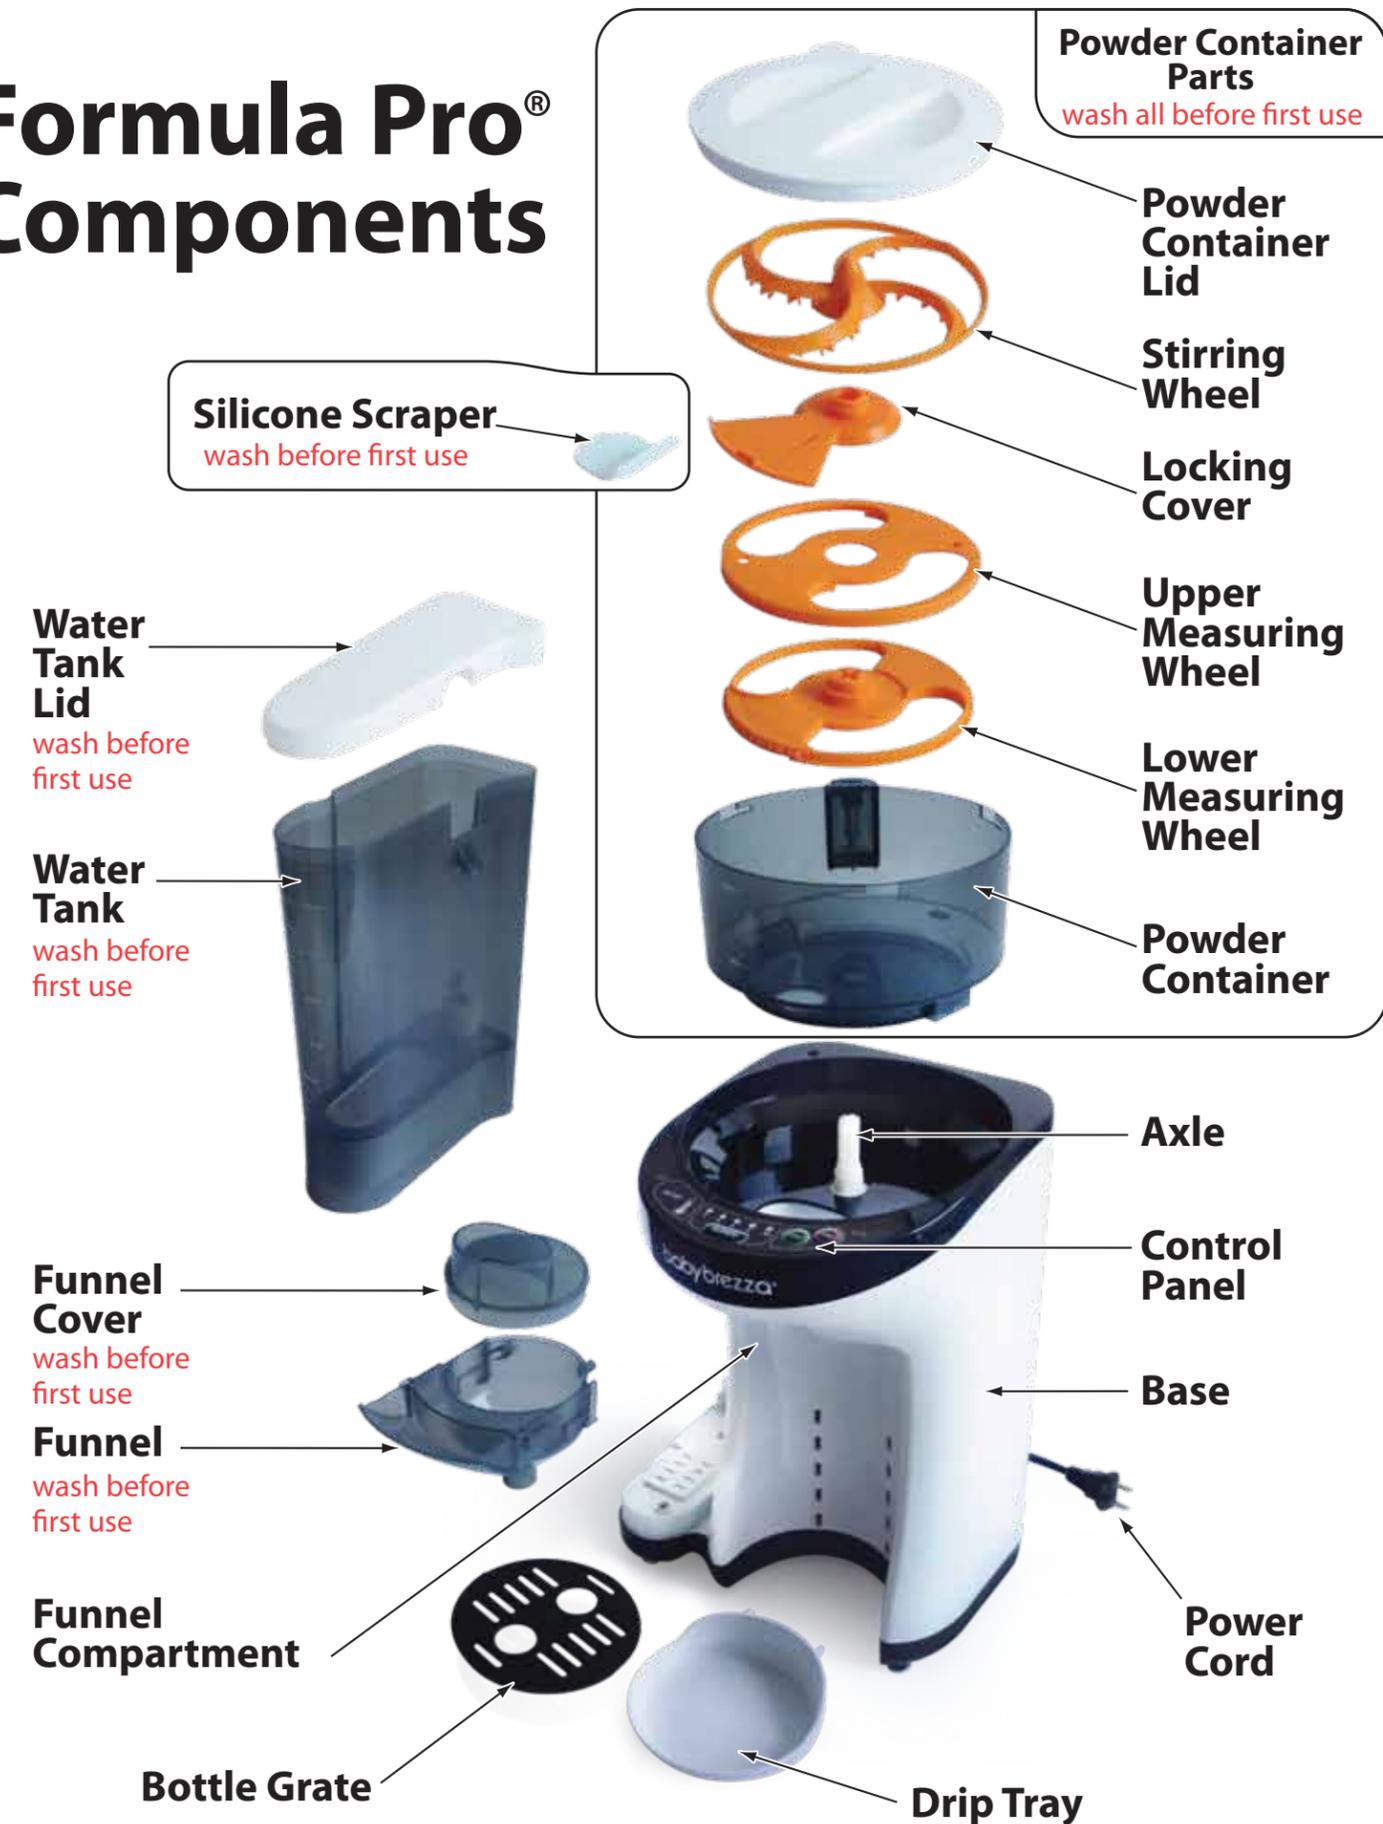

## Powder Container set up

**Wash:** Funnel, Funnel Cover, Inside of Water Tank, and all Powder Container parts (see page 2). After washing, **make sure all Powder Container parts are COMPLETELY DRY before assembly.**

Set up the Measuring Wheel to work with your powder type.

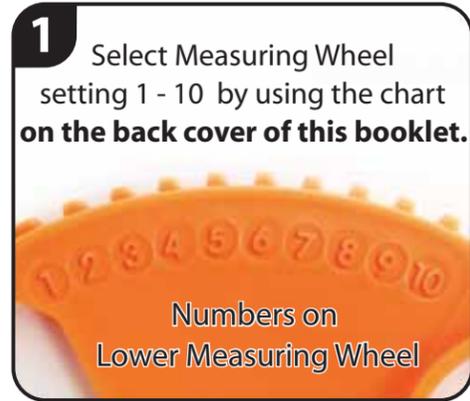

Press upper & lower halves of Measuring Wheel together so your powder's setting number shows through window on the Upper Measuring Wheel. You have now assembled your Measuring Wheel.

Set up the Powder Container and parts.



Place Powder Container on Base with "MIN" & "MAX" lines facing front.



Place assembled Measuring Wheel In Powder Container.



1. Place the front edge of Locking Cover under the tab in the Powder Container.

2. Press down on back edge to lock in place.



Locking Cover should look like this when inserted properly.



Place Stirring Wheel In Powder Container, align with axle and push down so it touches the Locking Cover.

Don't add powder yet. Follow the steps on the next page to run an internal cleaning cycle BEFORE using the Formula Pro® with powder.

## Clean internal parts - before first use - without powder

After setting up the powder container, run a cleaning cycle to rinse internal parts.



Place Powder Container Lid on Powder Container as shown.



Turn Powder Container Lid Clockwise to lock into place.




Plug in machine and turn power switch to on position.



Fill water tank to MAX line with distilled water.



Place 10 ounce or larger container to catch water.

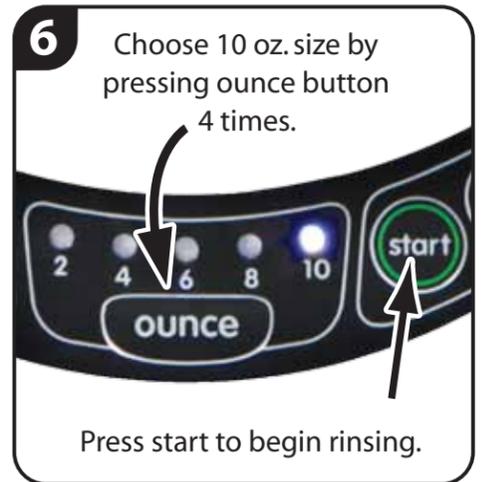

The Formula Pro® will stop after dispensing 10oz of water. Dispose of the water captured in the container.

## Your Formula Pro® is now ready to use with powder.

Follow the steps on pages 5 and 6 to prepare bottle with the Formula Pro®

Always use a clean and sterilized bottle, nipple or other feeding equipment.

Wash and dry hands before handling sterilized bottles.

Make each bottle as needed, and do not store mixed formula for later use.

# Bottle Preparation

Follow the steps on these pages to prepare bottles with the Formula Pro®



**1** Fill water to MAX line



**2** Fill powder container with powder and close Lid

Pour powder loosely and evenly into Powder Container. Never fill past the MAX line. Never pack powder in the Powder Container or overfill.

Powder can be spread evenly with the 3 arms on the Powder Container Lid before closing.


## Temperature Indicator Lights



Flashing Yellow means water is heating.



Solid Green means water is warm and ready.

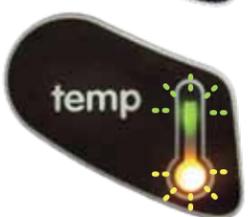

Flashing Yellow & Green means water poured into tank is too hot or too cold.

## About water temperature

The heater in the Water Tank will warm the water and keep it warm as long as the machine is powered on. If you refill the Water Tank with cool or room temperature water and need to use the machine right away, the machine can be used while water is heating (flashing yellow light).

If you run the machine with cool or room temperature water, before the water is warm and ready, always make sure formula is mixed properly and check for clumps.

For quickest warming time, always fill the water tank with room temperature or cool water. Flashing green & yellow lights mean the water poured into in the Water Tank is too hot or too cold. The machine will not work while the green & yellow lights flash. If you don't want to wait long for the water to heat, do not fill with water stored in the refrigerator.

**⚠ Never fill Water Tank with hot water. If you boil water before using it in the machine, let the water cool to body or room temperature before pouring it into the Water Tank.**

Bottle Preparation continued on next page

# Bottle Preparation Continued



Select correct height for Drip Tray based on bottle height. Lift up and pull out to remove. Push in and **down** to install.




Short Bottle




Tall Bottle


Adjust the drip tray so the bottle is as close to the Funnel outlet as possible. This will make sure no formula spills outside of the bottle.

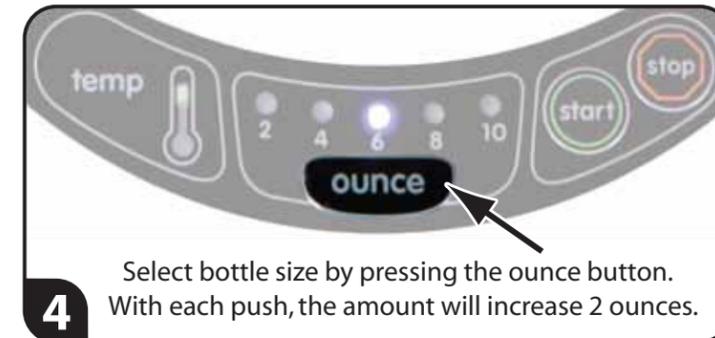

Select bottle size by pressing the ounce button. With each push, the amount will increase 2 ounces.

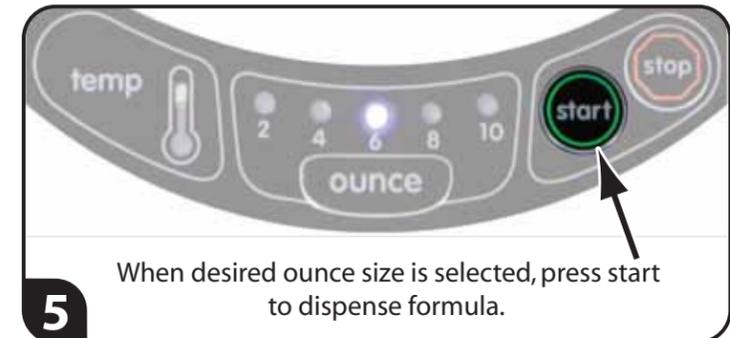

When desired ounce size is selected, press start to dispense formula.

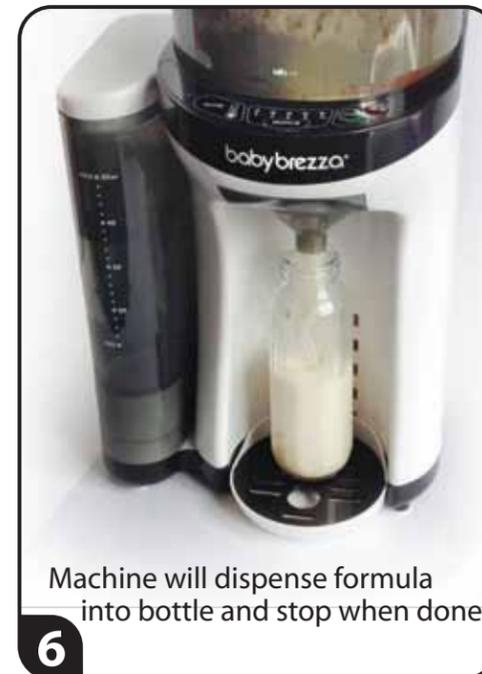

Machine will dispense formula into bottle and stop when done.



Check level of mixed formula. **Level will appear higher** due to added powder volume and/or variance in bottle markings.



Check for clumps and shake or stir the bottle if necessary. Test temperature...

... and feed baby.

**⚠ Never remove Water Tank, Funnel or Powder Container while machine is in operation.** Always hold the bottle when feeding baby. Never prop the bottle up and leave your baby to feed unsupervised.


After baby stops feeding from bottle, discard any leftover formula mixture.

## Daily Cleaning

Unplug the appliance before cleaning. Do not use abrasive pads to clean the machine. **The Funnel, Funnel Cover and underside of Powder Container MUST BE CLEANED once per day** (if machine is used daily). Follow these steps to clean the Formula Pro® parts every day.



**1** Remove Funnel & Funnel Cover by pulling out and down.

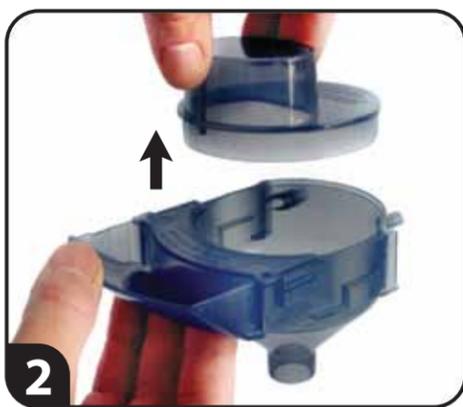

**2** Remove Funnel Cover from Funnel by lifting up on Funnel Cover.



**3** Wash and rinse Funnel & Funnel Cover thoroughly. Funnel and Funnel Cover are top rack dishwasher safe and are also safe for steam sterilization.



**4** Wipe the hole the on underside of Powder Container.

With the Funnel removed and Powder Container attached to machine, wipe any dry formula powder from the hole on the underside of the Powder Container & Funnel Compartment in a circular motion with a DRY paper towel or DRY soft cloth.

**⚠️ Never use a wet or damp cloth to clean the Funnel Compartment or underside of Powder Container.**

**⚠️ Always make sure the Funnel and Funnel Cover are completely DRY before placing in machine.**

## Monthly Cleaning

The Powder Container parts, Water tank and Base should be cleaned once a month.



**1** The Powder Container and Powder Container Parts should be cleaned **once a month** by emptying any remaining powder (powder can be saved for refill) and cleaned with mild detergent and soft cloth or sponge. **Never place Powder Container in dishwasher.**

The Water Tank should be cleaned **once a month** with mild detergent and soft cloth or sponge. Rinse inside of Water Tank thoroughly before refilling with clean, purified water. Wipe the outside of the Water Tank with a damp clean cloth.

**Never immerse Water Tank or get the electronics in the base of the Water Tank wet.** If the electronics in the base of the Water Tank get wet, allow to air dry thoroughly before placing back on base. **Never place Water Tank in dishwasher.**



**3** The machine Base should be wiped with a damp, soft cloth or sponge and dried immediately. Never submerge the base or plug in water or other liquids. Dry machine Base after cleaning.

## User Tips

Always make sure powder level is above the top of the Stirring Wheel. You will know it's time to refill the Powder Container when any of the four horizontal arms of the Stirring Wheel are visible through the powder.

Do not use the machine when the powder level is below the MIN line marked on the Powder Container.

Refill when arms of stirring wheel are visible



To easily separate the Upper Measuring Wheel from the Lower Measuring Wheel, press the raised center area while holding the outside edge as shown in photo at right.



Do not remove the Water Tank from the base to refill. Simply lift the Water Tank Lid at the front and pour water in. Make sure to keep water above "MIN" line.

Refill Water Tank regularly with room temperature water and keep machine powered on. This way, the water will always be warm and ready to serve.



If the powder forms a cone shape mound when refilling the Powder Container, use the 3 arms on the bottom of the Powder Container Lid to gently level the powder before closing. Always keep the powder level below the MAX line and never pack powder in the Powder Container.



Make sure powder is not above the MAX line before closing lid.



The Formula Pro can be used at any time during the water heating cycle, but not all powders mix well with cool or room temperature water. Always check for clumps & shake or stir the closed bottle gently to mix the powder completely with the water.

## Troubleshooting

Condition	Possible Cause	Remedy
Machine will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Turn switch on lower back of unit from off to on.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water Tank is removed or not fully seated.	Place water tank on base or push down all the way.
	Water level is below "MIN" line.	Add more water to water tank.
	Powder container is removed or not fully seated.	Place powder container on base or push down all the way.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely.
	Powder container lid is on backwards.	Make sure tab on outer edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 4, step 1 & 2 for details.
	Water in Water Tank is too cold. ( Green & Yellow Temp LEDs Flashing)	Allow water to warm up or pour warmer water in Water Tank to raise temperature faster.
	Water in Water Tank is too hot. ( Green & Yellow Temp LEDs Flashing)	Allow water to cool down or pour cool water in Water Tank to lower temperature faster.
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water in tank. Green LED in "temp" section of control panel will illuminate when water reaches correct temperature.
Not enough powder dispensed.	Powder level in powder container is too low.	Refill Powder Container with more powder.
	Powder is stuck in powder measuring wheel.	Make sure silicone scraper is installed correctly.
	Measuring wheel is set to incorrect number for powder type.	Make sure the measuring wheel is set to the correct number for your powder type. See Back Cover.

## Troubleshooting

Condition	Possible Cause	Remedy
Too much powder dispensed.	Measuring wheel is set to incorrect number for powder type.	Make sure the measuring wheel is set to the correct number for your powder type. See Back Cover.
	Locking cover is not locked under tab in powder container.	Check locking cover and make sure the edge is locked under the tab in the powder container. See page 3, Step 5 for details.
Not dispensing water	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate and use purified/distilled water.
Powder build-up on funnel cover and underside of powder container.	Frequent use without cleaning underside of powder container. See page 7, step 4 for details.	Clean funnel cover and powder container bottom frequently, every 5-6 bottles, or at least once a day.
Water Tank is full, red no water light  is on.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Funnel will not fit all the way in Funnel Compartment.	Funnel Cover is not straight on funnel or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.

If you can not remedy problems with the machine by using the troubleshooting chart above, do not return the your Formula Pro® to the store, please contact Customer Service at 1-888-396-6552. Any other servicing should be performed by an authorized service representative.

### Customer Service and Warranty

If you are experiencing problems with your Baby Brezza Formula Pro, please call our Customer Service department at 1-888-396-6552 before returning the product so that we can offer you our best service customized to your particular situation.

### Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula pro that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at 1-888-396-6552 or write to:

Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.