



50H7GB2 Overview


By: Mallory Horn – Hisense Call
Center Supervisor March 2016




TV Specs

- LCD Panel
- 3840 x 2160 Ultra HD Resolution (4K x 2K)
- 16:9 aspect ratio
- Built in digital tuner
- 4 HDMI Inputs
- 3 USB Ports
- 1 AV Input (shared with Component)
- 1 LAN Port
- 1 Digital Audio Out Port
- 1 ANT/Cable Input
- 3.5 mm Headphone Jack
- 2 Year Warranty. Extra 2 Year Warranty if customer Registers online at www.hisense-usa.com.

Buttons and Ports on the H7B Series 4K UHD Smart TV

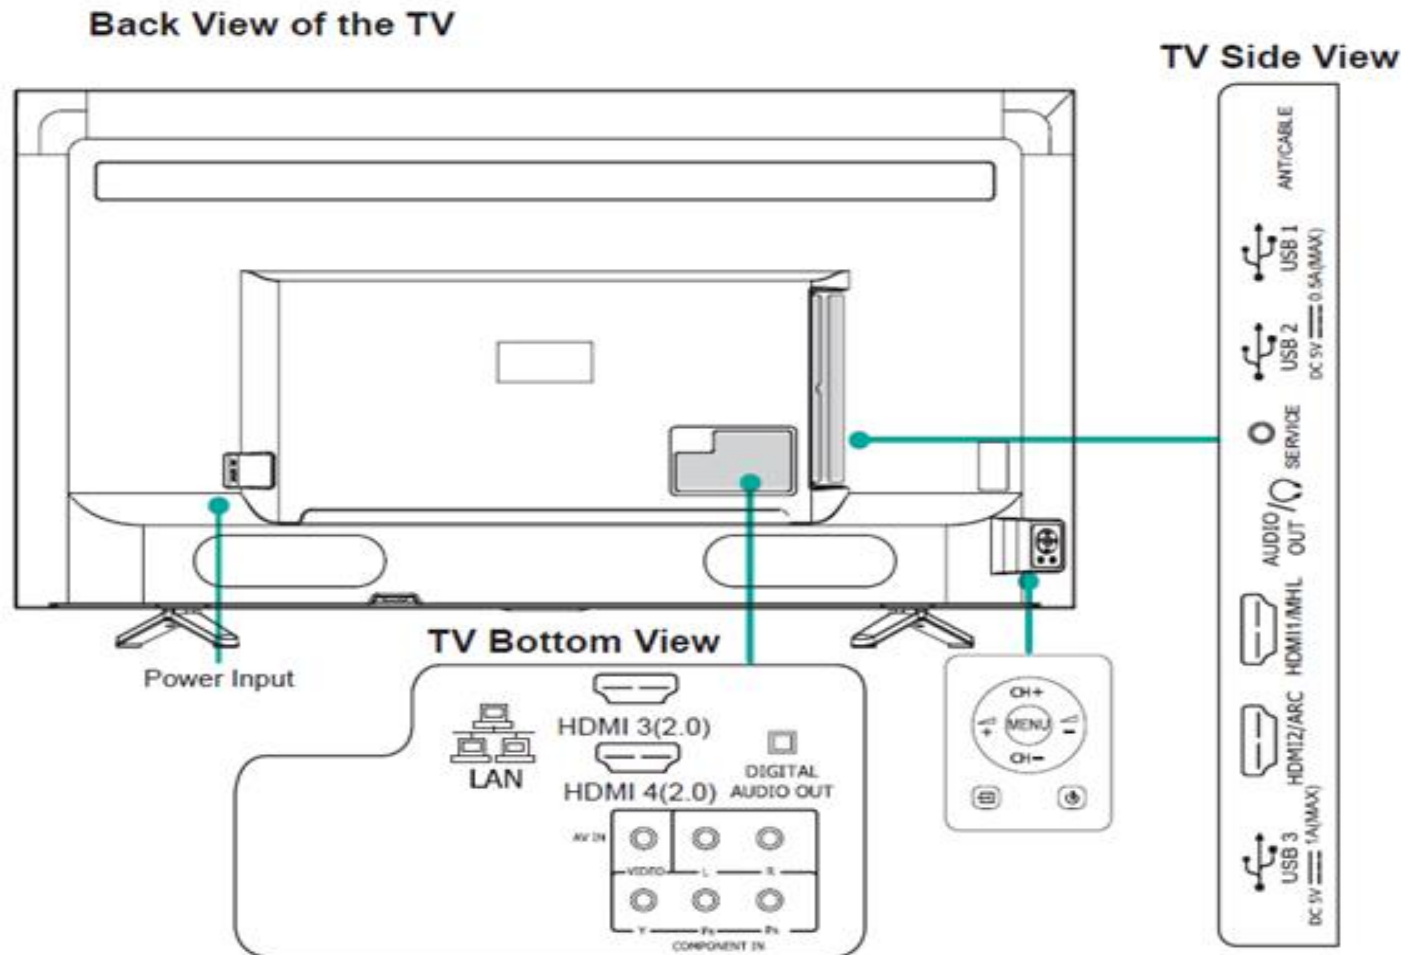

Buttons on your TV remote

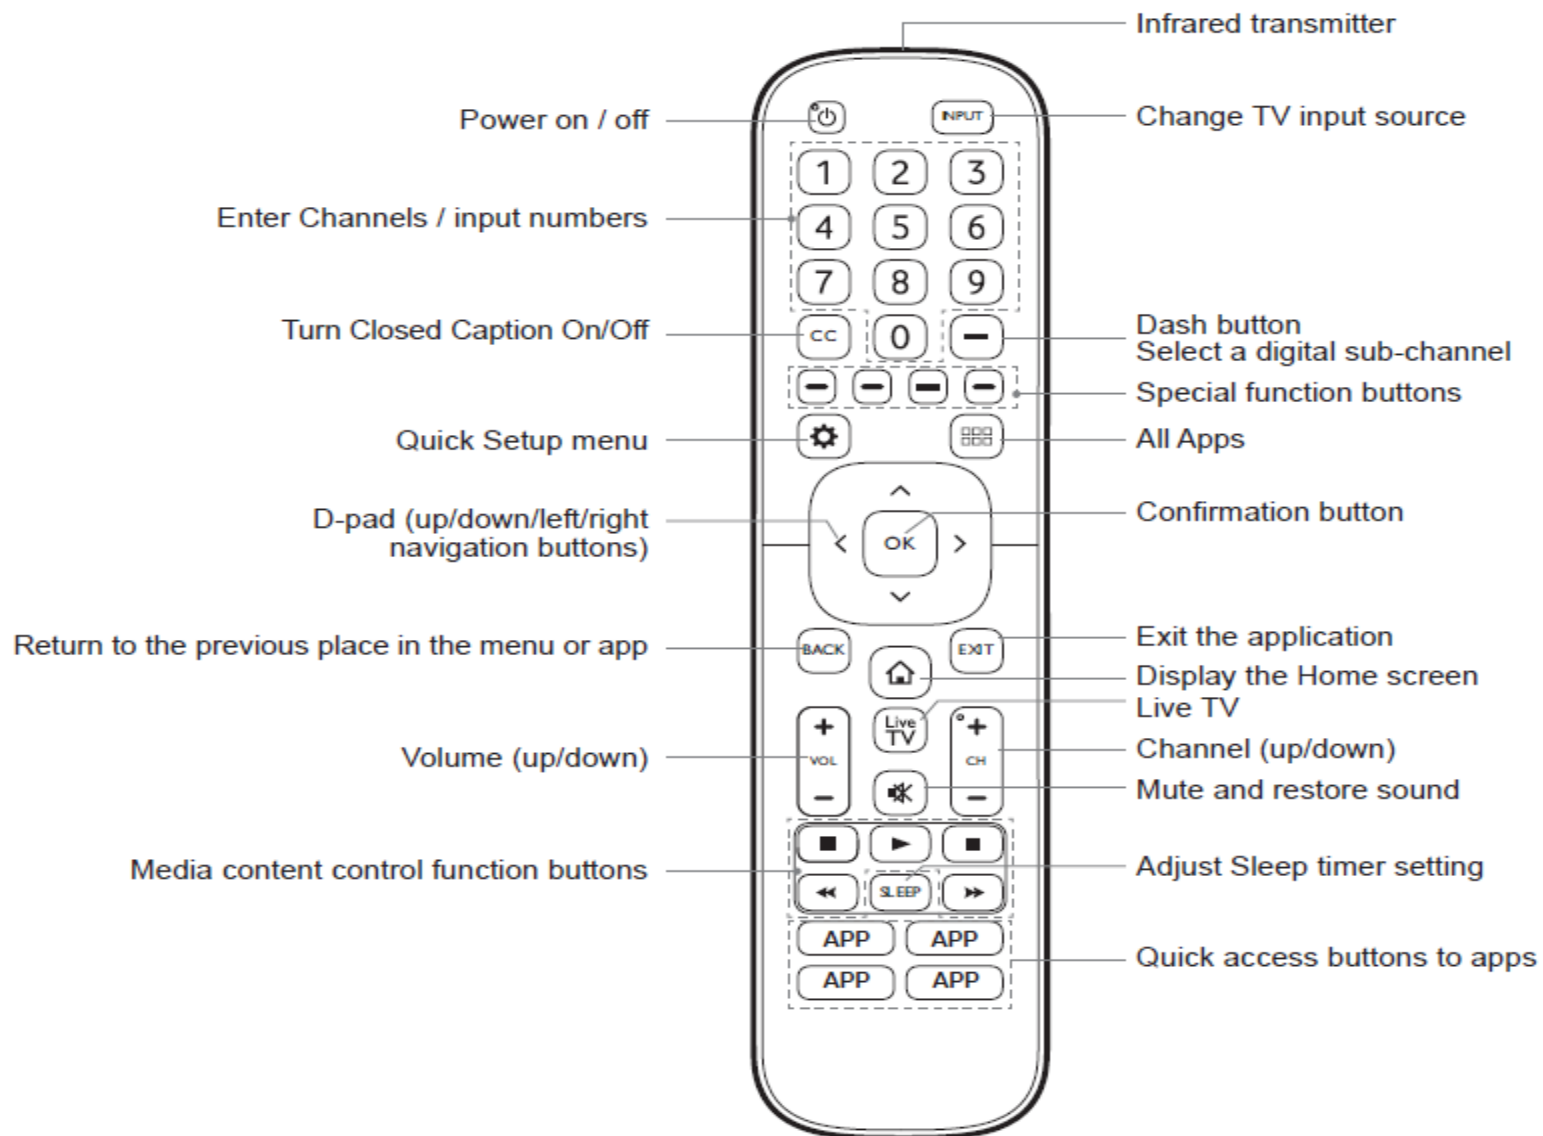

Available Apps

- Netflix
- Vudu
- Amazon Instant Video
- YouTube
- AccuWeather
- Pandora
- Opera TV Browser
- Opera TV Store



Opera TV Store

You **Tube**



Top Issues

- When doing the first set up of the TV it can be difficult to see the cursor of what place the TV is at.
 - When getting to Networking the default is ETHERNET. Press <OK> to toggle to wireless and arrow down to the appropriate WI-FI network.
- TV is not HDCP 2.2 compatible out of the box. The TV should update automatically. If it does not.
 - GO to Settings ->about TV -> check firmware upgrade.
 - The OTA update is not available on our web site.
 - https://www.dropbox.com/s/50duq1m927rkzo3/50H7GB%2650H7GB1_LTND50K3201GUWUS_G0129.zip?dl=0
 - Download the update to your computer.
 - Copy the designated software **upgrade_loader.pkg** into the root of a blank USB thumb drive.
 - Follow the instructions sheet (given in email).
 - Check that software version ends with G0129.
- This model only produces 4K at 30 HZ for connected devices like the Roku 4 and Amazon Fire. The internal apps it will do 4K at 60Hz.
- Any View Cast app does not work with Samsung or iPhones. We are working on a update to this in the near future.
- There is no HULU on this model. The only apps that are available to download are in the Opera App store.
- There is no way to manually add channels if they are not found by the channel scan.
- If the TV does not detect any WI-FI networks at all this can be a WI-FI board.
 - If connects to WI-FI but cannot get apps do connection test. If this passes then is a Main Board issue.
- To reduce lag put the TV in game mode and Turn off: Ultra Smooth Motion, Noise Reduction, and Adaptive Contrast.
- For issues of Ghosting/double images repeat the above process.

Top Issues

- When doing the first set up of the TV , no video audio and shows blank screen.
 - Unplug all connections of TV include power cable.
 - Check if TV have any physical damage from out side and screen.
 - Waiting for 1 minute and re-plug the power cable.
 - Press power key on remote control or power button on local key board.

Feel the MAGIC

of Hisense 4K LED TV



Thank You!