

User Guide

- ◆ Windows Hello Login
 1. How to setup
 2. How to login

- ◆ PQI KEY Application Software
 1. How to install PQI Key
 2. File encryption/ decryption
 1. Single file / Multiple files
 2. Secured folder
 3. Website / Social media Login

Important Notice:

- ◆ Please setup and register your fingerprint in the system before use!
- ◆ The fingerprint encrypted files may be lost forever if the device malfunctions or fails.
It is highly recommended to set up a backup password as an alternative access method.


Device Setup



Secret Garden

Device Setup

Installing device...



Please wait while Setup installs necessary files on your system. This may take several minutes.

Close

The image shows a Windows "Device Setup" dialog box. It has a title bar with a close button (X). The main content area contains the text "Installing device..." in blue, followed by a small icon of a device with a green light. Below the icon is a progress bar that is approximately 10% full. To the right of the progress bar is the text "Please wait while Setup installs necessary files on your system. This may take several minutes." At the bottom right of the dialog box is a "Close" button.

Insert My Lockey to USB port. → Auto run/ Device setup




How to Setup(Win10)-To establish, scan and store your fingerprints.

✦ Settings


✦ Accounts

✦ Sign-in options → Fingerprint Set up

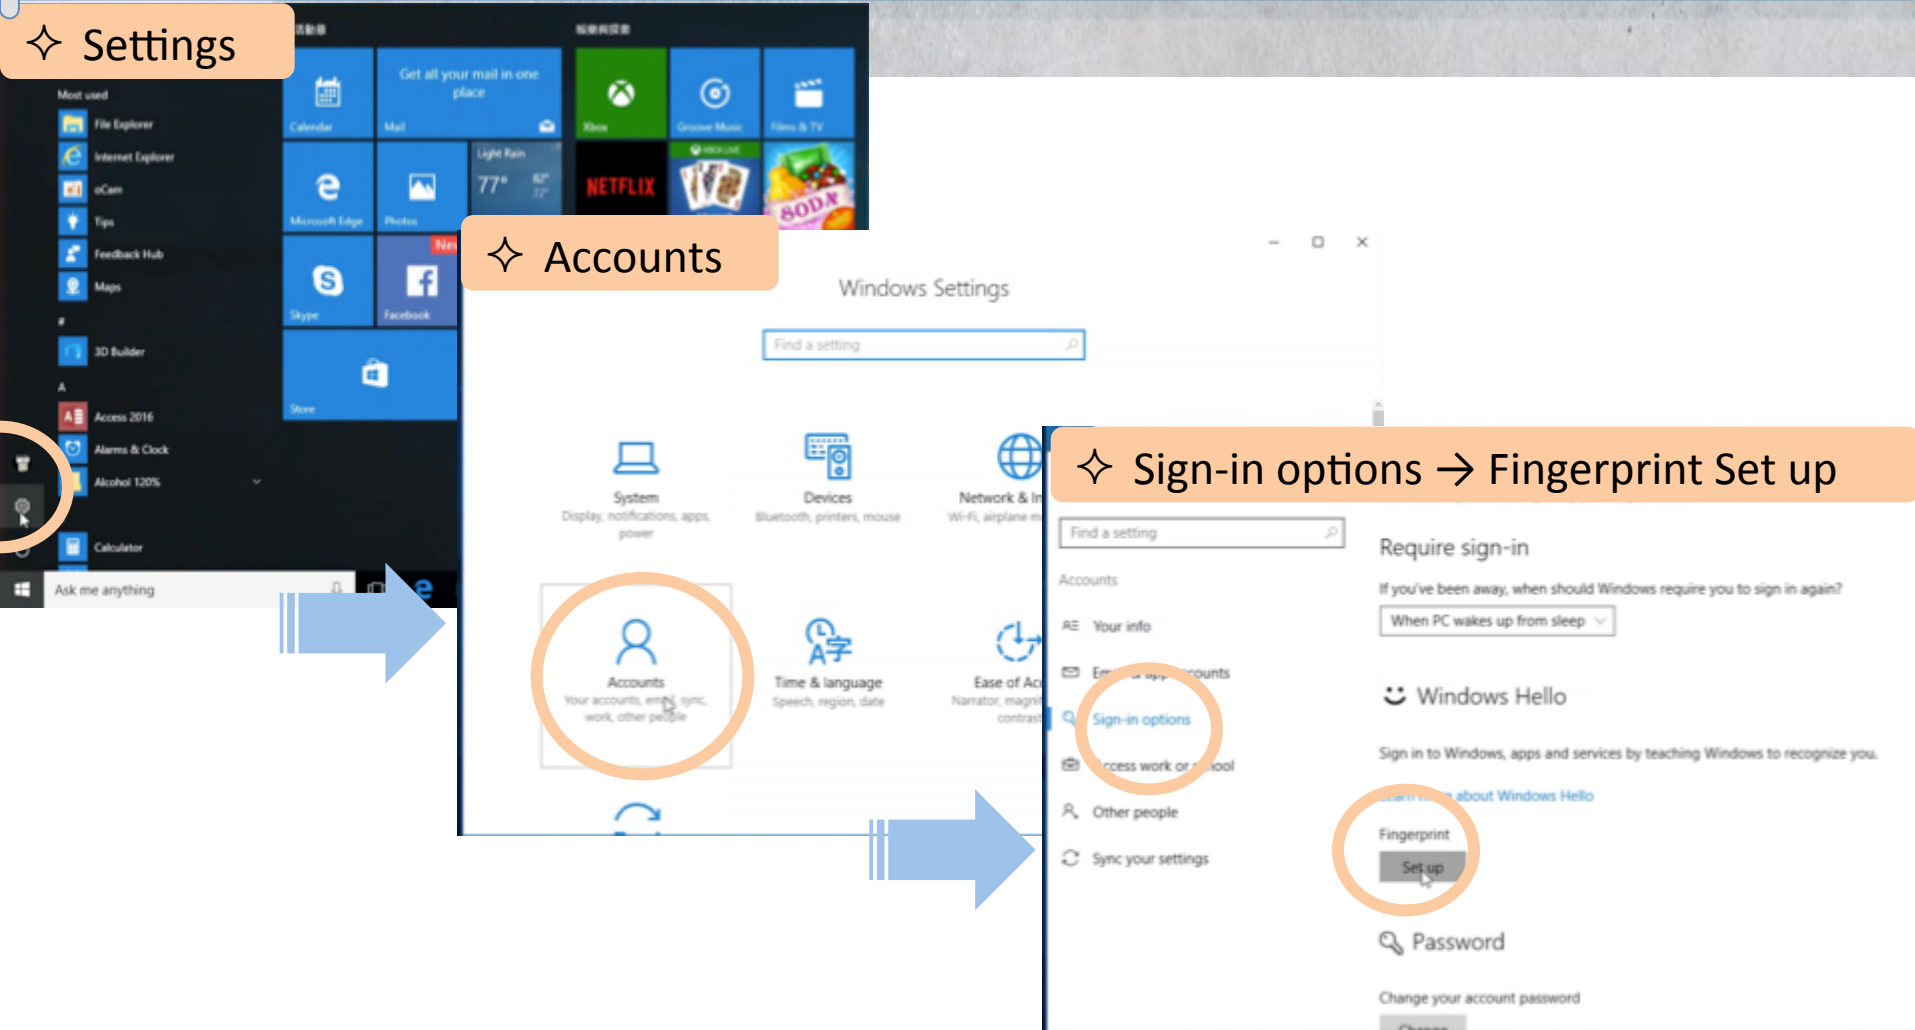


How to Setup(Win10)-To establish, scan and store your fingerprints.



✧ Get started

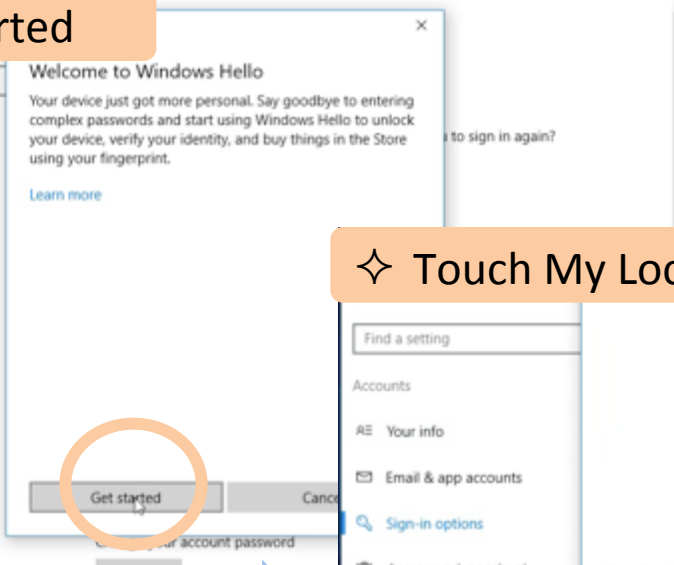

✧ Touch My Lockey sensor

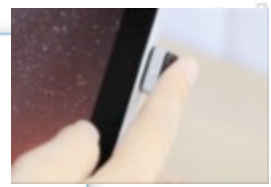


✧ Keep resting your finger until setup is complete.

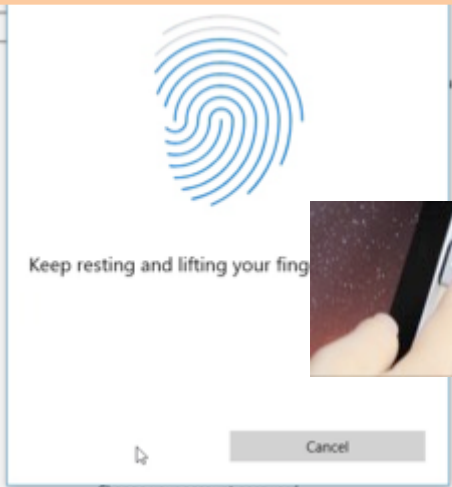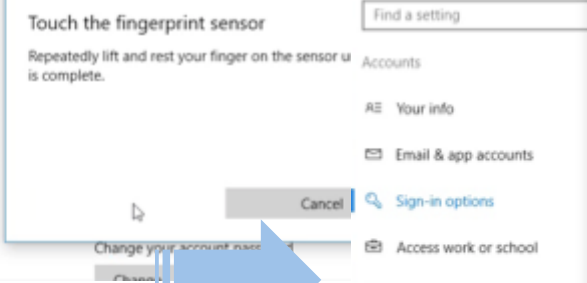


Setup a PIN Code

✦ Setup PIN



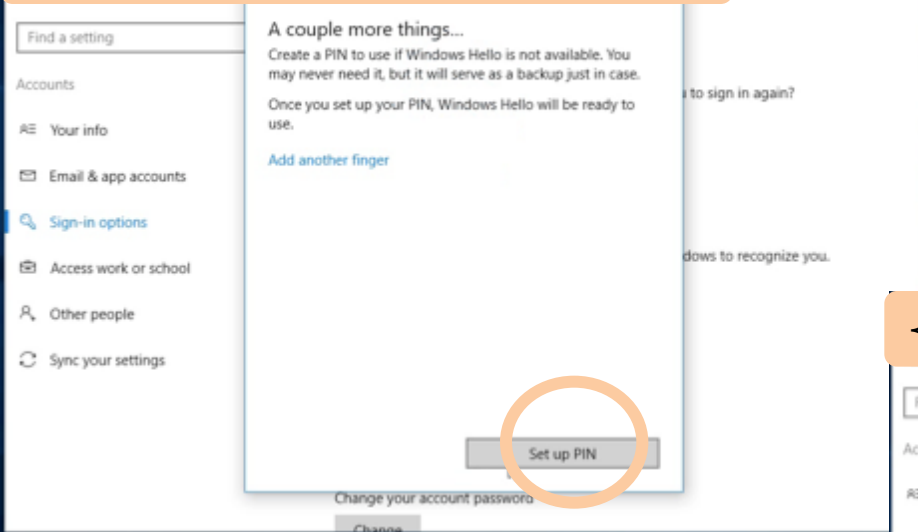


✦ Complete, additional protection.

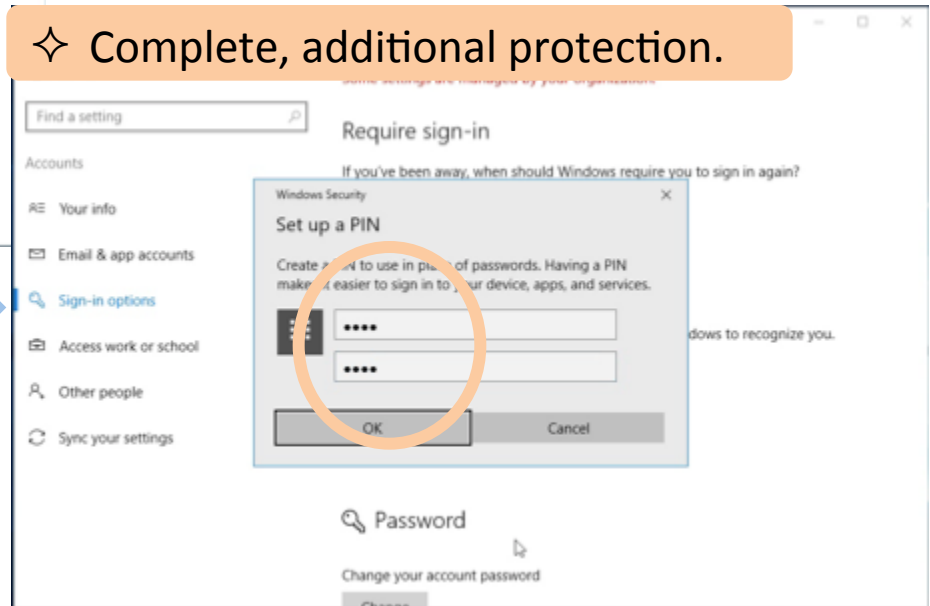


How to Setup(Win7/ 8.1)-To establish, scan and store your fingerprints.

- ✧ Download PQI Key from www.pqigroup.com
- ✧ Click on PQI Key icon to install.
- ✧ Click on PQI Key icon, select “Fingerprint Maintenance” icon.

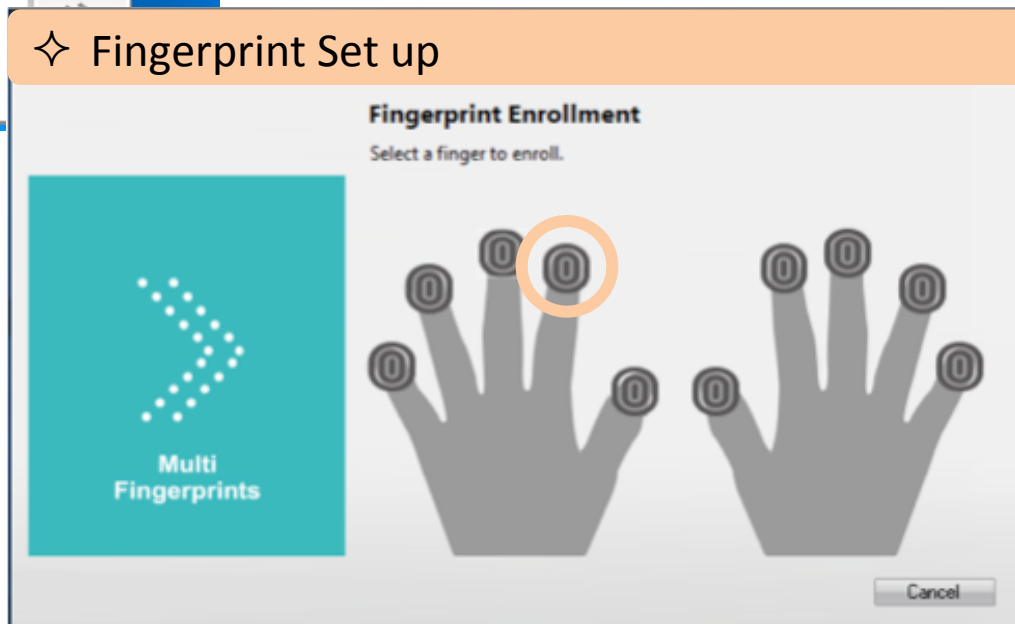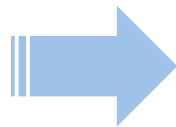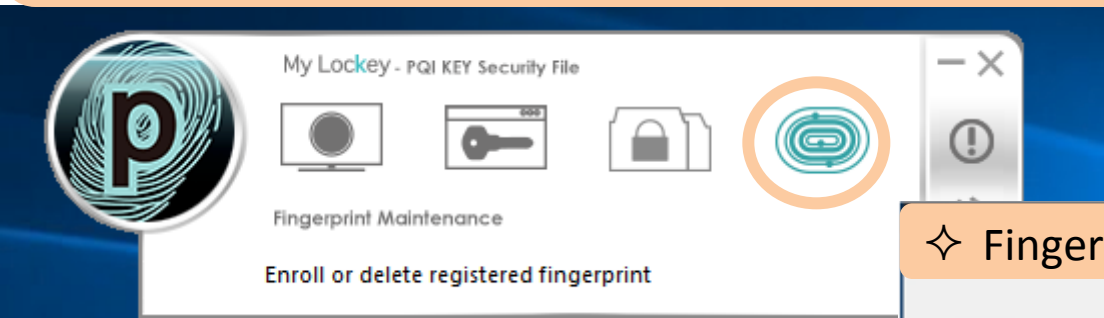


How to Setup(Win7/ 8.1)-To establish, scan and store your fingerprints.


✧ Touch My Lockey sensor

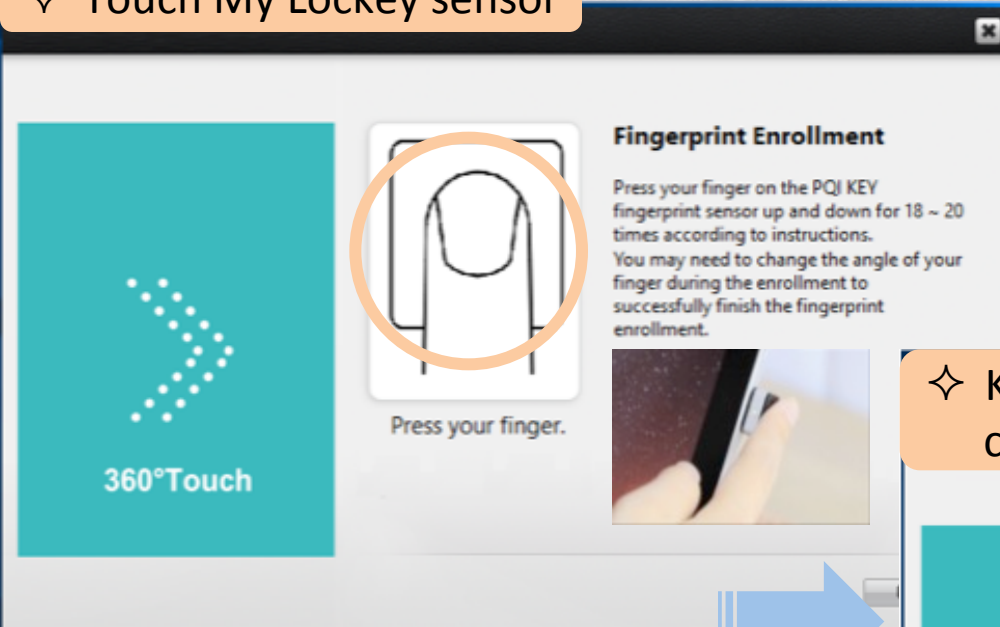

✧ Keep resting your finger until setup is complete.

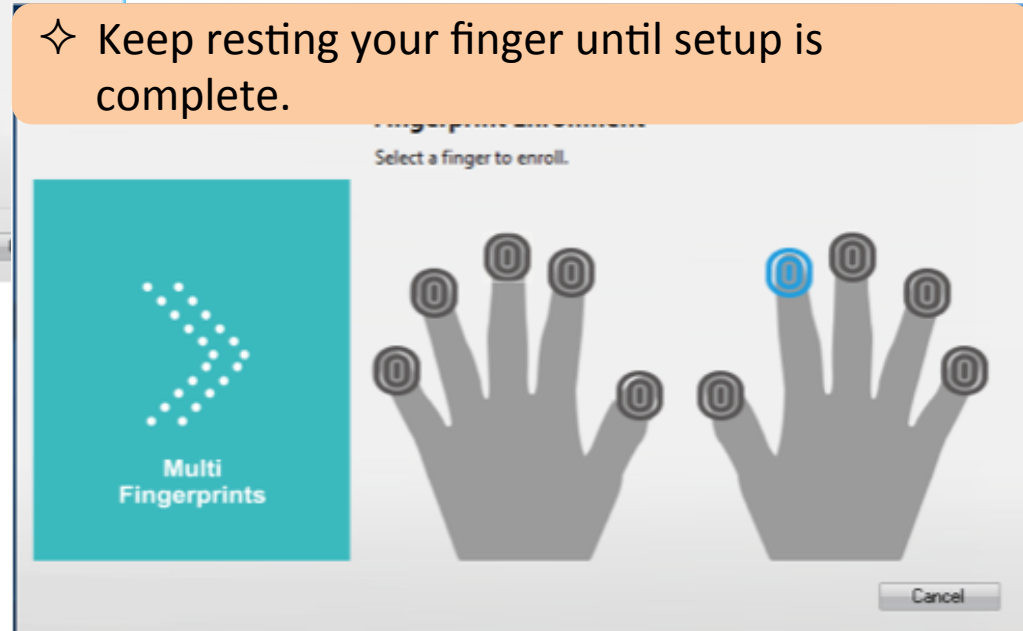

How to login-Use Your fingerprint to unlock your device.

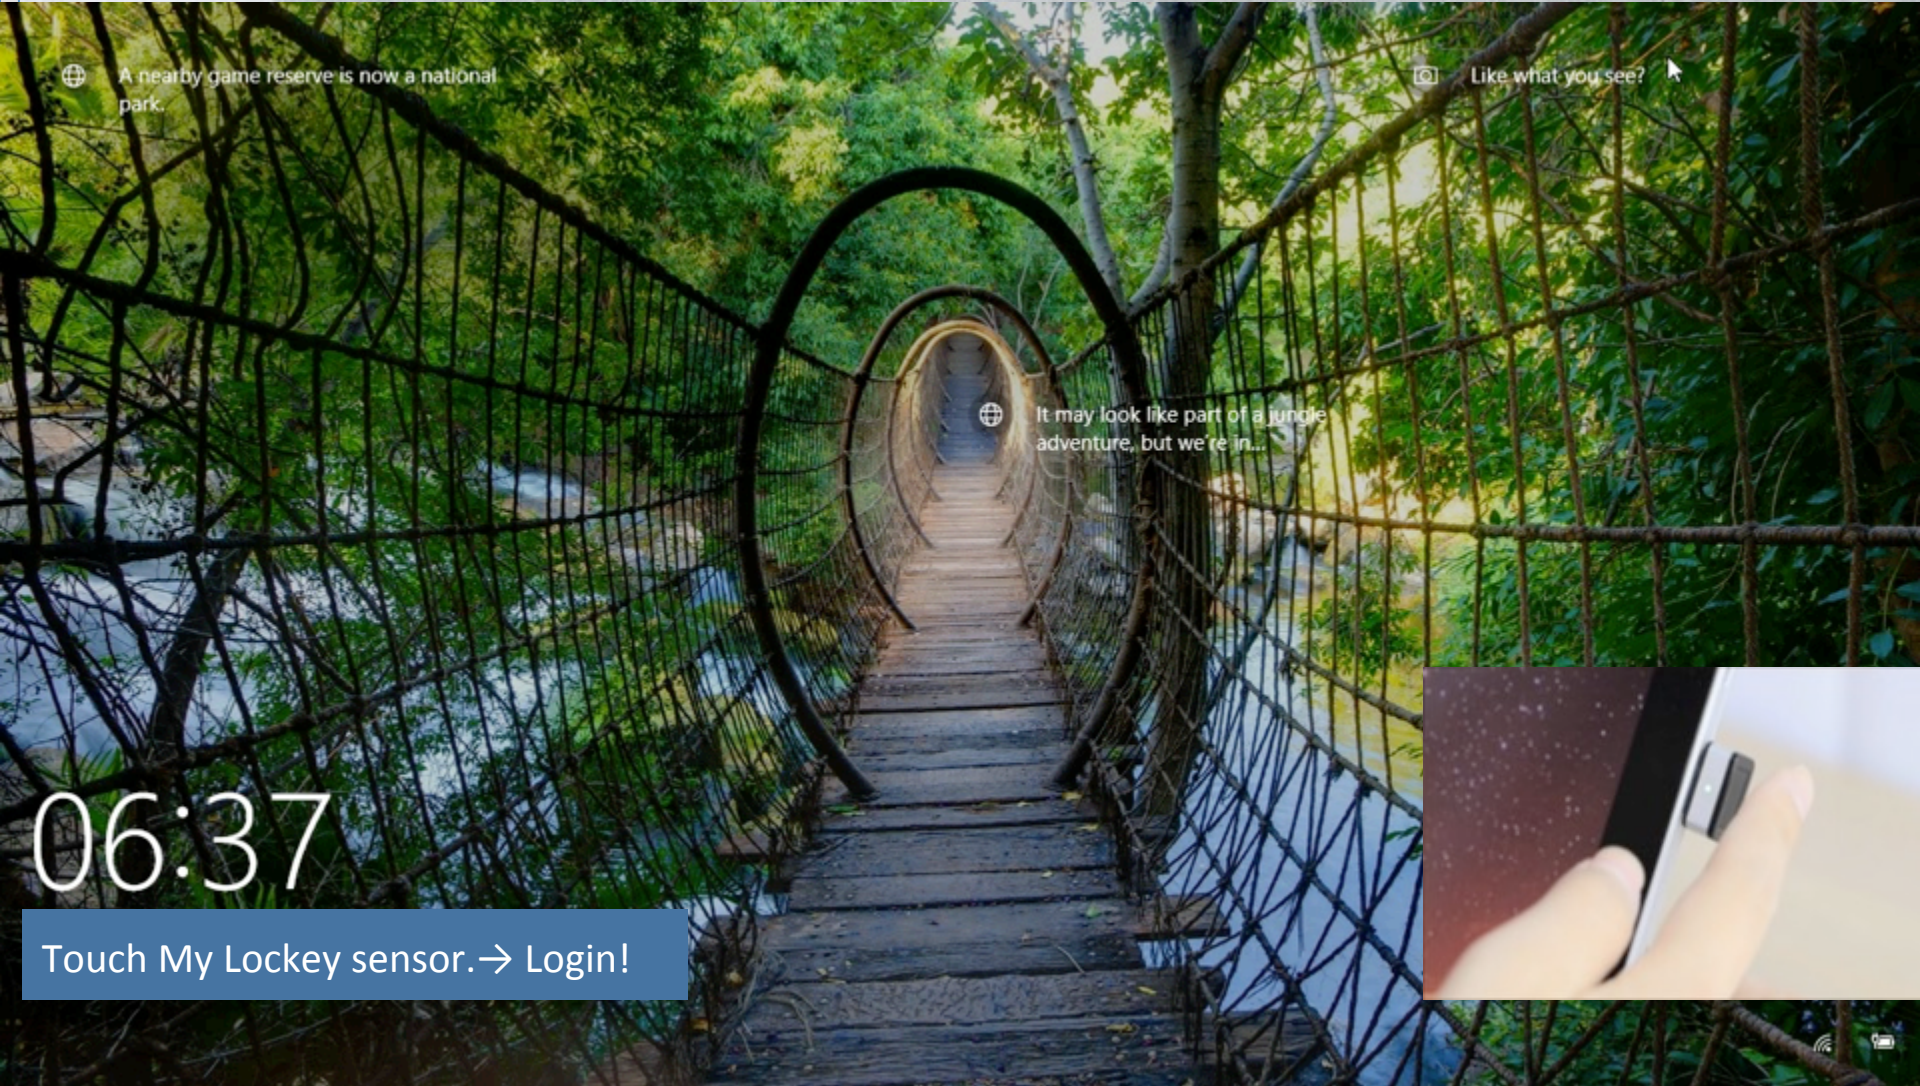


🌐 A nearby game reserve is now a national park.

📷 Like what you see? 🖱️

🌐 It may look like part of a jungle adventure, but we're in...

06:37

Touch My Lockey sensor. → Login!

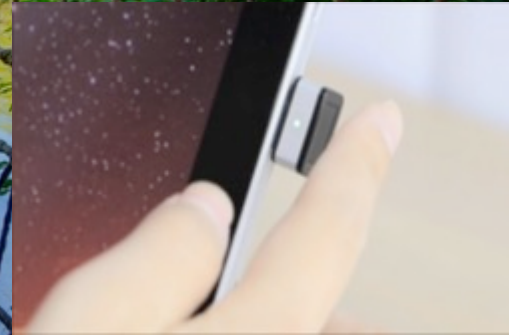


How to install PQI Key


- ✧ Download PQI Key from www.pqigroup.com
- ✧ Click on PQI Key icon to install.



- ✧ Agree → Submit

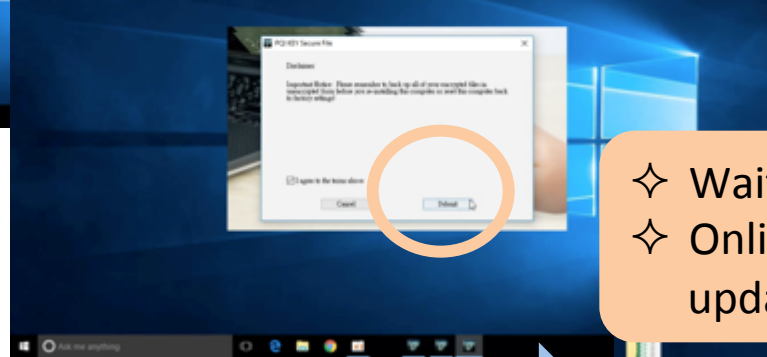


- ✧ Wait for the process to complete.
- ✧ Online Update: Will check for update and inform periodically.

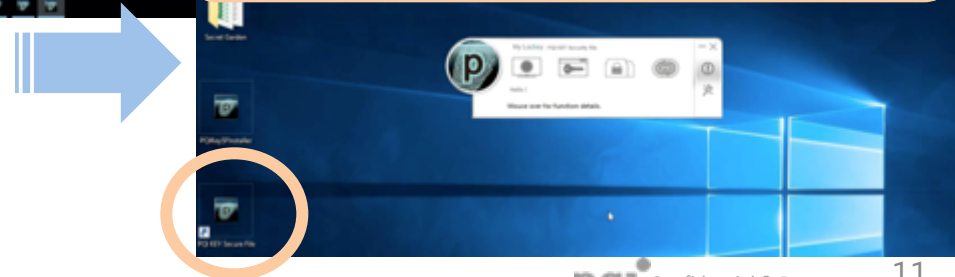


File Encryption/ Decryption –Single File Encryption

✧ Right-Click and choose “Encryption”

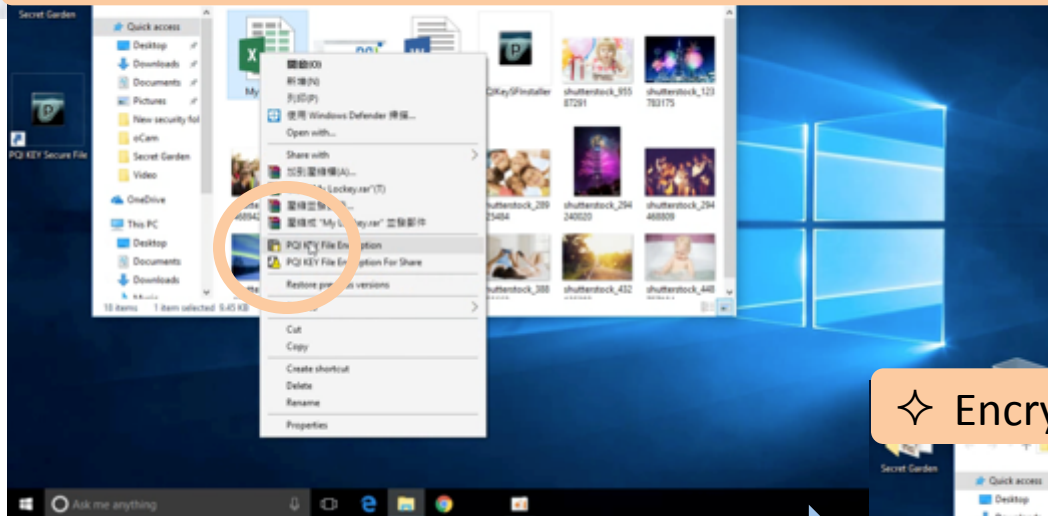


✧ Encryption complete.

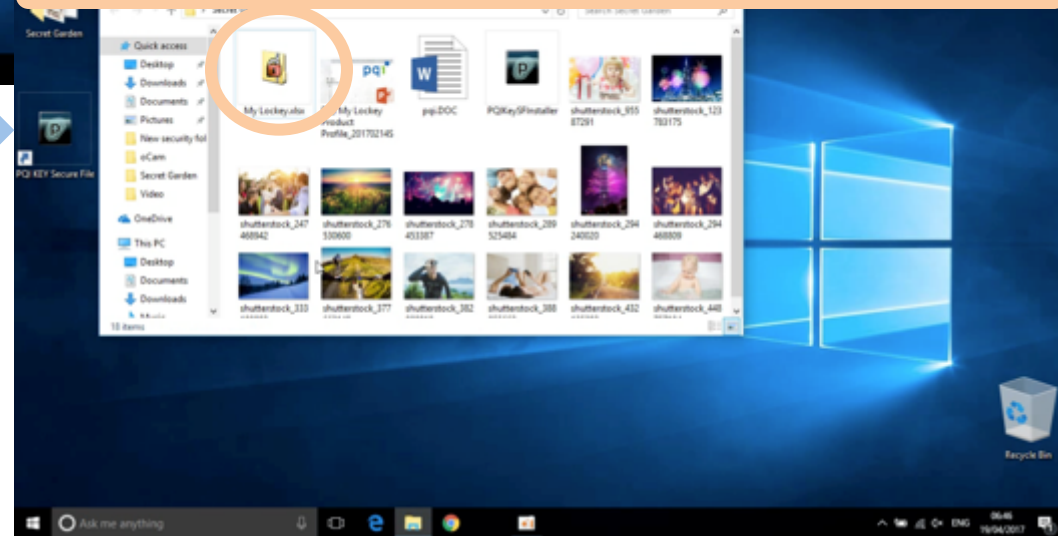


File Encryption/ Decryption –Single File Decryption


✧ Right-Click and choose “Decryption”

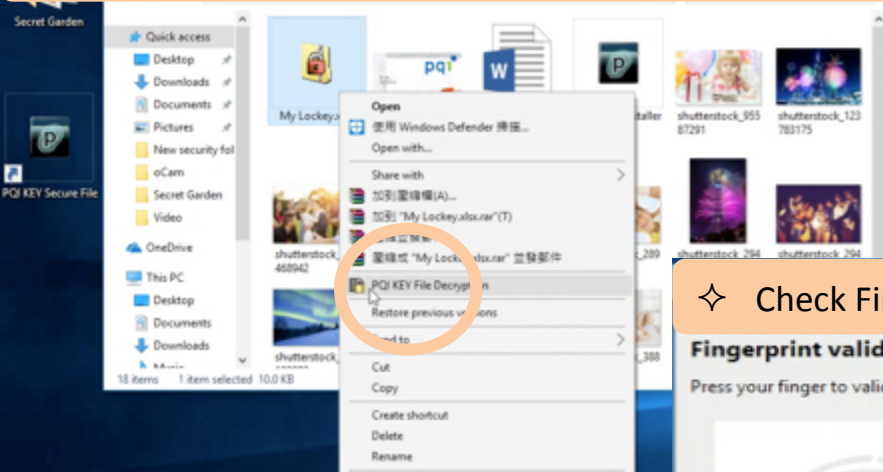

✧ Check Fingerprint ID

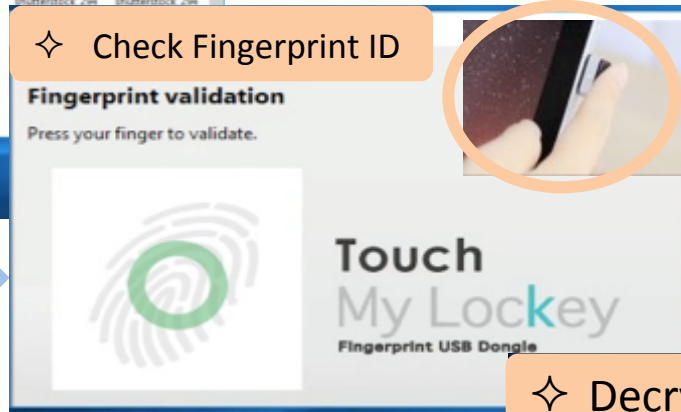


✧ Decryption complete.

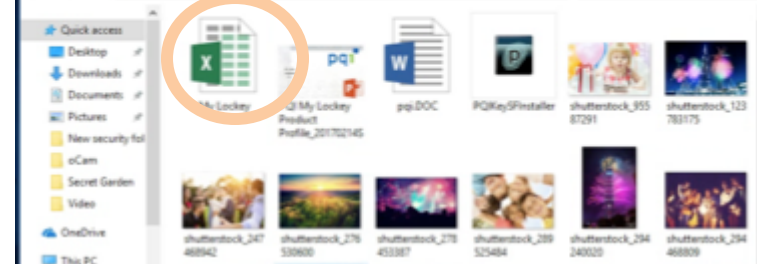


File Encryption/ Decryption –Multiple Files Encryption

✧ Right-Click and choose “Encryption”

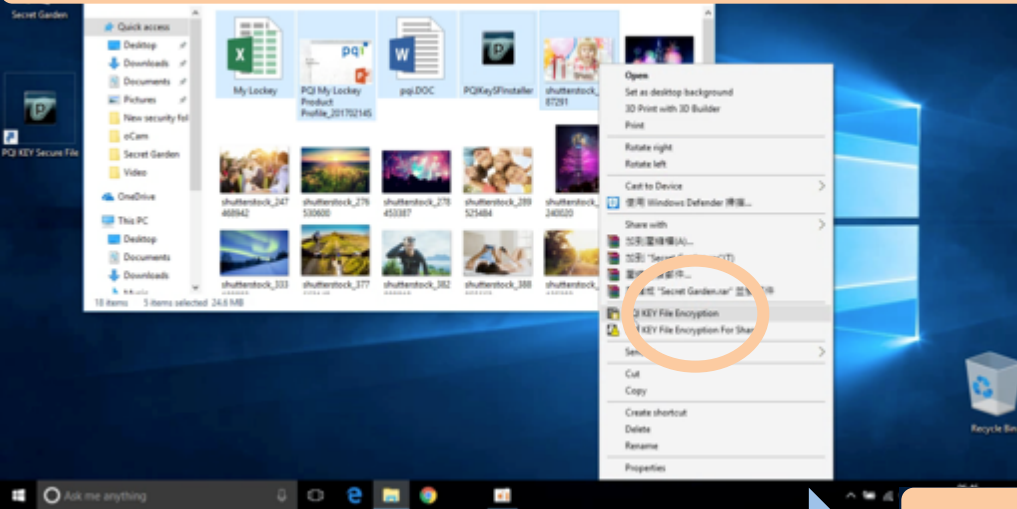


✧ Encryption complete.

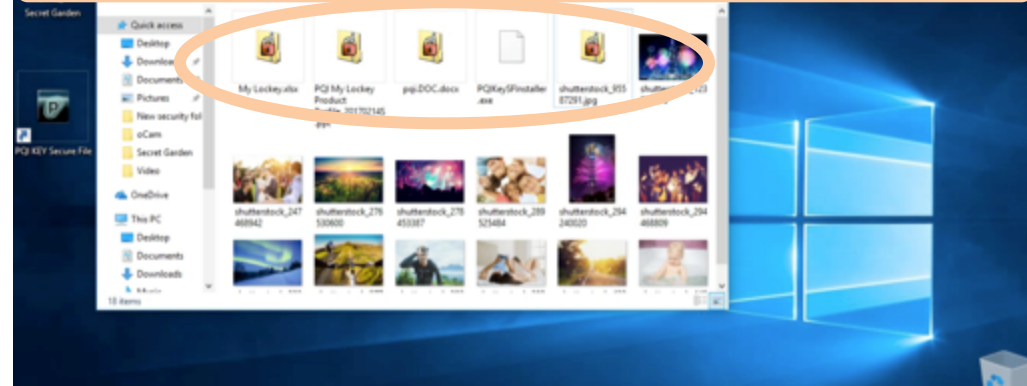


File Encryption/ Decryption –Multiple Files Decryption


✦ Right-Click and choose “Decryption”

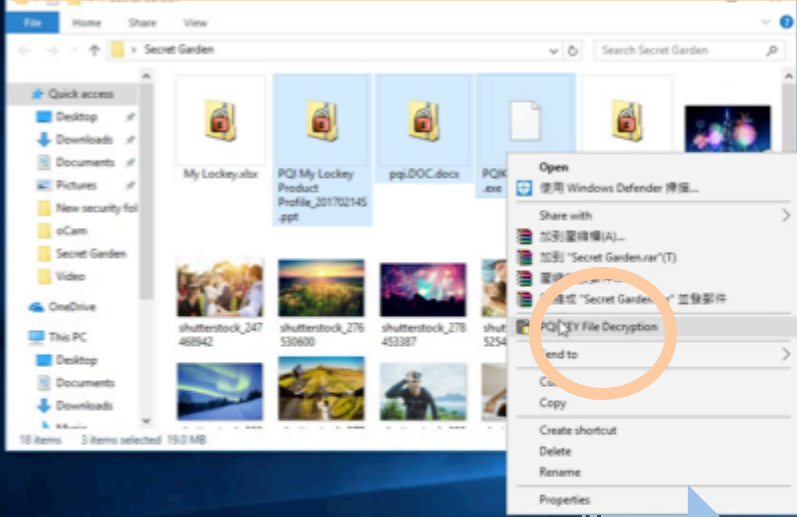

✦ Check Fingerprint ID

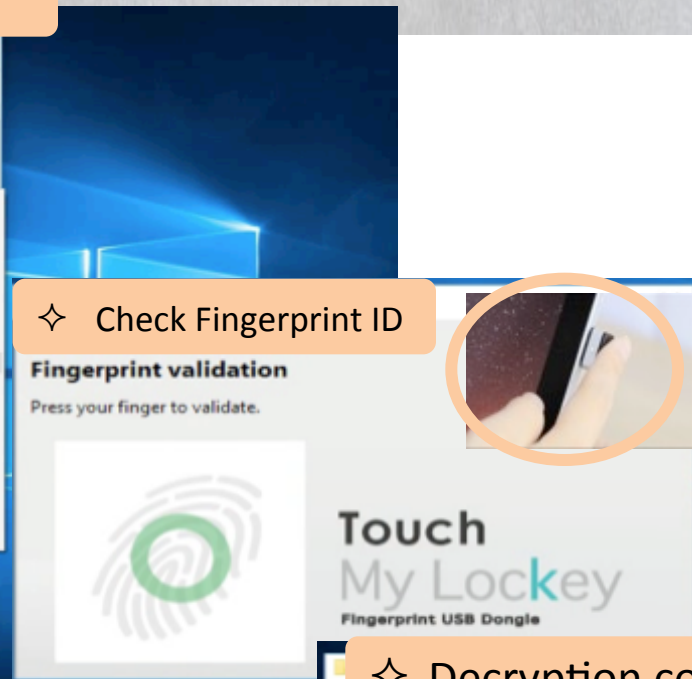


✦ Decryption complete.

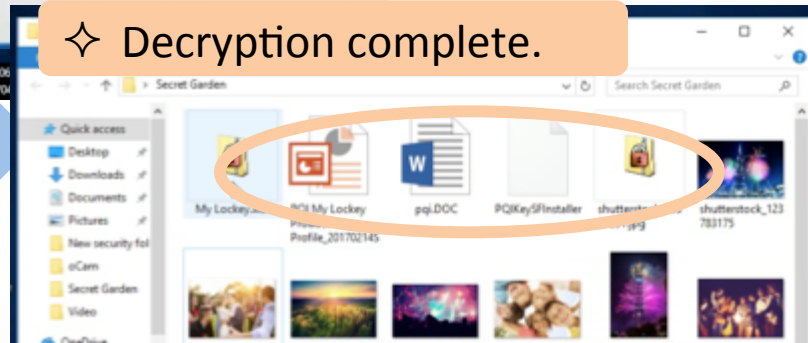


Folder Encryption

✧ Right-Click and choose “Encryption”

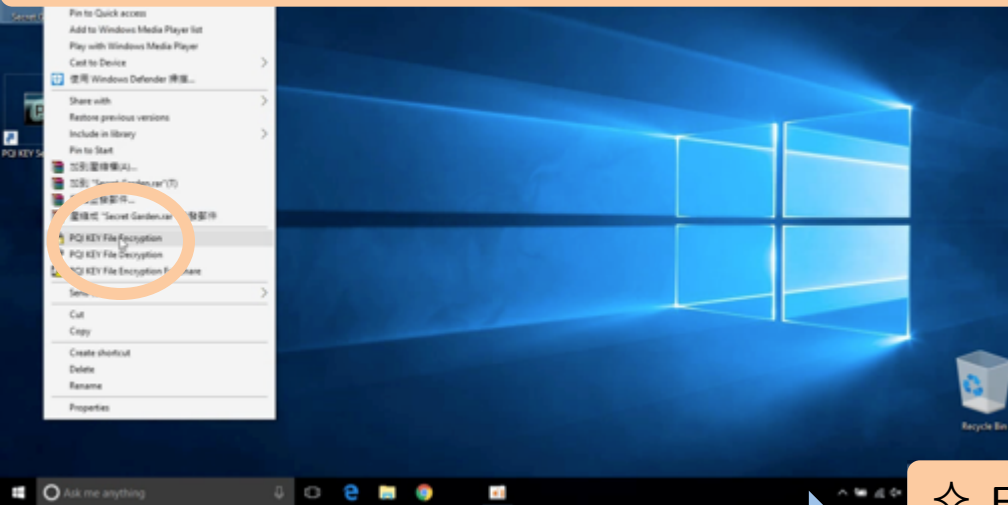


✧ Encryption complete.

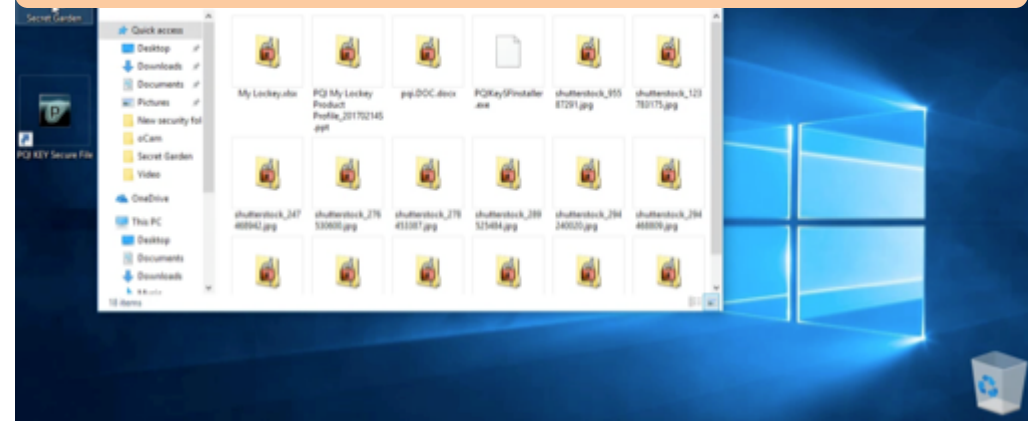


Folder Decryption

❖ Right-Click and choose “Decryption”

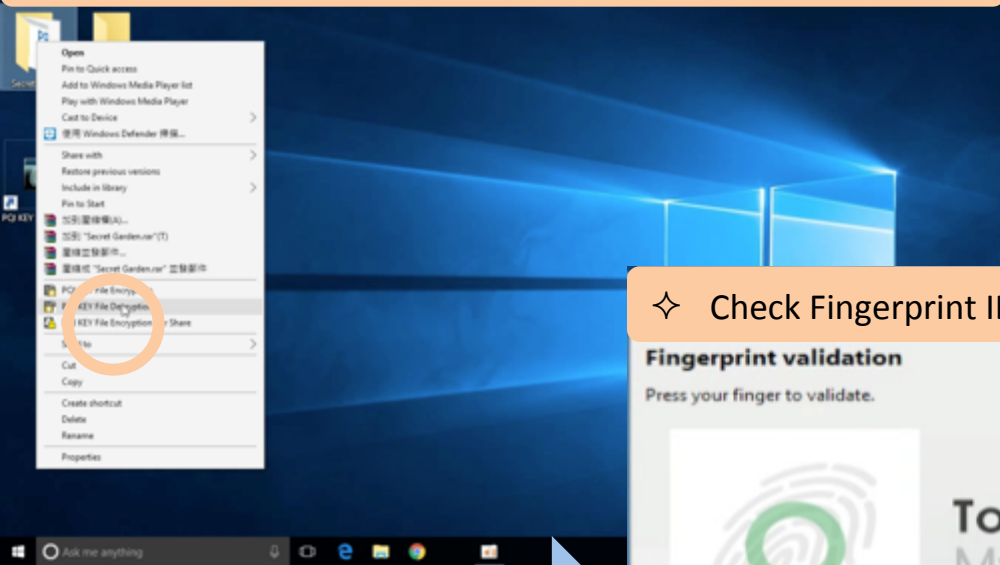

❖ Check Fingerprint ID

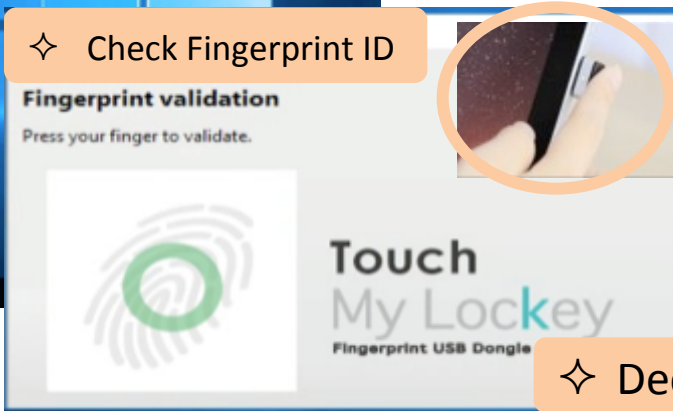


❖ Decryption complete.




Secured folder-Setting

✧ Click on PQI Key icon, select “Secured folder” icon.

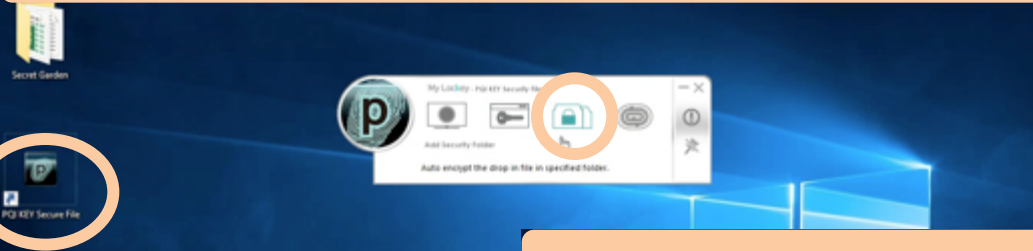

✧ Type-in a Path. → Key in folder name.

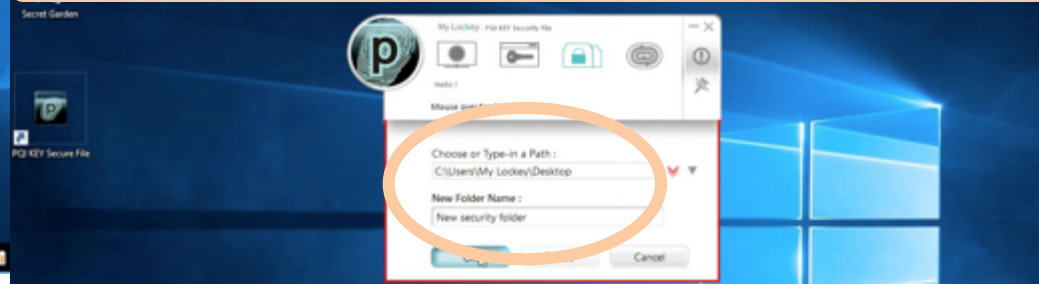


✧ Complete.




Secured folder-Encryption

✦ Drag and drop file(s) into the folder.

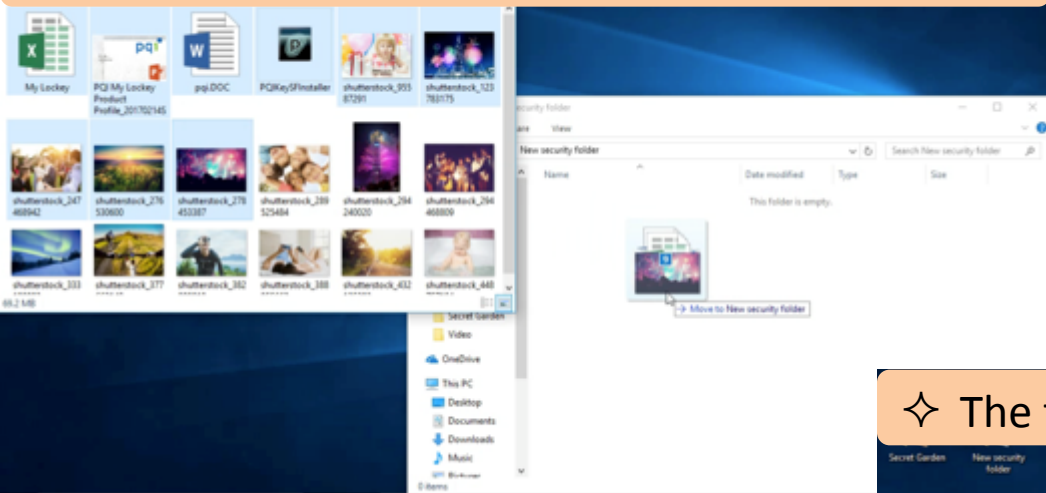


✦ The file(s) will be automatically encrypted.

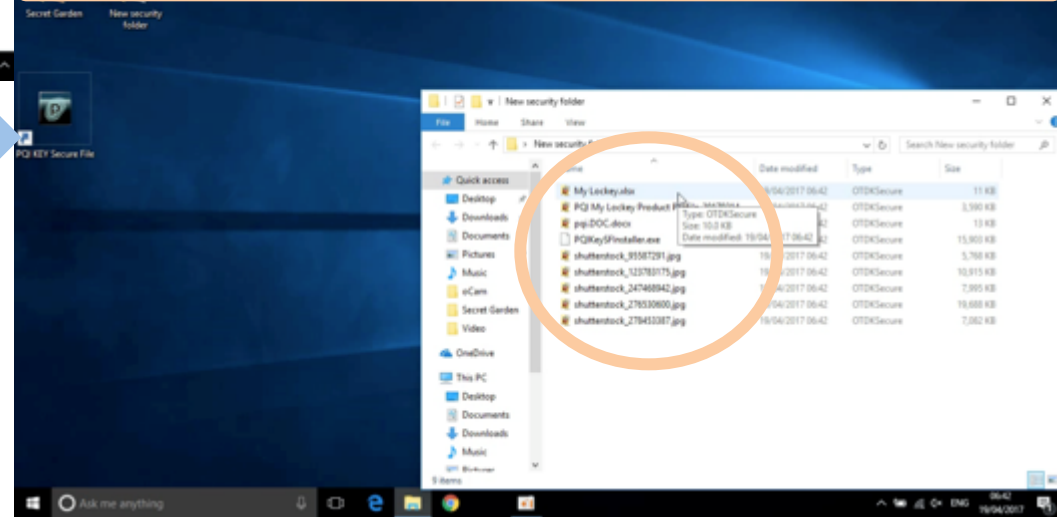

Secured Folder- Decryption

✧ Click twice.

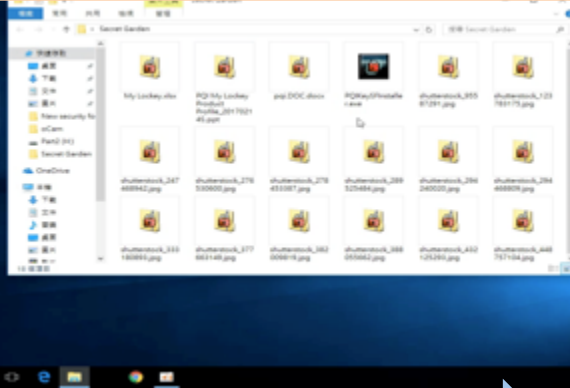


✧ Check Fingerprint ID

Fingerprint validation

Press your finger to validate.



Touch
My Lockey
Fingerprint USB Dongle

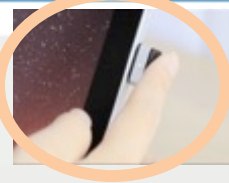

✧ Decryption complete.

✧ All file formats are supported.




Excel

PowerPoint

Website / Social media Login- Setting

✦ Click on PQI Key icon, select “Web login” icon.

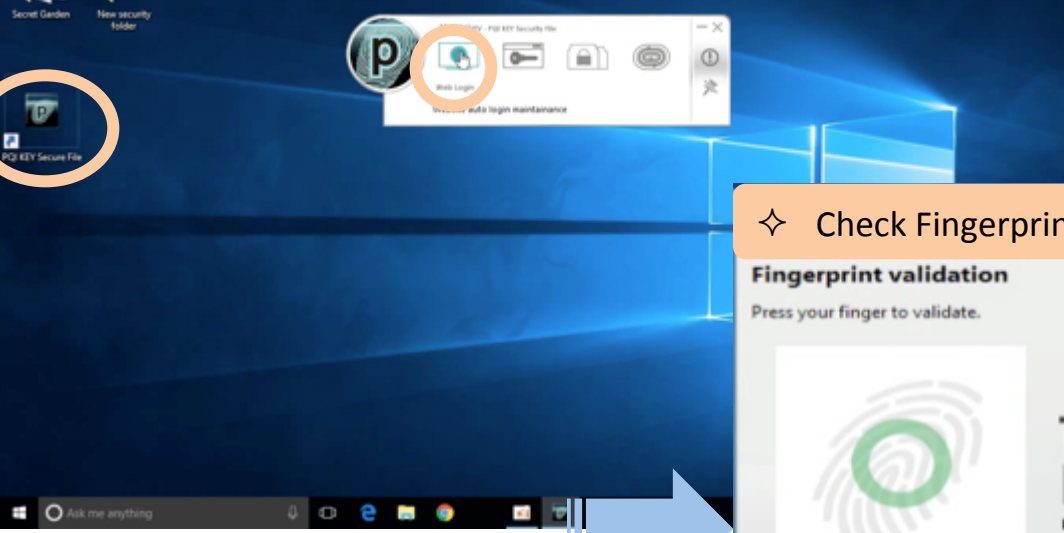

✦ Check Fingerprint ID

Fingerprint validation
Press your finger to validate.



Touch My Lockey
Fingerprint USB Dongle



✦ Click “Add New”

Message account





To add a new login account:


1. Go to URL for desired account.
2. Enter the required information.
3. Click "Login".
4. Click OK when saving account enquiry dialog pop-up.

Website / Social media Login- Setting

✧ Key-in account and password. → Login → Save them.

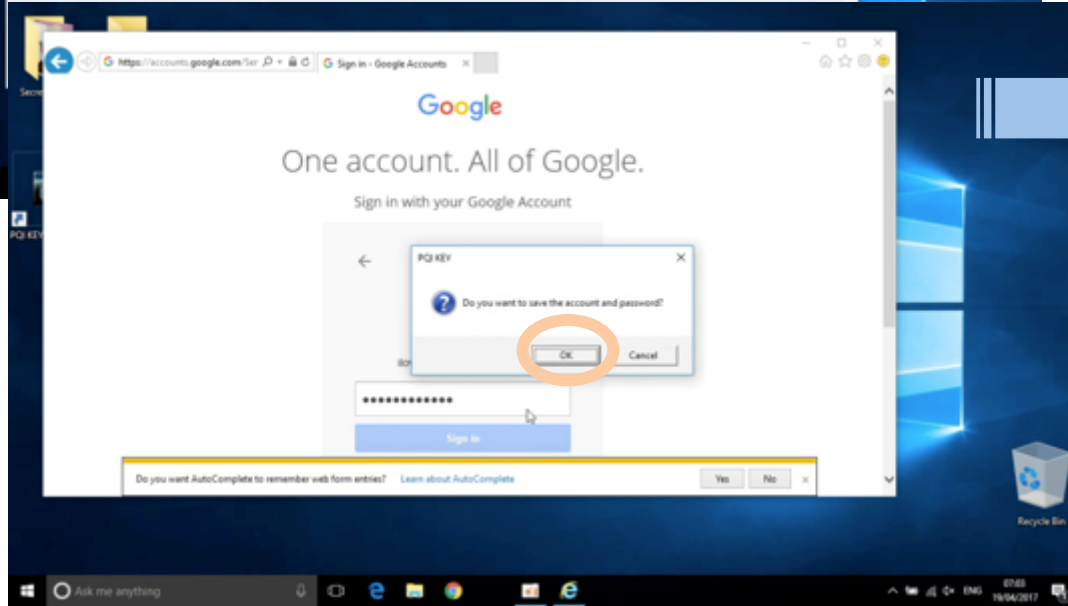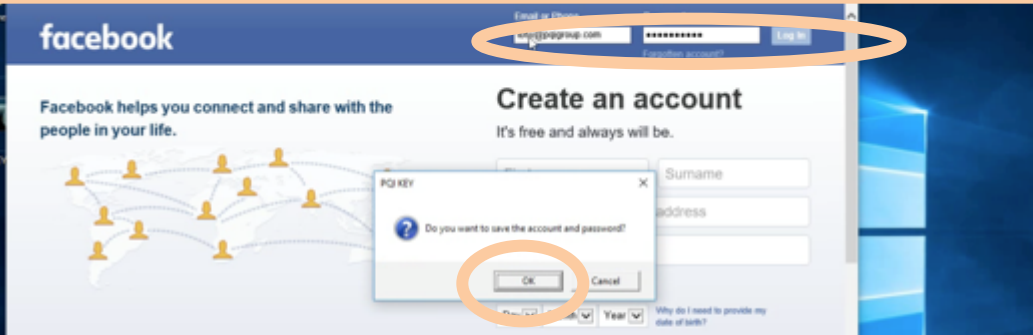

✧ Complete and list will be showed on the table.

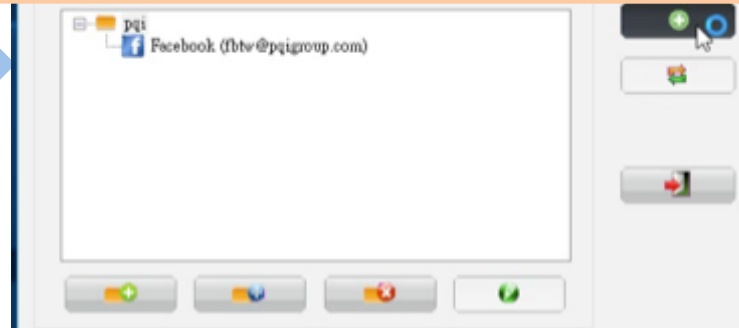


To add a new login account:


1. Go to URL for desired account.
2. Enter the required information.
3. Click "Login".
4. Click OK when saving account enquiry dialog pop-up.

Website / Social media Login- Login


✧ Click on PQI Key icon, select “Launch” icon.

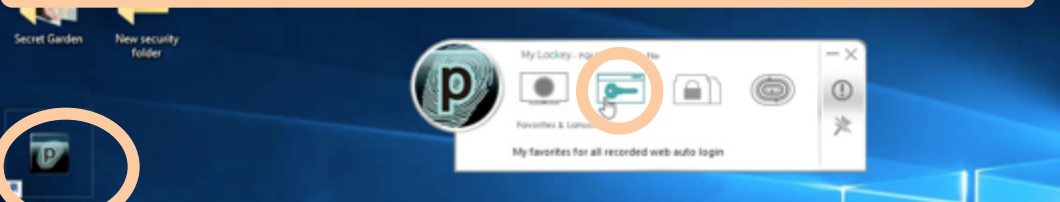

✧ Select the account for auto login

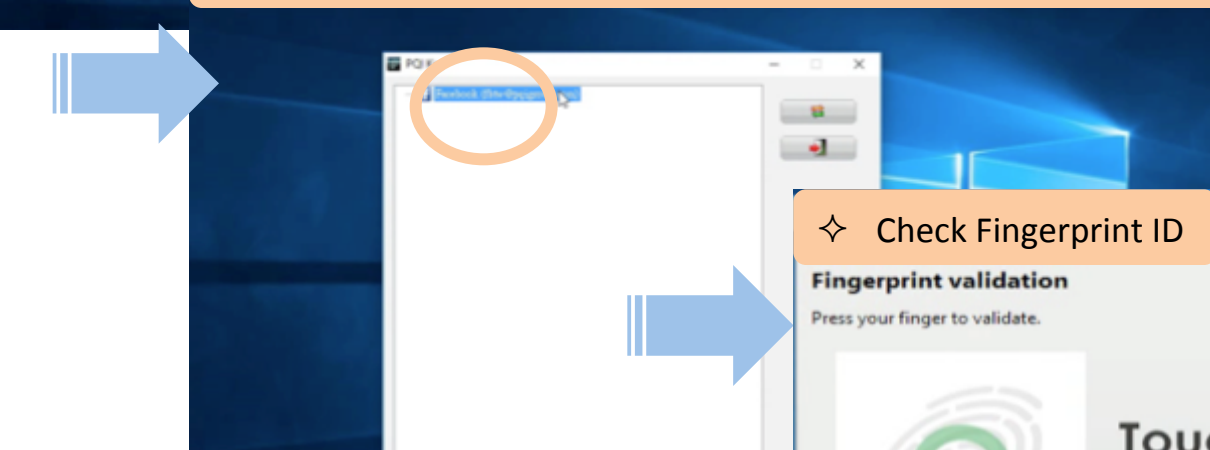

✧ Check Fingerprint ID

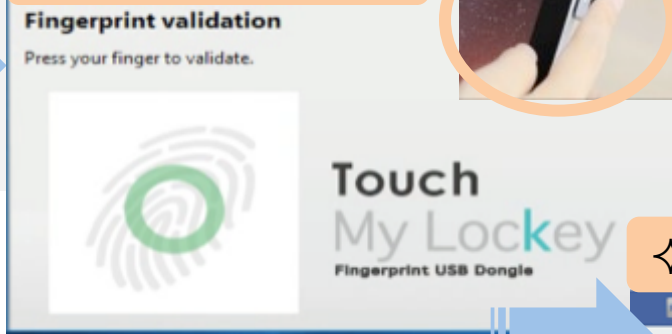

✧ Complete.



Thank Ü

www.pqigroup.com



pqi