

TYPE-C SMARTPHONE MICROPHONE



VS09 **TC**

User Manual

Foreword

Thanks for purchasing Comica CVM-VS09 TC Cardioid Smartphone Microphone for Phone with TYPE-C Interface.

This product can be equipped with TYPE-C interface smartphone for audio recording. It is designed with functions of supporting audio monitoring, microphone muting mode, work indicator light, 180 degree rotation and etc, which can bring you better experience and sound quality effect without any concern! Please carefully read this instruction manual before use. The product has been precisely calibrated at the factory, and please do not assemble and disassemble the parts by yourself, or the warranty will be invalid.

Notice

- ⚠ For the Android system smartphone, the Mic works well in Audio Mode, but Video Mode will happen with incompatibility trouble while working with some smartphone; (Then we suggest you to try the 3rd party's video APP)
- ⚠ Due to the diversity of Android systems, some smartphone will be incompatible. For compatibility, please refer to the sales website or official website;
- ⚠ In the course of use, please set the smartphone to fly mode to avoid any interference;
- ⚠ Please stay away from heat source or interference source when using;
- ⚠ Please avoid falling, collision or impact when using;
- ⚠ Please do not use in rain humidity, or there will be a risk of short circuit;

Main Features

- . Designed for Phone with TYPE-C Interface
- . Cardioid Directional
- . Super-shield and Low Noise Mic
- . 180 Degree Rotation
- . LED Working Indicator
- . Audio Monitoring



For Type-C
Phone



Cardioid
Directional



180 Degree
Rotation



Audio Monitor



Super
Anti-Interference



Working Indicator

Package List



Body of Microphone



Mic Windscreen



Hand Bag



User Manual





Warranty Card

Components


Microphone

- ① Mic Capsule
- ② Work Indicator Light
- ③ Muting Button
- ④ 3.5mm Earphone Monitor Connector
- ⑤ Rubber Smartphone Clamp
- ⑥ TYPE-C Interface

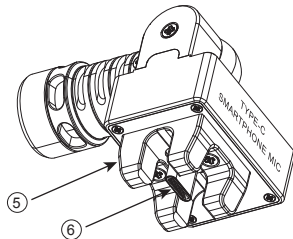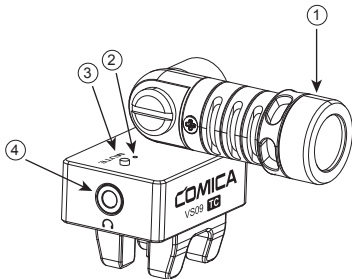


Installation and Use


1. Install the windscreen to microphone

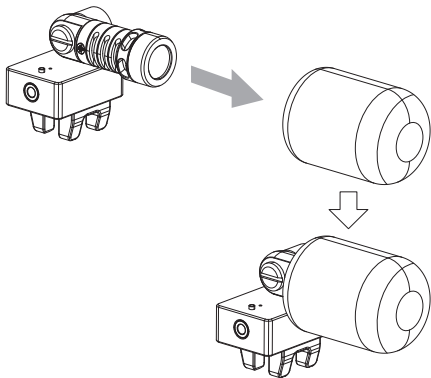


2. Install the microphone onto the phone with TYPE-C interface, When the green light is always on or flickering, it indicates that it is working

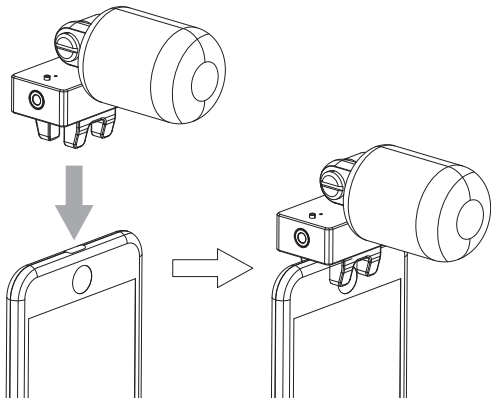


3. Rotate the microphone to match different usage scenarios and angles

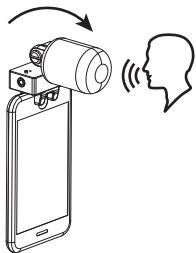

Self-recording Mode

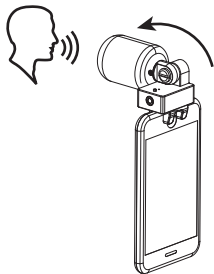


Recording Mode

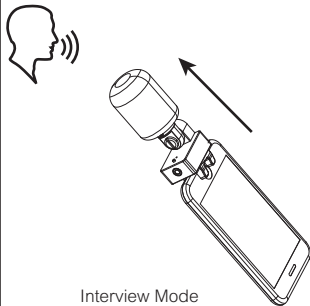

Interview Mode

4. Put the earphone into the Monitor Connector, then you can real-time monitor or playback directly for audio monitor according to different phones

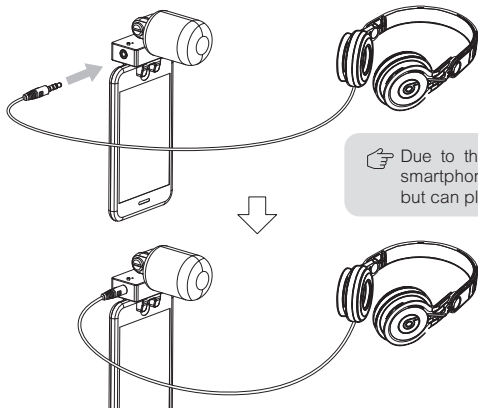


👉 Due to the diversity of Android systems, some smartphone do not support real-time monitoring but can playback for audio monitor

5. Muting Mode Note


Switch Muting Mode by pressing Muting Button. When in normal recording mode, the indicator light turns green; When in muting mode, the indicator light turns red.

When replaying recorded audio or video with phone, muting mode should be turned on to avoid the influence of microphone real-time sound

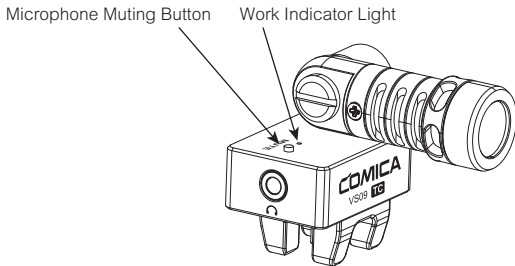


Specification

Polar Pattern

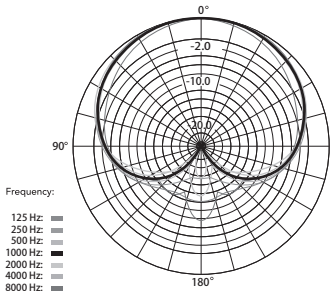

Frequency Response

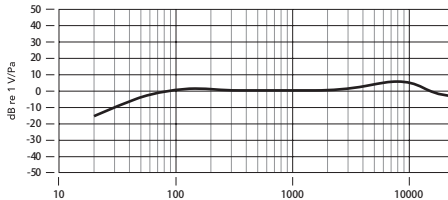

Product Features

Polar Pattern	Cardioid
Frequency Response	60Hz~20kHz
Signal/Noise	>70dB
Max SPL	>100dB
Output Connection	TYPE-C USB2.0
Monitor Connection	3.5mm
Sample Rates	48kHz/44.1kHz
Bit Depth	16-bit
OS Requirements	Android 5.0 and higher
Dimension	38x71x53mm
Net Weight	36g
Working Temperature	0°C~50°C



www.comica-audio.com

The COMICA LOGO is trademark which is registered and owned by Commlite Technology Co.,Ltd

Email: support@comica-audio.com