



QUICK INSTALLATION GUIDE:

1. Remove existing faucet aerator by turning counter-clockwise. Use the "Hexnut" Wrench, pliers, or vice grips if it is tight (FIG. A).
2. After aerator is removed, ensure that the rubber washer from existing aerator is removed. If the washer is not in the lip of the existing aerator, it should be inside the water exit of the existing faucet.
3. Before installing the EZ Faucet, check if your faucet exit has *Inside Thread* (male adaptor) or *Outside Thread* (female adaptor) type. Male adaptor type: Insert the Rubber Washer that comes with package into the Adaptor (FIG. C1). Female adaptor type: Do not use any rubber washer (FIG. C2).
4. Install EZ Faucet by turning the EZ Faucet Adaptor clockwise to attach to the faucet (first use fingers to tighten, then use included "Hexnut" Wrench (FIG. D) for a final snug fit).
5. Remove EZ Faucet battery cover (see No.2 in Changing Battery section) and insert 4 new AAA Batteries (make sure batteries are inserted in the correct directions (+ and -) as indicated in the battery holder) (FIG. B).
6. Press and hold the Reset Button down for 3 seconds to adjust the sensor range automatically. EZ Faucet is ready for use after turning the faucet handles to ON position (adjust and check the water temperature properly before use - see Setting Water Temperature and Flow Rate section) (FIG. E).

If you encounter problems during installation, please call **1.650.578.0578** or visit our website at <http://www.ezfaucet.com>.

OPERATING INSTRUCTIONS:

Program the Sensor Range / Reset the EZ Faucet: (FIG. E)

1. Turn the Faucet handles to OFF position.
2. Press and hold the Reset Button for 3 seconds until the green light flashes and then release the button.
3. Wait Until the green flashing light stops. Sensor range/EZ Faucet is set and ready for use after turning the faucet handles to ON position (adjust and check the water temperature properly before use - see Setting Water Temperature and Flow Rate section).

Note: *If the sensor is too sensitive, try putting your hand 3"- 5" below the sensor while programming the sensor range. This will shorten the sensor range.*

Setting Water Temperature and Flow Rate:

1. Turn faucet handles to COLD position.
2. Press Manual Override Button once (FIG. E).
3. While the water is running, move existing faucet handles to adjust water temperature and flow rate.
4. After water temperature and flow rate is set, press Manual Override to turn off the water. Automatic feature is resumed.

Low Battery Indicator:

It is optimal to use 4 Alkaline batteries with the same brand. They will last longer and keep your EZ Faucet at best performance. Approximately 1 to 2 weeks before the batteries drain completely, the orange POWER LOW indicator will begin to flash. Change all batteries as soon as possible. (see Changing Battery section).

Changing the Batteries:

1. Turn the faucet handle to OFF position.
2. Remove the battery holder by pulling the battery holder out of the compartment.
3. Take the 4 batteries out one-by-one and replace with new batteries (make sure to put batteries in correct directions).
4. Close battery holder by pushing the battery holder into the compartment until it is firm. Then adjust the sensor range (see Program the Sensor Range section).

iTouchless®

EZ FAUCET

TOUCH FREE ADAPTOR®

USER MANUAL

EZF003C

Problem or Damaged Package? DO NOT RETURN TO STORE
Contact us on www.iTouchless.com/contacts/ or call 1-650-578-0578 for instructions.

FIG. A

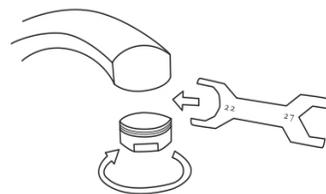


FIG. B

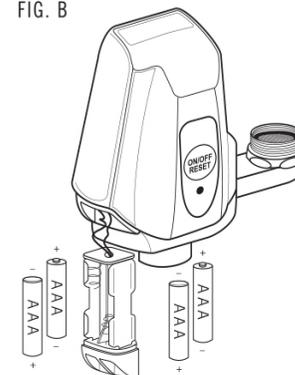


FIG. C1



FIG. C2



FIG. D



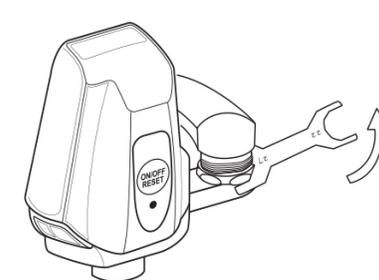


FIG. E

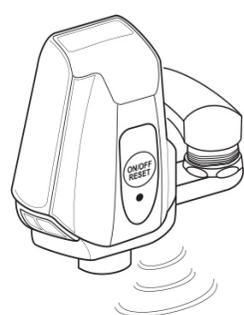

ATTENTION:

1. Warning! Water may be hot from last use! If you are not sure about the water temperature, always turn the faucet handles to COLD position (See Setting Water Temperature and Flow Rate section).
2. If water is leaking at the connection between the EZ Faucet and faucet head after installation, check if you put in the correct rubber washer (see No. 3 in Quick Installation Guide and Troubleshooting FAQs sections).
3. Keep the EZ Faucet surface clean and dry. DO NOT WASH, clean with damp towel. Never immerse unit in water or any other liquid.
4. Make sure each battery is put in the correct direction.
5. Water stops flowing after 1 minute when an object is kept in the sensor area. A BLOCK Indicator (green light) will flash signaling you to remove object from the sensor area.
6. Dark colored or transparent objects are not easily detected. Press Manual Override button for manual operation when objects are not detected.
7. Do not obstruct water flow drainage when EZ Faucet is unattended. During extended absence from premise, it is best to turn the faucet handles to the “off” position (turn water tap off).
8. If the EZ Faucet keeps turning on by itself even after adjusting the sensor range manually (see Program the Sensor Range section), press and hold the Reset button for 3 seconds to reset the EZ Faucet.
9. If EZ Faucet malfunctions, press and hold the Reset button for 3 seconds to reset. If this fails, remove and reinsert all batteries to reset the unit.

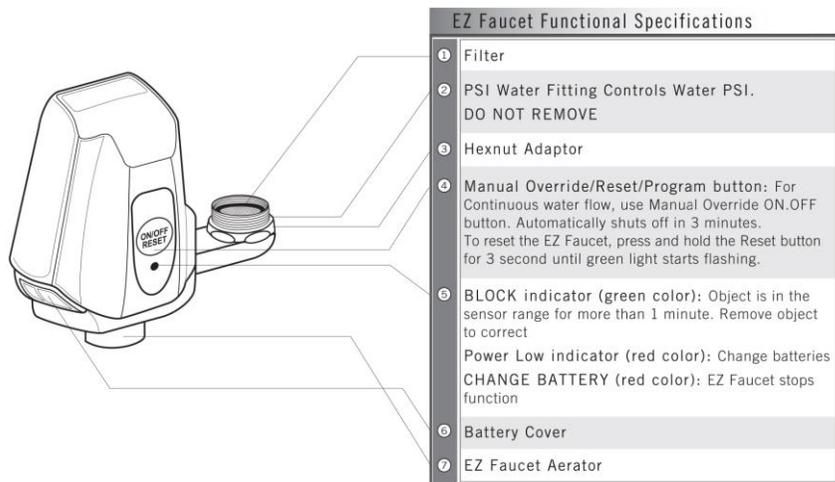

TROUBLESHOOTING Q & A

Q: I just installed the EZ Faucet and it's ready to use, but the water keeps running and won't stop.
A: The control valve inside the EZ Faucet may be too dry. Let water run for 3 minutes and then turn the water off. After 20 minutes, press and hold the Reset button for 3 seconds to reset the EZ Faucet (See Reset the EZ Faucet section). Turn the faucet handles to “on” position. The EZ Faucet is ready for use. If it fails, repeat the steps to lubricate the control valve.

Q: Why isn't the EZ Faucet working?
A: Always use 4 new AAA batteries with the same brand name (Alkaline batteries preferred). Ensure that all 4 batteries have been inserted facing the correct direction (+ and -) as indicated in the battery compartment. Also check and ensure the batteries are snapped firmly into place.

Q: I have attached the EZ Faucet unit to my faucet. However, when I turn on the tap, water is spraying out at the connection. How do I fix this?
A: You may have a poor connection if you did not use the included black Rubber Washer (see No. 3 in Quick Installation Guide section). Remove the unit and try inserting the Rubber Washer. Every faucet is different, so you have to take some time to make the best adjustment for yours. Tightening the Adaptor with the included “Hexnut” Wrench may also be needed.

Q: The EZ Faucet sensor is too sensitive. How do I adjust this?
A: You can adjust the detecting range of the sensor that activates the EZ Faucet. If your basin is shiny or the plug is bright silver in color, the sensor will pick up movement off of these reflections. Please see Program the Sensor Range section under “Operating Instructions”.

Q: I am unable to remove the current existing aerator from the faucet or I am unable to tighten the EZ Faucet. What should I do?
A: If you are having difficulties removing the existing aerator, please first ensure that it actually can be removed. Although this piece is removable in all standard faucets, there may be a few that function differently. Also check if you are removing the aerator correctly (usually by turning counter-clockwise). If the aerator is too tight, remove it by using the “Hexnut” Wrench, pliers or vice grips. Wrap a cloth between the faucet and the tool; this will avoid harmful scratches for which the manufacturer is not liable. To tighten the EZ Faucet, turn the EZ Faucet Hexnut Adaptor clockwise by fingers first, and then firmly tightening it with the included “Hexnut” Wrench.

Q: I am experiencing intermittent fluctuations in water flow from my EZ Faucet; Any Suggestions?
A: Water flow fluctuations could be due to normal changes in water pressure at different times of the day in so residential areas. Turn the faucet handles to the OFF position and let it stand for a few minutes. The EZ Faucet will reset itself. You can also reduce water flow to the unit by adjusting the faucet handles (see Setting Water Temperature and Flow Rate section). If EZ Faucet continues to malfunction, remove and reinsert batteries to reset.

Q: I have a problem I cannot resolve.
A: Please call 1.650.578.0578 for customer service.

PRODUCT WARRANTY

ONE (1) YEAR LIMITED WARRANTY

EZ faucet is distributed by iTouchless Housewares & Products, Inc. (iTouchless) with the highest quality components and most advanced technologies available. The EZ Faucet is warranted to be free from defects in material and workmanship. Given normal use and care, for 365 days from the date of the original purchase with proof of purchase within the United States and Canada. iTouchless will only honor warranty requests from orders placed with our authorized dealers. Items sold as used, floor samples or refinished are sold solely under the terms and conditons of the selling party; iTouchless will not warrant such purchases. iTouchless will repair or replace a working condition EZ Faucet thereof which fails as the result of such a defect during the warranty period.

The warranty is the customers' exclusive remedy for product defect and does not apply to:

- **User Modification**
- **Attachments to product by user that causes damage**
- **Any product on which the seals and/or serial numbers have been broken, removed, tampered.**
- **Damage caused by abuse, misuse, accident, water or theft.**

Except as stated above, iTouchless makes no expressed or implied warranties as to any product in particular, makes no warranty of merchantability of fitness for any particular purpose. iTouchless shall not be liable for consequential or incidental damages arising from any product disclaims all warranties not satisfied in this limited warranty. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty.

If EZ Faucet should fail during the warranty period, contact us through <http://www.ezfaucet.com> to request a Repair #. Remember to return package FREIGHT PREPAID by an insured carrier such as UPS and include a check for the return postage along with authorized repair #. Please refer to the warranty email provided by iTouchless for details. All warranty fees (including return postage) are subject to location, and fee references are as follows: for Contiguous 48 U.S. States \$9.95 and up, for Alaska and Hawaii \$29.95 and up, for Canada \$19.95 and up. iTouchless will not cover any warranty service postage fee.

Return Address:
iTouchless Housewares & Products, Inc.
23497 Eichler Street, Unit A, Hayward, CA 94545, USA
Attn: Product Return Repair # _____

Subject to the above conditions, we will repair or ship you a working unit within 30 working days after receipt. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and province to province. For more information, please visit our website at www.ezfaucet.com.

Thank you for purchasing the EZ Faucet®!